



The Intelligent Surveillance Solution

NAS NVRmini
User Manual

Table of Contents

1.	Installation.....	3
1.1	Installation Process	3
1.2	LED Status Definitions	12
2.	Settings.....	13
2.1	Camera Setup.....	13
2.1.1	Add Cameras by Camera Search.....	13
2.1.2	Add Cameras Manually	15
2.1.3	Modify Camera Information	17
2.1.4	Modify Camera Parameters.....	17
2.1.5	Set up Lens Settings.....	18
2.1.6	Set up 2nd Stream.....	19
2.1.7	View Camera Status	20
2.2	Recording & Event Setup.....	21
2.2.1	Recording Mode Setup.....	21
2.2.2	Recording Schedule / Event Setup.....	21
2.2.3	Camera Events and Responding Actions Setup	26
2.2.4	I/O Box Input and Responding Action Setup.....	28
2.2.5	System Events and Responding Actions Setup.....	30
2.2.6	SMTP Server Setup.....	31
2.2.7	Add Event Contacts	32
2.3	RAID & File Settings	33
2.3.1	View RAID Volume Status	33
2.3.2	View Disk Drive Information.....	33
2.3.3	Migrate a RAID Volume	34
2.3.4	Create a RAID Volume	35
2.3.5	Designate a Spare Drive.....	36
2.3.6	Delete a RAID Volume.....	37
2.3.7	Recover	38
2.3.8	View Protocol Status.....	38
2.3.9	Modify the “My Network Places” Protocol Settings	38
2.3.10	Modify the FTP Protocol Settings	39
2.4	Auto Backup.....	40
2.4.1	Set up Backup Schedule	40
2.4.2	Set up Backup Server.....	41
2.5	Network Setup	42
2.5.1	View Network Status.....	42
2.5.2	Network Settings	43

2.5.3	Auto Port-Forwarding.....	45
2.5.4	Network Service Setup	47
2.5.5	CMS Service Setup	48
2.6	Management	49
2.6.1	View the List of Users	49
2.6.2	Create New Users	49
2.6.3	Modify User Information.....	50
2.6.4	Change a User's Password	51
2.6.5	Delete Users.....	51
2.6.6	Online License Activation.....	52
2.6.7	Offline License Activation.....	53
2.6.8	View the Event Log.....	55
2.6.9	Save Unit Configuration.....	55
2.6.10	Load Unit Configuration / Default Settings.....	56
2.7	System	58
2.7.1	View System Information	58
2.7.2	View Enclosure Information	58
2.7.3	Upgrade the System.....	59
2.7.4	System Date and Time Setup	60
2.7.5	Daylight Saving Time Setup.....	61
2.7.6	Enable and Disable the Buzzer	61
2.7.7	View UPS Status.....	62
2.7.8	UPS Setup.....	63
2.7.9	Auto Power On	63
2.7.10	Restart the Unit.....	64
2.7.11	Shut Down the Unit	65
3.	POS.....	66
3.1	Introduction	66
3.1.1	System Introduction.....	66
3.1.2	Hardware Installation – SCB-C31A.....	67
3.1.3	Software Installation – SCB-C31A.....	68
3.1.4	Connection via TCP Client.....	70
3.2	Software Setup.....	70
3.2.1	Activate POS License.....	70
3.2.2	NVR POS Setting	70
3.2.3	Insert POS Setting.....	72
3.2.4	Delete POS Device.....	74
3.2.5	Configure POS Setting	74

3.3	Tag Filter	74
3.3.1	Add New Tag Filter	74
3.3.2	Edit Tag Filter	78
3.3.3	Delete Tag Filter.....	78
3.3.4	Import/Export Tag Filter	78
3.4	POS Display Font	78
3.4.1	Live View	78
3.4.2	Remote Live Viewer.....	79
3.4.3	Playback	80
3.4.4	Playback System	81
3.5	POS Transaction Data Search	82
3.5.1	Search POS Transaction Data through Playback	83
3.5.2	Search POS Transaction Data through Playback System ...	84
3.6	Playback Video with POS Data	84
3.6.1	Select Period by POS Search.....	84
3.6.2	Select Period by Data & Time through Playback	85
3.6.3	Select Period by Data & Time through Playback System	85
3.7	Backup Video with POS Data.....	85
3.7.1	Backup through Internet Explorer	86
3.7.2	Backup through Playback System	86
3.7.3	Backup through Backup System.....	87
4.	I/O.....	88
4.1	Introduction	88
4.1.1	System Introduction	88
4.1.2	HW Installation.....	88
4.1.3	Software Installation – SCB-C31	89
4.1.4	Software Installation – SCB-C24/26/28	90
4.2	Software Setup.....	92
4.2.1	Add I/O Box	92
4.2.2	Modify I/O Box Information	93
4.2.3	I/O Pin Setting	93
4.3	Relative Configuration and Application.....	94
4.3.1	Record on Input Trigger	94
4.3.2	Input and Responding Actions	94
4.3.3	I/O Control Panel in Live View	94
5.	Live view.....	95
5.1	Internet Explorer	95
5.1.1	Live View Control Panel.....	95

5.1.2	Live View Setting	98
5.1.3	General Setting.....	99
5.1.4	Stream Profile Setting	99
5.1.5	OSD (On-screen display) Setting	100
5.1.6	Monitor Display Setting.....	101
5.1.7	Notification.....	102
5.1.8	Set up Joystick Control	103
5.1.9	Set up Live View Sound on Event.....	104
5.2	Remote Live Viewer Application.....	105
5.2.1	Remote Live Viewer Application Control Panel.....	105
5.2.2	Unit Connection Setting	108
5.2.3	General Setting.....	109
5.2.4	Camera Group Setting.....	110
5.2.5	Delete/ Rename Camera Groups	111
5.2.6	Stream Profile Setting.....	111
5.2.7	OSD (On-screen display) Setting	112
5.2.8	Monitor Display Setting.....	113
5.2.9	Notification.....	114
5.2.10	Set up Joystick Control.....	115
5.2.11	Set up Live View Sound on Event	116
5.2.12	Set up Remote Live Viewer	117
6.	E-Map	118
6.1	Internet Explorer	118
6.1.1	E-Map Control Panel	118
6.1.2	Add Map	119
6.1.3	Edit Map	120
6.1.4	Delete Map	120
6.1.5	Add/Rotate Device Indicator	121
6.1.6	Delete Device Indicator.....	121
6.1.7	Layout Adjustment	121
6.1.8	Relative Configuration and Application	122
6.2	Remote Live Viewer Application.....	122
6.2.1	E-Map Control Panel	122
7.	Playback	123
7.1	Internet Explorer	123
7.1.1	Playback Control Panel	123
7.1.2	Search the Recorded Video.....	125
7.1.3	Play the Recorded Video	127

7.1.4	Intelligent Search	127
7.1.5	Recorded Video Enhancement	128
7.1.6	Save a Video	129
7.1.7	Save an Image	131
7.1.8	Print an Image	131
7.1.9	Backup the Recorded Video	132
7.2	Remote Playback System Application	134
7.2.1	Playback System Application Control Panel	134
7.2.2	Set up Unit Connections	134
7.2.3	Search the Recorded Video	136
7.2.4	Play the Recorded Video	136
7.2.5	Intelligent Search	137
7.2.6	Recorded Video Enhancement	138
7.2.7	Save a Video	139
7.2.8	Save an Image	139
7.2.9	Print an Image	140
7.2.10	Backup the Recorded Video	140
8.	Backup and Delete Records	142
8.1	The Backup System Application	142
8.2	Backup the Recorded Video through Windows Explorer	145
8.3	Backup the Recorded Video through FTP	145
8.4	Playback the Backup Records	146
8.4.1	With Playback Application	146
8.4.2	Without Playback Application	146
8.5	Delete the Recorded Video	146
8.5.1	With Backup Application	146
8.5.2	Without Backup Application	149
9.	Verification Tool	150
9.1	Execute Verification Tool	150
9.2	Verify Image / Video	151
10.	External Storage	152
10.1	Create a Volume on DAS	152
10.2	Create an External Storage on NAS	152
11.	Log out	154
12.	Remote PC System Requirements	155
13.	Troubleshooting	156
13.1	Check the System Status LED	156
13.2	Check Disk Status LEDs	156

13.3	Replace a Failed Disk Drive.....	156
13.4	Check RAID Volume Status	157
13.5	Respond to a Critical RAID Volume	157
13.6	Respond to an Invalid RAID Volume.....	157
13.7	Check File System Status	158
13.8	Rebuild the File System	158
13.9	Check Enclosure Status.....	159
13.10	Restore the Default Administrator's Password	159
13.11	Restore All Default Configuration.....	160
13.12	Install ActiveX	160
13.13	Upgrade Process When Using Windows Vista	161
13.14	Cannot Playback When Applying Windows 2000	163
13.15	Cannot Log in to the Unit with Internet Explorer	163
13.16	UAC on Windows Vista.....	163
13.16.1	Turn off UAC on Windows Vista	163
13.16.2	Enable Privilege Level of Internet Explorer.....	166
13.17	Install Wizard Issue on Windows Vista	167
13.17.1	FW Upgrade	167
13.17.2	Workaround.....	167
Appendix – RAID System		168
Introduction to RAID		168
RAID 0 – Stripe		168
RAID 1 – Mirror.....		169
RAID 5 – Block Striping with Distributed Parity		170
RAID 10 – Mirror / Stripe.....		171
Choosing a RAID Level		171
Spare Drives		173
Automatic Rebuilding.....		173
RAID Volume Migration		174
Appendix – Camera Integration		176
Camera Supporting List		176
Camera Search Tool		176
Stream Profile		176

GNU General Public License

This product includes copyrighted third-party software licensed under the terms of the GNU General Public License. Please see the GNU General Public License (GPL) for the exact terms and conditions of this license at www.gnu.org. The GPL source code incorporated into the product is available for free download at our web site <http://www.nuuo.com/>.

Subject to GPL, you may re-use, re-distribute and modify the GPL source code.

Note that with respect solely to the GPL Software, no warranty is provided. We do not offer direct support for the distribution.

1. Installation

1.1 Installation Process

Step 1: Unpacking the Unit

This package contains the following items:

- The unit
- Quick Start Guide
- Screws for disk drives (1 package)
- Power cord
- Warranty card
- 12V DC power transformer (2 bay unit)
- CD with **Install Wizard**, **Backup**, **Live View**, **Playback**, and **Offline Tool** application, user manual, and quick start guide

Warning




The electronic components within the unit are sensitive to damage from Electro-Static Discharge (ESD). Please take precautions at all times when handling the unit or its sub-assemblies.

Important




To configure the unit, you must install the software onto a desktop/ laptop running Windows XP-SP3, 2003-SP2, Vista-SP2, Windows 7.


2 bay unit front view

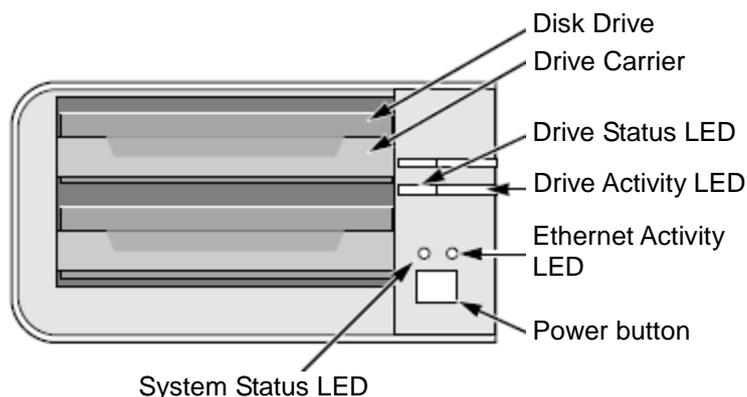


2 bay unit rear view

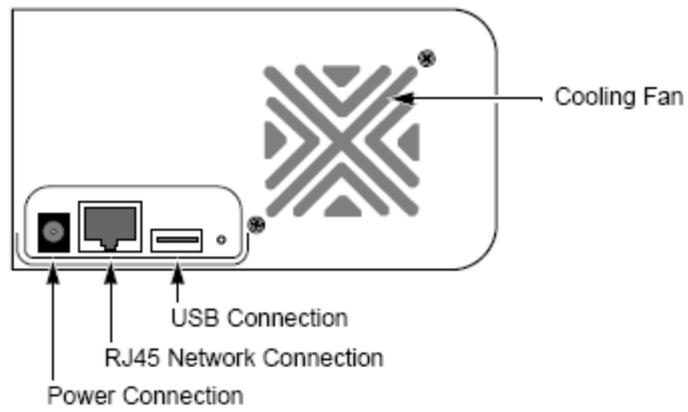


4 bay unit front view

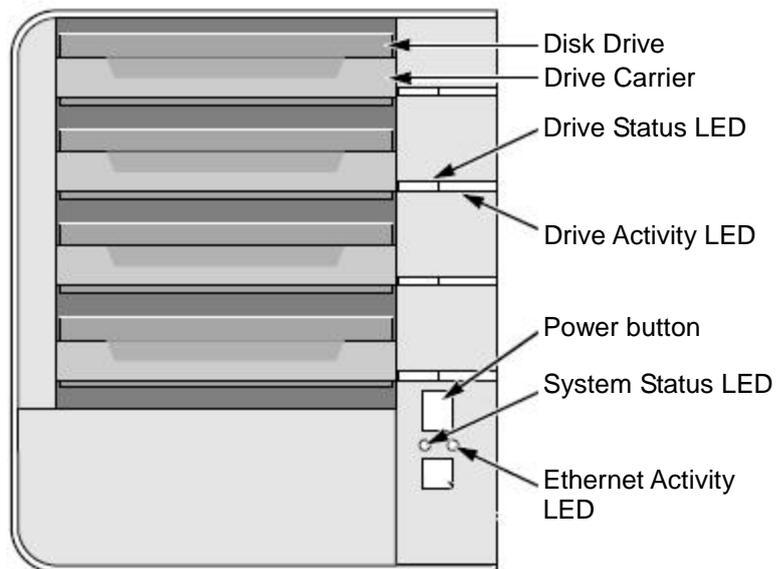


4 bay unit rear view

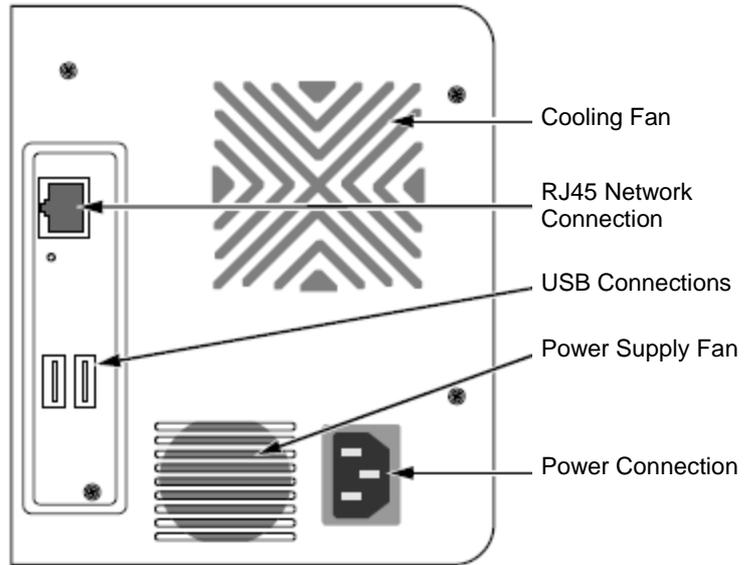

4 bay unit front view (S-series)

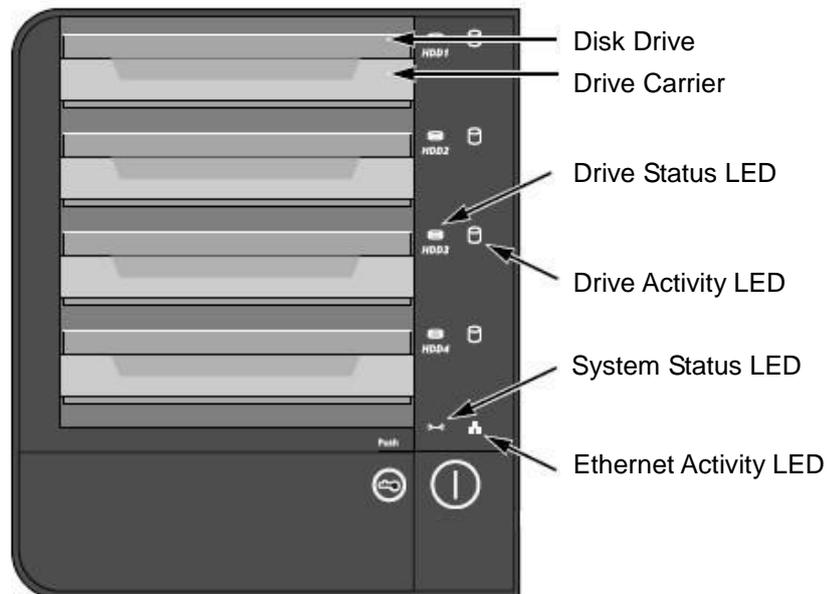

4 bay unit rear view (S-series)

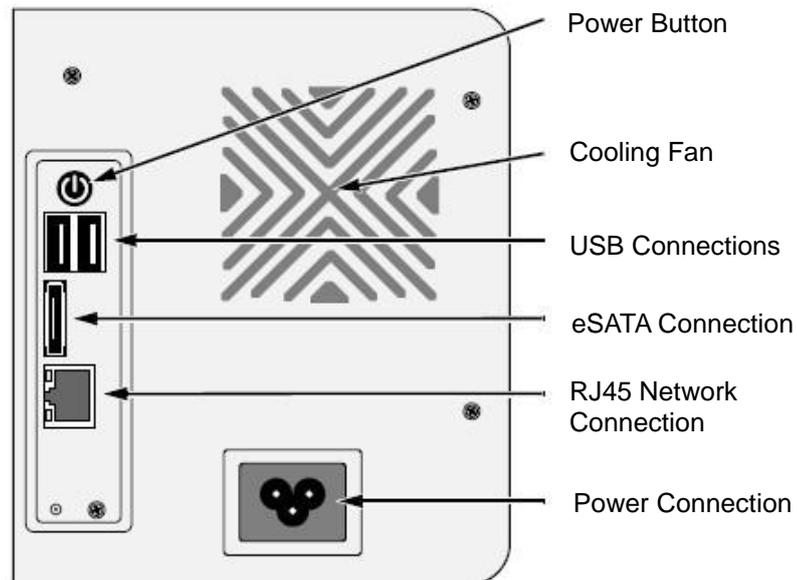

Step 2: Disk Drive Installation

You can populate this unit with SATA 1.5 Gb/s or 3.0 Gb/s disk drives. For optimal performance, install disk drives of the same model and capacity. Your disk drives will become a RAID Volume on this unit.

1. Open the lid on the front of the unit enclosure.
2. Pull a disk drive carrier from the enclosure. See the front view figure.
3. Carefully lay the disk drive into the drive carrier, making the screw holes on the sides of the carrier align with the screw holes in the drive.
4. Insert the screws through the holes in the drive carrier and into the sides of the disk drive.
 - Install only the counter-sink screws supplied with the unit.
 - Install four screws per disk drive.
 - Tighten each screw until snug. Be careful not to over-tighten.
5. Reinstall the drive carrier into the unit enclosure.
6. Repeat step 2 through 5 for the other disk drive.
7. Close the lid on the front of the unit.

Step 3: Connecting to the Network

1. Attach one end of the network cable to the RJ45 network connection. See the rear view figure.
2. Attach the other end of the network cable to your Ethernet hub or switch.

Important



If there are multiple networks at your facility, note the network to which you connect the unit. You will need this information during the setup process.

Step 4: Connecting the Power

1. Attach the power cord from the power source to the power adapter.
2. Connect the power adapter to the back of the unit enclosure. See the rear view figure.
3. On the front of the unit, press the power button. See the front view figure.

It takes about a minute for the unit to fully power up. After power-up:

- The System Status LED turns green. See the front view figure.
- The buzzer beeps one time.


Step 5: Software Installation

1. Insert the CD into your CDROM.
2. Double-click **Setup.exe** to begin installation.
3. Click the **Next** button to go on installation.
4. Click the **“I accept the terms of the license agreement”** option, and then click the **Next** button.
5. Insert your **“User Name”** and **“Company Name”** then click the **Next** button.
6. Select the setup type, and then click the **Next** button.
7. Click the **Install** button to proceed with installation.
8. When above-mentioned installation processes are finished, a final installation screen appears. Click the **Finish** button to close the installer.


Step 6: Setting up the Unit

The software **Install Wizard** performs the setup procedures on your unit. After the procedure, you can begin using this unit.


1. Startup > NUUO NVRmini > Install Wizard.
2. This program will show the default language setting and initiation mode.
3. Choose preferred language and initiation mode, and then click the **Next** button.

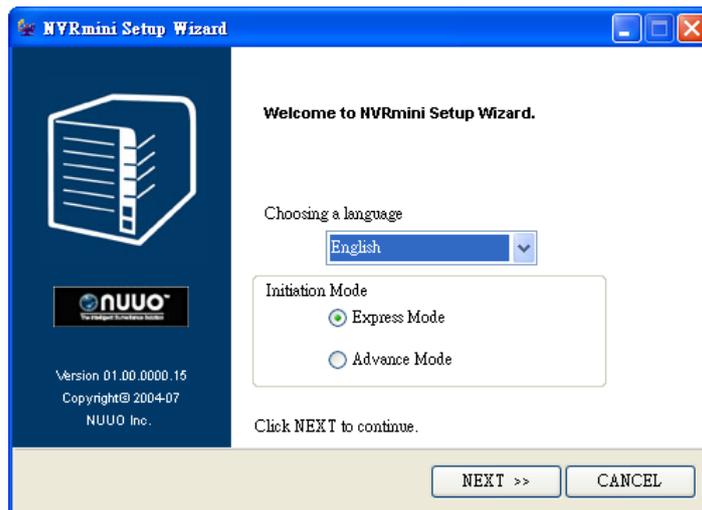

- **Express Mode:** you don't need to set the date, time, network settings, and RAID level. (After step 5, jump to step 9 directly.)
 - **Advance Mode:** you need to set your specific date, time, and network settings.
4. **Install Wizard** program will search all the units on the Internet right now. Choose one of them, and then click the **Next** button.

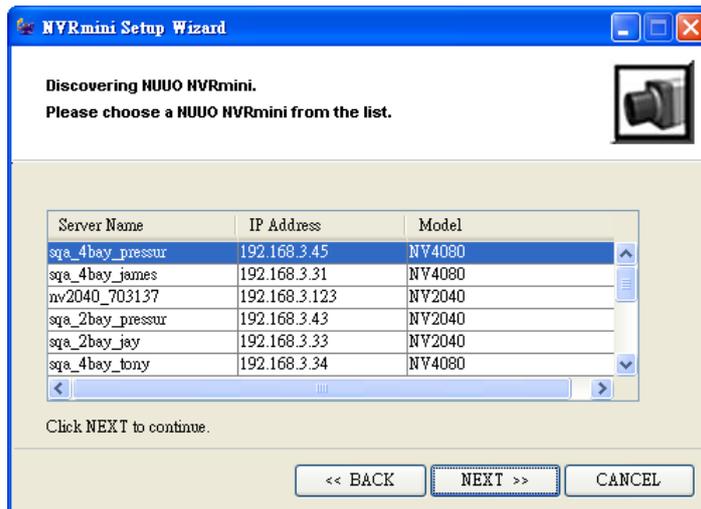

5. Enter your password, and then click the **OK** button.

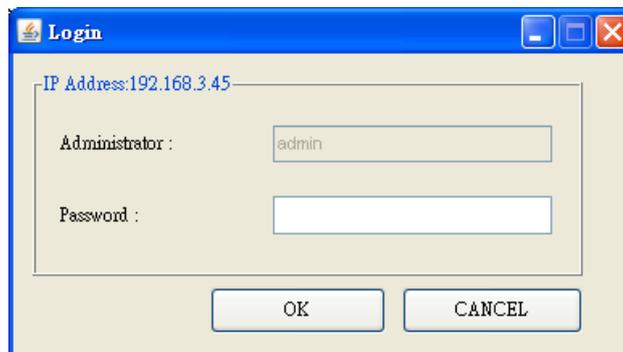


Note




The default Administrator password is “admin”.

6. Set the time zone, date, and time, and then click the **Next** button.

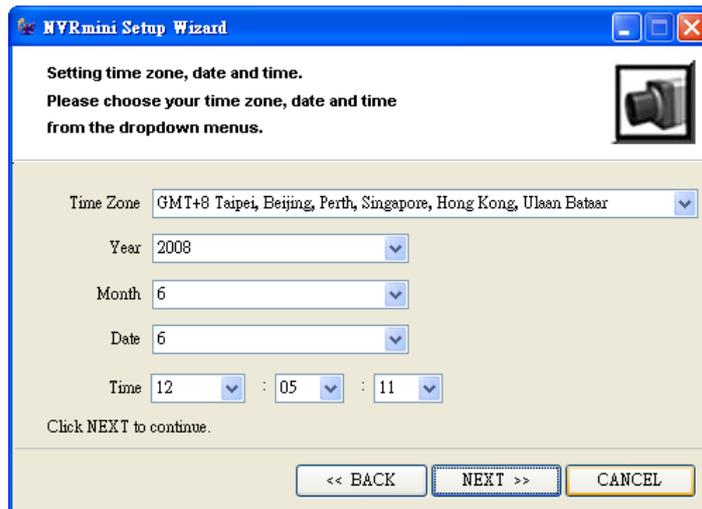


7. Choose the network settings, and then click the **Next** button.

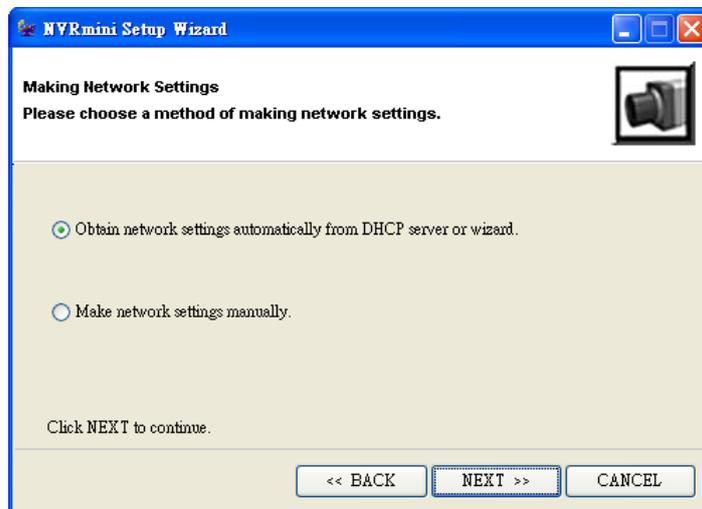


- **Obtain network settings automatically from DHCP server or wizard:** apply settings (such as IP, net mask, gateway, DNS) which are automatically generated by the DHCP server.
- **Make network settings manually:** individually select your specific settings.

8. If you need to set a new disk(s), check the “**Create new storage**” option. After checking, click the **Next** button.

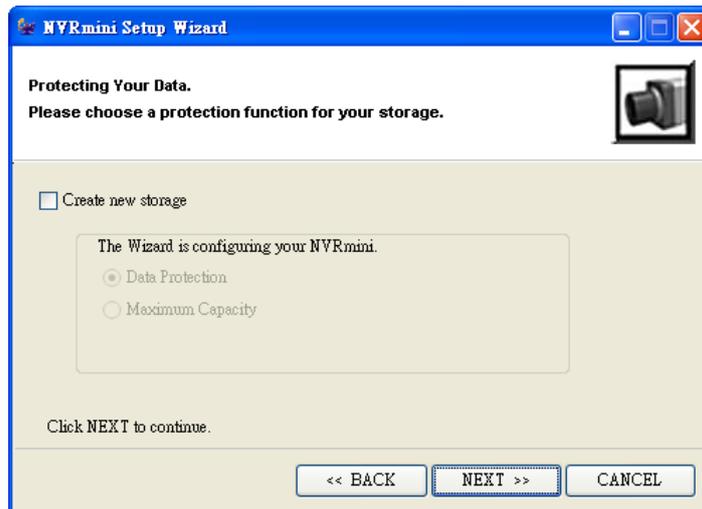

- **Data Protection:** set the RAID level to RAID 1 (2 bay). Set the RAID level to RAID 5 (4 bay).
- **Maximum Capacity:** set the RAID level to RAID 0 (2 bay). Set the RAID level to RAID 0 (4 bay).

9. Review your settings. If the settings are correct, click the **Finish** button to finish the settings selection process.

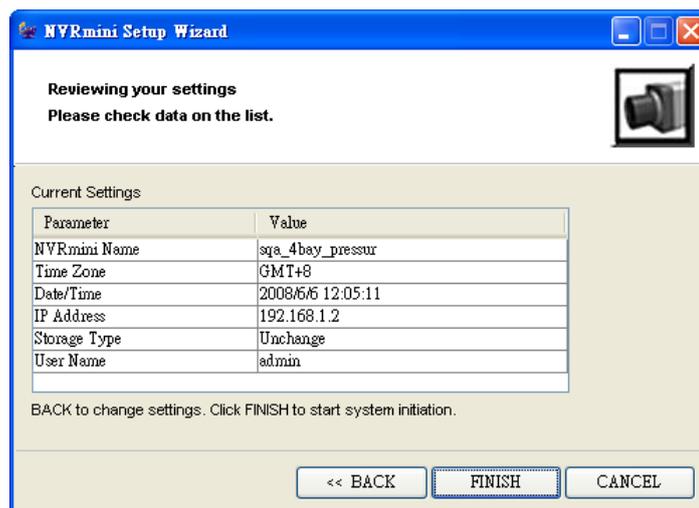

Caution



Once you have finished the setting selection process, the unit will start working. In order to assure the stability of the unit, do not pull any disks out when the system is running.

1.2 LED Status Definitions

- **System Status LED**

	Green	Red	Amber
Definition	Healthy	Fail	Critical

- **Drive Status LED**

	Green	Red	Amber	Dark
Definition	Healthy	Fail	Rebuilding	Without disk

- **Drive Activity LED**

	Blink	No blink
Definition	Activity	No activity

- **Ethernet Activity LED**

	Green	Blink
Definition	Link	Accessing

2. Settings

After setting up the unit, log in to the system by entering its IP address in the browser (Internet Explorer 7 or above). When connecting, choose your language, enter the user name and password, and then begin using this system.



There are five main functions of this unit: settings, live view, playback, help, and logout. They will be shown on the top of the page.

2.1 Camera Setup

2.1.1 Add Cameras by Camera Search

The function enables user to automatically search and add cameras in the same network. There are two search mechanisms, one is UPnP, another is **camera search tool**. Before searching UPnP cameras, make sure that the cameras possess UPnP function.


1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera/ Camera Settings**.
3. Click the **Camera Search** tab.
4. Click the **Search** button.



- The system will list all the currently available cameras. The inserted cameras are shown in blue. Click the  icon to add a camera into your camera list.



- After clicking the  icon, the camera setting page will pop up. Click the item to which you want to add a camera.
- Insert the camera name, user name, and password.

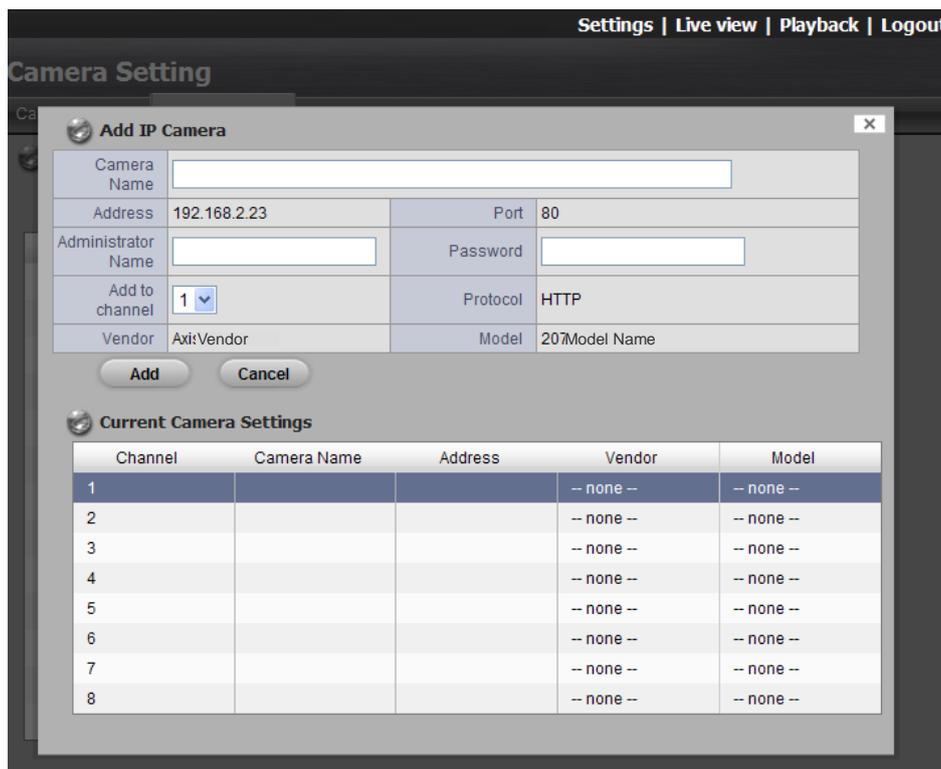

Note



Some cameras will limit the login authority to the administrator. In this condition, you need to change the user name and password to the administrator's to log in to those cameras.

8. Click the **Add** button to add it.
9. After clicking the **Add** button, the updated camera list will be displayed in the **Camera Setting** tab.

Channel	Camera Name	Address	Port	Vendor	Model
1	Location 1	192.168.1.192	80	Vendor	Model
2			80	-- none --	-- none --
3			80	-- none --	-- none --
4			80	-- none --	-- none --
5			80	-- none --	-- none --
6			80	-- none --	-- none --
7			80	-- none --	-- none --
8			80	-- none --	-- none --

10. Repeat steps 5 through 8 to add other cameras to your list.

2.1.2 Add Cameras Manually

1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera / Camera Settings**.
3. Click the **Camera Settings** tab, and the camera list will be displayed on the bottom of the page.
4. Click the item to which you want to add a camera.

Index	Camera Name	Address	Port	Vendor	Model
1			80	-- none --	-- none --
2			80	-- none --	-- none --
3			80	-- none --	-- none --
4			80	-- none --	-- none --
5			80	-- none --	-- none --
6			80	-- none --	-- none --
7			80	-- none --	-- none --
8			80	-- none --	-- none --

5. Enter the camera's information.

Camera Settings

Camera Settings | Camera Search

Camera Settings

Camera Name:

Address: Port:

Administrator Name: Password:

Video Channel: Protocol: TCP UDP HTTP

Vendor: Model:

Save Reset Clear Auto Detection

- **Camera name:** The name of the camera.
- **Address:** The IP address.
- **Port:** The transmission port.
- **User name:** Login user name.
- **Password:** Login password.
- **Camera Channel:** Select the number of analog cameras supported by one video server from the list.
- **Protocol:** Data transmission protocol.
- **Vendor:** Camera vendor name.
- **Model:** Camera model name.

Note



Some cameras will limit the login authority to the administrator only. In this condition, you need to change the username and password to the administrator's to log in to those cameras.


6. Click the **Save** button.

- **Save:** Save the information of this camera.
- **Reset:** Return to the latest saved settings of the selected camera.
- **Clear:** Set all the settings to default value.
- **Auto Detection:** After inserting IP address, port, user name, and password, click this button to automatically detect all of this camera's information. (such as Channel, Protocol, Vendor, and Model)

7. Repeat steps 4 through 6 to add other cameras into your list.

2.1.3 Modify Camera Information

1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera / Camera Settings**.
3. Click the **Camera Settings** tab.
4. Click the camera which you want to modify.
5. Modify the information of this camera.

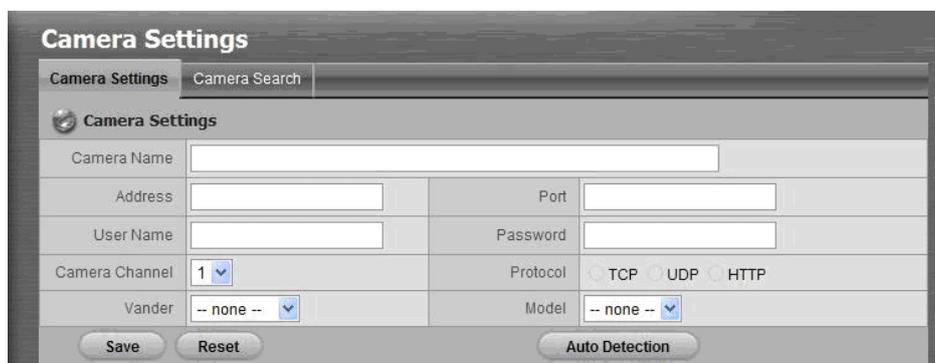

The screenshot shows the 'Camera Settings' web interface. It features a title bar with 'Camera Settings' and 'Camera Search' tabs. Below the title bar is a 'Camera Settings' section with a camera icon. The form contains several fields: 'Camera Name' (text input), 'Address' (text input), 'Port' (text input), 'User Name' (text input), 'Password' (text input), 'Camera Channel' (dropdown menu with '1' selected), 'Protocol' (radio buttons for TCP, UDP, and HTTP), 'Vander' (dropdown menu with '-- none --' selected), and 'Model' (dropdown menu with '-- none --' selected). At the bottom of the form are three buttons: 'Save', 'Reset', and 'Auto Detection'.

6. Click the **Save** button.
7. If you want to replace a camera, click that camera, modify its address, port, user name, and password, and then click the **Save** button.

2.1.4 Modify Camera Parameters

1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera / Camera Parameters**.
3. Click the **Camera Parameter** tab.
4. Click the camera which you want to modify in the camera list.
5. Modify the information of this camera.
6. Click the **Save** button.



The screenshot shows the 'Camera Parameter' web interface. It features a title bar with 'Camera Parameter', 'Lens Settings', and '2nd Stream Settings' tabs. Below the title bar is a 'Camera Parameter' section with a camera icon. The form contains several fields: 'Camera Name' (text input with 'Location1'), 'Video Format' (radio buttons for Motion JPEG, MPEG4, and H.264, with Motion JPEG selected), 'Frame Rate' (dropdown menu with '1fps'), 'Resolution' (dropdown menu with '720x576'), 'Quality' (dropdown menu with 'High'), and 'Audio' (checkbox for 'Enable Audio'). At the bottom of the form are two buttons: 'Save' and 'Reset'.

- **Camera Name:** The name of the camera.
- **Video Format:** Select the type of format which this camera supports.
- **Frame rate:** Choose the frame rate of the camera.
- **Resolution:** Choose the resolution of the camera.
- **Quality:** Choose the image quality of the camera.
- **Audio:** Check the **Enable Audio** option to view and enable audio recording.

Note



If the selected frame rate is higher than the camera's maximum frame rate, the system will automatically adjust the frame rate downward to the maximum.

2.1.5 Set up Lens Settings

1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera / Camera Parameters**.
3. Click the **Lens Settings** tab.
4. Click the camera which you want to modify in the camera list.
5. Modify the information of this camera.
6. Click the **Save** button.

The screenshot shows the 'Camera Parameter' web interface. The 'Lens Settings' tab is active, displaying the following configuration for 'Location 1 (immervision lens)':

- Camera Name: Location 1 (immervision lens)
- Lens Type: ImmerVision IMV1-1/3
- Lens: Enable Disable
- Camera Position: Wall

A 'Save' button is located below the settings. Below the settings is a 'Camera List' table with the following data:

No.	Camera Name	ImmerVision Lens	Camera Position
1	Location 1 (immervision lens)	Enable	Wall
2	Location 2	Disable	-- none --
3	Location 3 (Vivotek FE8171)	Enable	Ceiling
4		Disable	-- none --

- **Camera Name:** The name of the camera.
- **Lens Type:** There are two types of lens currently, ImmerVision and Vivotek (FE8171V). You are not allowed to select type so far, type

depends on camera model.

- **Lens**: Enable or disable lens function.
- **Camera Position**: Choose the position of the camera.

Note



If users enable the lens while lens is not installed correctly or not even installed, a warning message will pop up as a notification if users are trying to operate lens on liveview page.

2.1.6 Set up 2nd Stream

Stream profile is designed for mobile client and lower fps live stream display. Without stream profile integration, users cannot watch live video on mobile client nor select lower fps stream on liveview. Further, for performance consideration, we fix the resolution and framerate for each brand/series. You can refer to [appendix](#) for supporting list.

1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera / Camera Parameters**.
3. Click the **2nd Stream Settings** tab.

The screenshot shows the 'Camera Parameter' web interface with the '2nd Stream Settings' tab selected. The interface includes a 'Save' button and a 'Camera List' table at the bottom.

Channel	Camera Name	Camera Vendor	Camera Model	Sub-Streaming
1	Location 1	Camera Vendor	Camera Model	Enable

- **Stream Profile**: The default status is **Disable**. If you want mobile client user to access to this camera, you can select **Enable**, and click **Save** button in the middle of the page.
- **Low Profile**: The stream profile, under 300kbps, is designed for

mobile client single-view.

- **Minimum Profile:** The stream profile, under 100 kbps, is designed for mobile client multi-view.

2.1.7 View Camera Status

1. Open Internet Explorer and log in to the unit.
2. Click **IP Camera / Camera Status**.
3. Click the **Camera Status** tab.

No.	Name	Address	Conn. Status	Rec. Status	Framerate	Bitrate
1	Camera 1	192.168.0.75	Disconnect <input type="button" value="Connect"/>	Stopped	0.0 fps	0.0 Kbps
2	Camera 2	192.168.2.219	Connected <input type="button" value="Disconnect"/>	Recording	14.9 fps	71.5 Kbps
3	Camera 3	192.168.2.213	Connected <input type="button" value="Disconnect"/>	Stopped	5.0 fps	456.4 Kbps
4	Camera 4	192.168.0.99	Connecting <input type="button" value="Disconnect"/>	Stopped	0.0 fps	0.0 Kbps
5			Disconnect <input type="button" value="Connect"/>	Stopped	0.0 fps	0.0 Kbps
6			Disconnect <input type="button" value="Connect"/>	Stopped	0.0 fps	0.0 Kbps
7			Disconnect <input type="button" value="Connect"/>	Stopped	0.0 fps	0.0 Kbps
8			Disconnect <input type="button" value="Connect"/>	Stopped	0.0 fps	0.0 Kbps
						527.9 Kbps

Estimated Remaining Recording Time: 37day(s)5hour(s)

If your total bitrate becomes **red**, it means that the loading of the system is too heavy

Last Update at Thursday, June 18, 2009 3:13:08 PM

- **Conn. Status:** The status of the connection. Click the **Connect** or **Disconnect** button to change the connection status.
- **Rec. Status:** The set recording schedule of this camera in this time.
- **Framerate:** The frame rate of this camera.
- **Bitrate:** The transmission bit rate of this camera.
- **Estimated Remaining Recording Time:** Estimated remaining recording time is dividing the current free capacity by dynamic total bitrate.

Note



If your total bitrate becomes red, it means that the loading of the system is too heavy.

2.2 Recording & Event Setup

2.2.1 Recording Mode Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / Recording settings**.
3. Click the **Recording Mode** tab.
4. If selecting **Always Recording**, the chosen cameras will begin to record immediately.

The screenshot shows the 'Recording Settings' window with the 'Recording Mode' tab active. The 'Recording Mode' section has three radio buttons: 'No Recording' (selected), 'Recording by Schedule', and 'Always Recording'. Under 'Always Recording', there are eight checkboxes for 'Camera 1' through 'Camera 8'. Below this, there is an 'Automatic Recycle' section with an 'Enable' checkbox. At the bottom, there is a 'Keep Video' section with a checkbox and a text input field set to '0' Days. 'Save' and 'Reset' buttons are located at the bottom left of the window.

- **No Recording**: Turn off the recording.
- **Recording by Schedule**: Recording by schedule.
- **Always Recording**: Permanently turn on the chosen cameras.
- **Automatic Recycle**: Check the **Enable** option to recycle disk space automatically when the disk space is full.
- **Keep Video**: Set a period during which the recorded video clips will be kept intact.


2.2.2 Recording Schedule / Event Setup

Instead of **Always Recording**, you can begin the recording by setting the **Recording Schedule**.


1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / Recording Settings**.
3. Click the **Recording Schedule** tab.
4. Check the **Day** or **Week** mode.


- **Day**: Schedule the cameras to turn the recorder on and off at the

- same time every day according to your setting.
 - **Week:** Schedule the cameras for each day of the week differently.
5. Click the schedule of the camera which needs to be modified.
 6. Click the column on the bottom of the page.

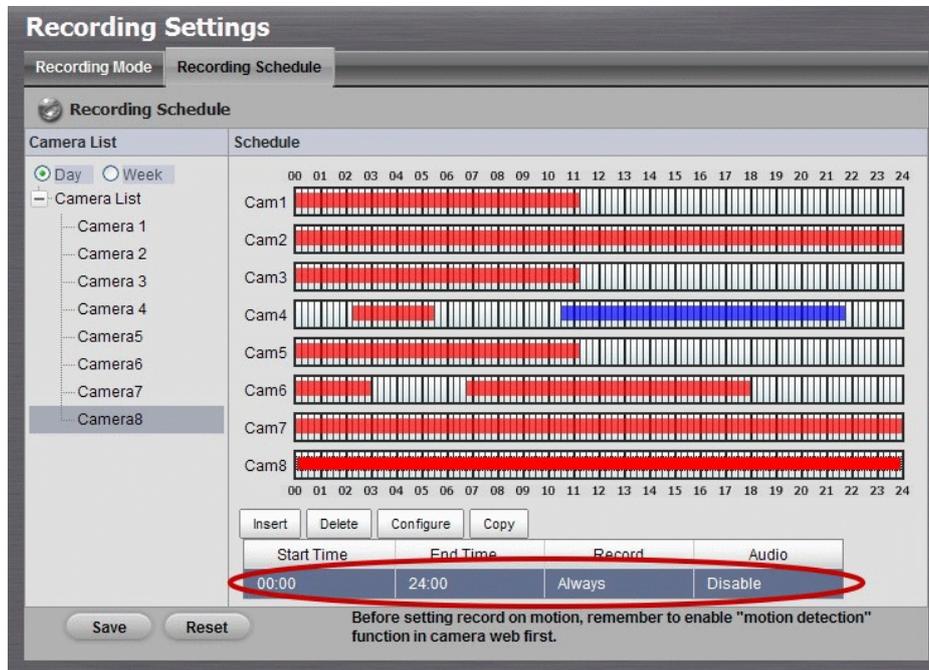


- **Insert:** Insert new schedules.
- **Delete:** Delete the selected schedule.
- **Configure:** Modify the schedule and recording mode settings.
- **Copy:** Copy current **Day Schedule** to other channel(s); copy current **Week Schedule** to other day(s) of a week or to other channel(s).

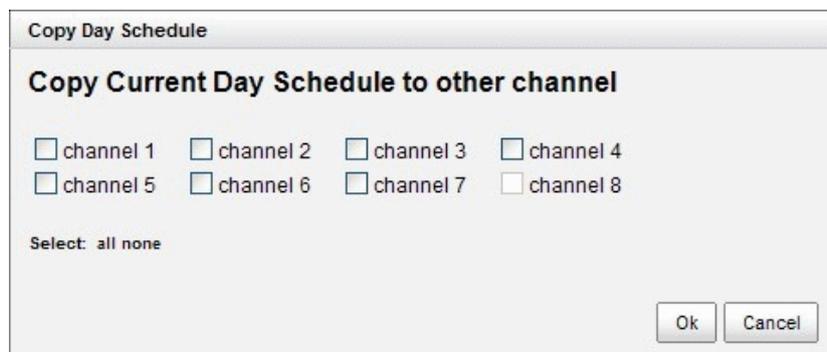


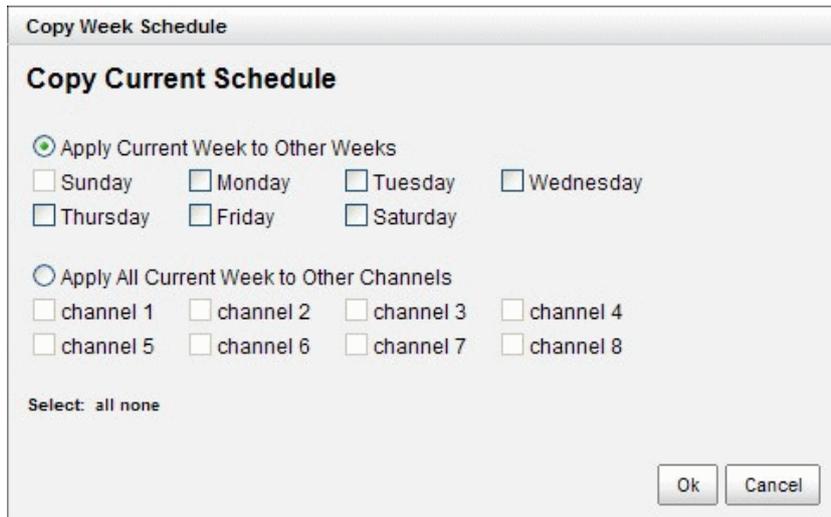

- The default setting of the camera's recording schedule is from 00:00 to 24:00. If you want to modify the time slot, click the **Configure** button to modify the default settings first.

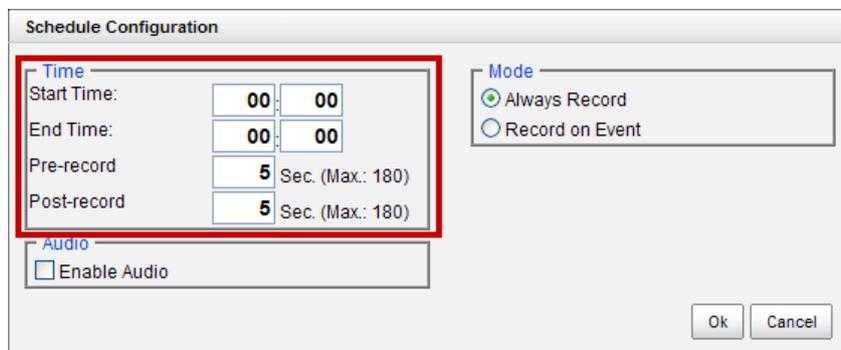

- Choose the recording mode.

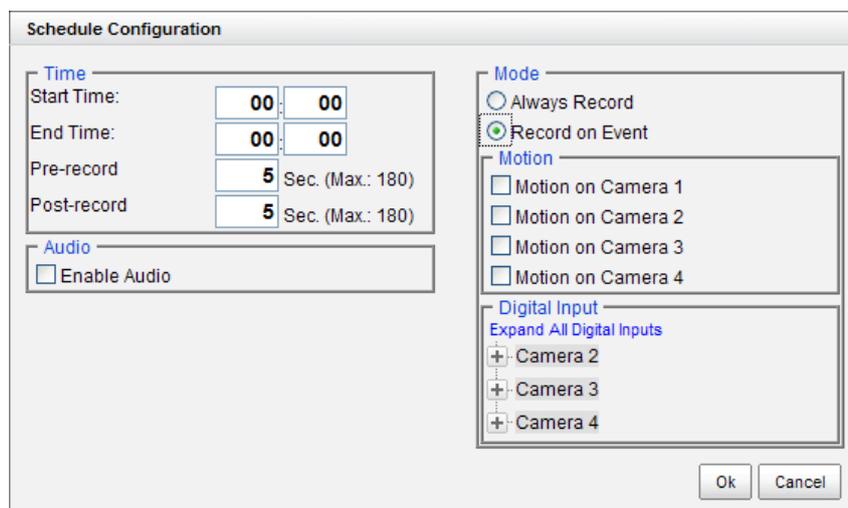

- **Always Record:** Always record.
- **Record on Event:** Record when events triggered. The event can be triggered by **Motion** or **Digital input**.

Note



When setting the event **Motion**, please first ensure that the motion detection function in your camera has been enabled.

9. If you want to add another new schedule, click the **Insert** button to add a new one.

The screenshot shows the 'Recording Settings' interface with the 'Recording Schedule' tab selected. On the left, there is a 'Camera List' with options for 'Day' and 'Week'. The main area displays a grid of recording schedules for eight cameras (Cam1 to Cam8). Each camera's schedule is represented by a horizontal bar chart with 24 columns (00 to 24). Cam1 has a red bar from 00:00 to 11:15 and a new red bar from 13:00 to 16:00. Cam2 has a red bar from 00:00 to 24:00. Cam3 has a red bar from 00:00 to 11:15. Cam4 has a red bar from 00:00 to 06:00 and a blue bar from 11:15 to 24:00. Cam5 has a red bar from 00:00 to 11:15. Cam6 has a red bar from 00:00 to 11:15. Cam7 has a red bar from 00:00 to 24:00. Cam8 has a red bar from 00:00 to 24:00. Below the grid, there are buttons for 'Insert', 'Delete', 'Configure', and 'Copy'. A table below these buttons shows the details of the selected schedule:

Start Time	End Time	Record	Audio
00:00	11:15	Always	Disable
13:00	16:00	Always	Disable

At the bottom, there are 'Save' and 'Reset' buttons, and a note: 'Before setting record on motion, remember to enable "motion detection" function in camera web first.'

10. Repeat step 9 to add other new schedules.
11. Repeat steps 5 through 9 to set other cameras.
12. Click the **Save** button.

Note



When changing the motion detection settings of a camera, make sure to disconnect your unit and that camera first. Once you have finished, re-connecting them will update the settings in your unit.

Note



When setting an event, **Motion** or **Digital input** can be triggered from other cameras. This means that if the system detects motion or digital input from other cameras or I/O Box, the camera will begin recording.

Note



There is another way to set the schedule. If you want to change the recording time length, drag the end of the time bar from 24:00 back to the length you wish, and then drag the beginning of the time bar to the point at which you would like it to commence recording. (You may also click the **Insert** button to add new schedules.)

Recording Settings

Recording Mode | Recording Schedule

Recording Schedule

Camera List | Schedule | Drag


Day Week

- Camera List
 - Camera 1
 - Sunday
 - Monday
 - Tuesday
 - Wednesday
 - Thursday
 - Friday
 - Saturday
 - Camera 2
 - Camera 3
 - Camera 4
 - Camera 5
 - Camera 6
 - Camera 7
 - Camera 8

Start Time	End Time	Record	Audio
00:00	20:00	Always	Disable


Save | Reset

Before setting record on motion, remember to enable "motion detection" function in camera web first.

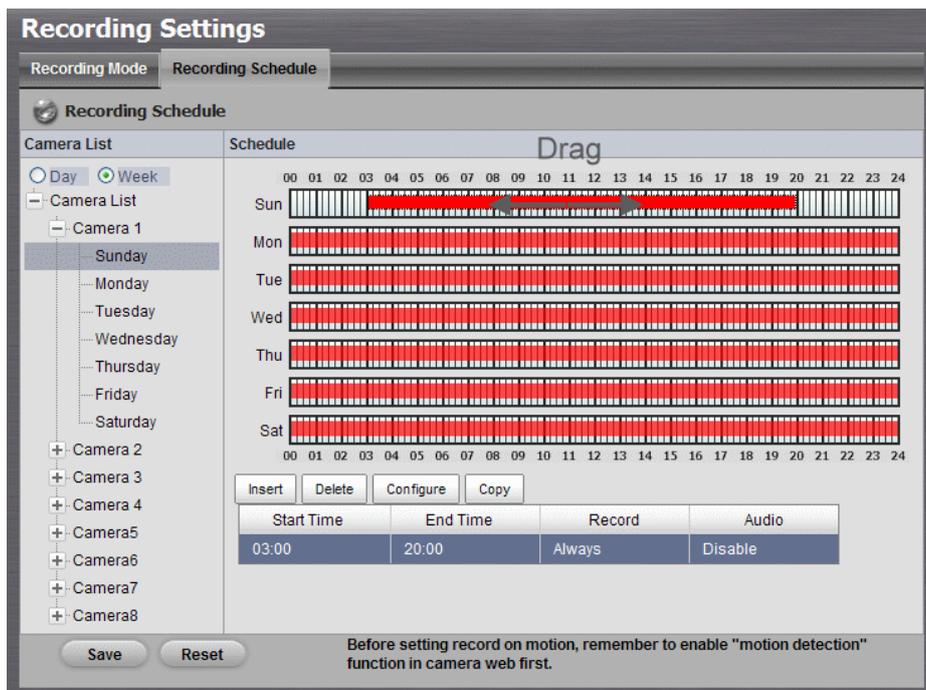

2.2.3 Camera Events and Responding Actions Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / Event & Action Management**.
3. Click the **Event & Action** tab.
4. Choose the camera, and then select one of the three events.

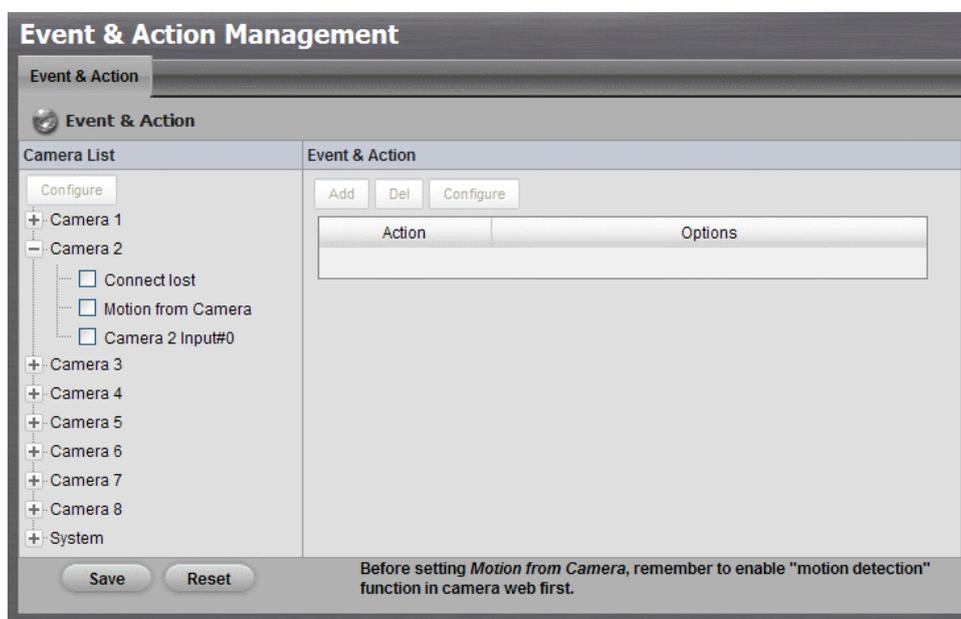

- **Connect lost:** When a connection between the camera and this unit

is lost, the system will trigger an action.

- **Motion from Camera:** When video motion is detected, the camera triggers an action.
- **Input:** Any external input can trigger an action.

Note




When setting the event ***Motion from Camera***, make sure to set up the camera's motion detection function first. Besides, event log will be recorded only if event is selected on this page.

5. Click the **Configure** button to enable the event and select the active period.

The screenshot shows a dialog box titled "Event Configuration". At the top left, there is a checkbox labeled "Enable Event". Below it is a section titled "Active Period" containing two radio buttons: "Always Active" (which is selected) and "Activated only in the following period". Under the second radio button, there are four input fields for time, arranged as "00:00 to 00:00". Below the "Active Period" section is another section titled "IO Type" with two radio buttons: "N/O" (selected) and "N/C". At the bottom right of the dialog box, there are two buttons: "Ok" and "Cancel".

- **Always Active:** The selected event is always active.
- **Activated only in the following period:** The selected event is only active in the designated time, which able to cover two days e.g. from 18:00 to 09:00.
- **I/O Type:** Check one of the options of I/O type. N/O means normal open, while N/C means normal close.

6. Click the **Add** button to set up the responding actions of this event.

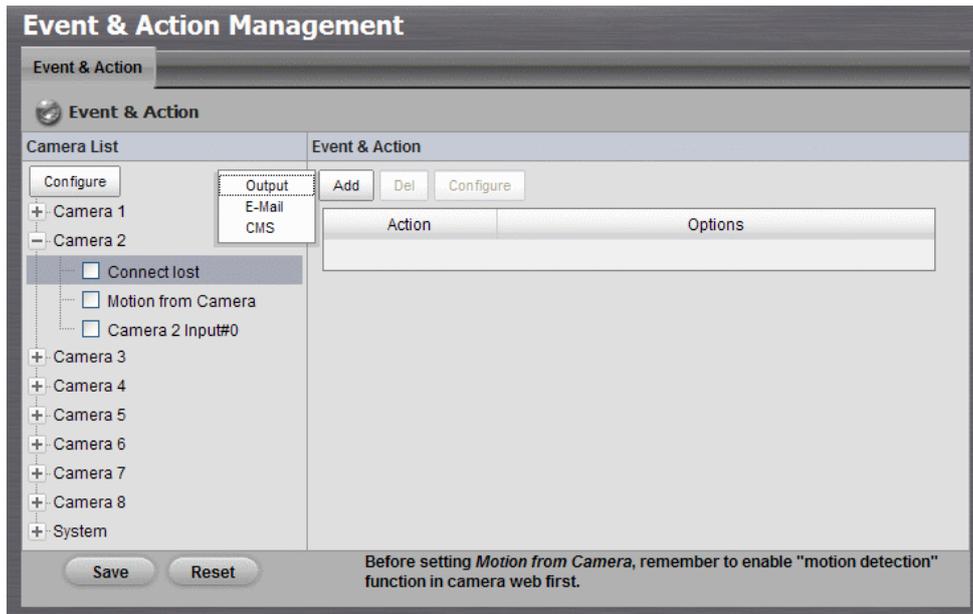

- **Output:** When an event occurs, the system will send an output signal to other connected devices.
 - **E-Mail:** When an event occurs, the system will send e-mail notifications. Make sure to add an e-mail address first.
 - **CMS:** When an event occurs, the system will send out a signal to CMS. CMS will highlight this event.
7. Click the action, and then click the **Configure** button to modify the details of that action if necessary.
 8. Repeat steps 6 and 7 to add more actions.
 9. Repeat steps 4 through 7 to set up more cameras.
 10. Click the **Save** button.

Note




After selecting camera events, the event information will display on the screen when it's triggered.

2.2.4 I/O Box Input and Responding Action Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / Event & Action Management**.
3. Click the **Event & Action** tab.

4. Select an input of I/O Box from list.
5. Click the **Add** button to set up the responding actions of this event.
6. Click the action, and then click the **Configure** button to modify the details of that action if necessary.

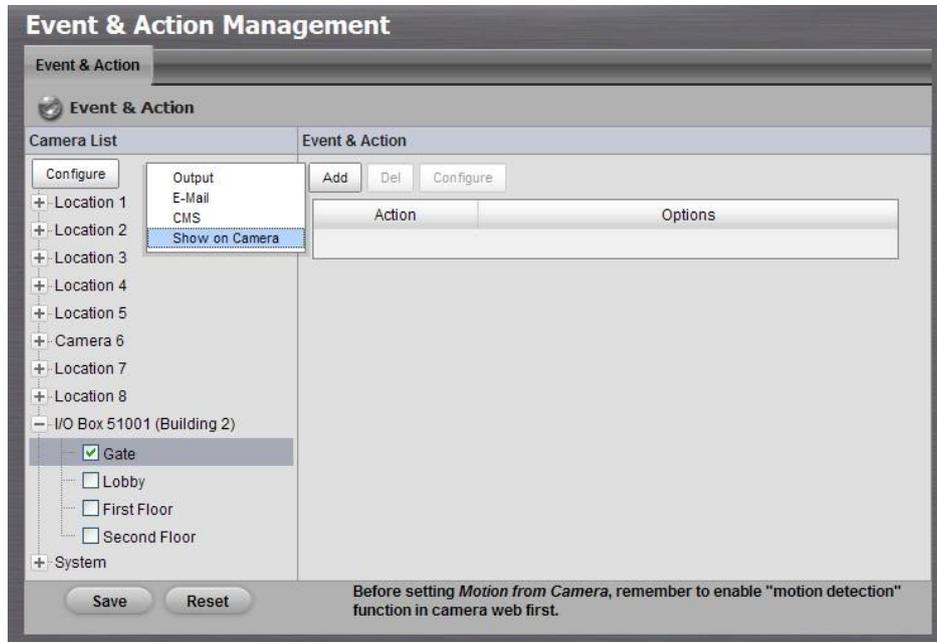


- **Output:** When an input is triggered, the system will send an output signal to other connected devices.
- **E-Mail:** When an input is triggered, the system will send e-mail notifications. Make sure to add an e-mail address first.
- **CMS:** When an input is triggered, the system will send out a signal to CMS. CMS will highlight this event.
- **Show on Camera:** When an input is triggered, the system will show an alert message on selected camera(s) of screen.



7. Repeat steps 5 and 6 to add more actions.
8. Repeat steps 4 through 6 to set up more inputs.
9. Click the **Save** button.

2.2.5 System Events and Responding Actions Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / Event & Action Management**.
3. Click the **Event & Action** tab.
4. Click **System** to unfold the list of system events, and then select one of the five events.

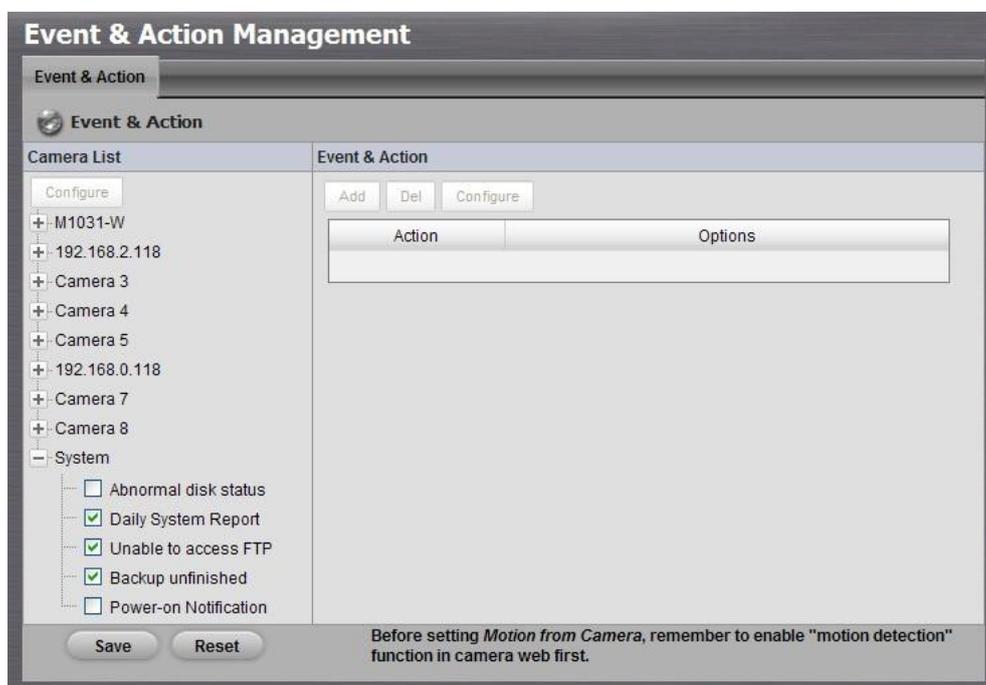

- **Abnormal disk status:** When there is no enough disk space for recording or when disk is abnormal for accessing, the system will trigger an action.
 - **Daily System Report:** Enable users to know the system information, HDD usage, and Disk status everyday through E-mail without accessing to the unit to check.
 - **Unable to access FTP:** The action will be triggered when the connection between the unit and FTP server is lost.
 - **Backup unfinished:** If there is any file which the system didn't complete the backup process, the file(s) name will be listed and send out through E-mail after finishing the last file of this backup schedule.
 - **Power-on Notification:** Record the time as power was turning on.
5. Click the **Add** button to set up the responding actions of this event.

Follow the steps in the previous section.

6. Click the **Save** button.

Note



E-Mail is the only one action to the event **Daily System Report**, **Unable to access FTP**, **Backup unfinished** and **Power-on Notification**. In addition to select a contact, remember to insert the time of sending daily system report.

Daily System Report Configuration

Automatically Send Daily System Report

18:48

Contact List

NUUO CSD <service@nuuo.com>

Ok Cancel

2.2.6 SMTP Server Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / E-Mail**.
3. Click the **SMTP Server** tab.

E-Mail

SMTP Server Contactors

SMTP Server

Server Address Port use ssl

Sender

Subject NVR Event

Body

There is something happened. Please check NVRmini_1.

SMTP Authentication

User Name Password

Save Reset Send Test Mail

- **Server Address:** SMTP (Simple Mail Transport Protocol) server IP

address.

- **Port:** SMTP port.
 - **Sender:** Sender information.
 - **Subject:** Subject.
 - **Body:** E-Mail content.
 - **SMTP Authentication:** Before sending out an E-Mail, enter the user name and password for SMTP authentication.
 - **User Name:** User name.
 - **Password:** Password.
4. Click the **Send Test Mail** button and the system will send a test mail to the sender. Check it after testing.
 5. Click the **Save** button.

2.2.7 Add Event Contacts

1. Open Internet Explorer and log in to the unit.
2. Click **Recording & Event / E-Mail**.
3. Click the **Contactors** tab.

The screenshot shows a web interface for managing email contactors. It features a 'Name' and 'E-Mail' input field, an 'Add Contactor' button, and a table with columns for 'Name', 'Email', and 'Delete'. 'Save' and 'Reset' buttons are located at the bottom.


- **Add Contactor:** Add this new contact into the contact list.
 - **Reset:** Return to the latest saved settings of the contact list.
 - **Save:** Save this time modification of the contact list.
4. Insert the name of a new contact.
 5. Insert the e-mail address of this new contact.
 6. Click the **Add Contactor** button.
 7. Click the **Save** button to save this modification of the contact list.

2.3 RAID & File Settings

2.3.1 View RAID Volume Status

RAID status refers to the disk drives on your unit and how they are arranged into a RAID Volume.


1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **RAID Status** tab to view the status of your RAID Volume.

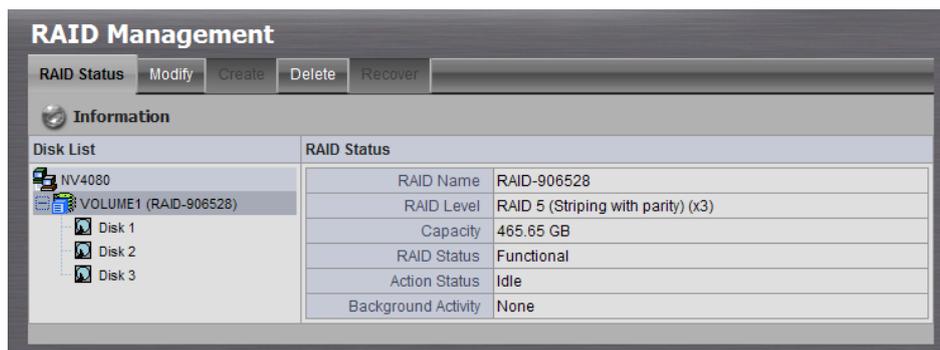

- **RAID Name:** Name of your RAID, automatically assigned when it was created.
- **RAID Level:** RAID 0, 1, 5, or 10, specified when it was created.
- **Capacity:** data capacity of the RAID Volume in GB.
- **RAID Status:** **Functional** is normal. **Critical** means one disk drive has failed. **Offline** means you cannot access your data.
- **Action Status:** **Idle** is normal. **Rebuilding** means the RAID Volume is being rebuilt after a disk drive failure. **Migrating** means the RAID Volume is adding a disk drive or changing RAID levels.
- **Background Activity:** **None** is normal. **Running** means a background activity is in progress.

2.3.2 View Disk Drive Information


1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **RAID Status** tab.
4. Click a disk icon to view the disk drive information.

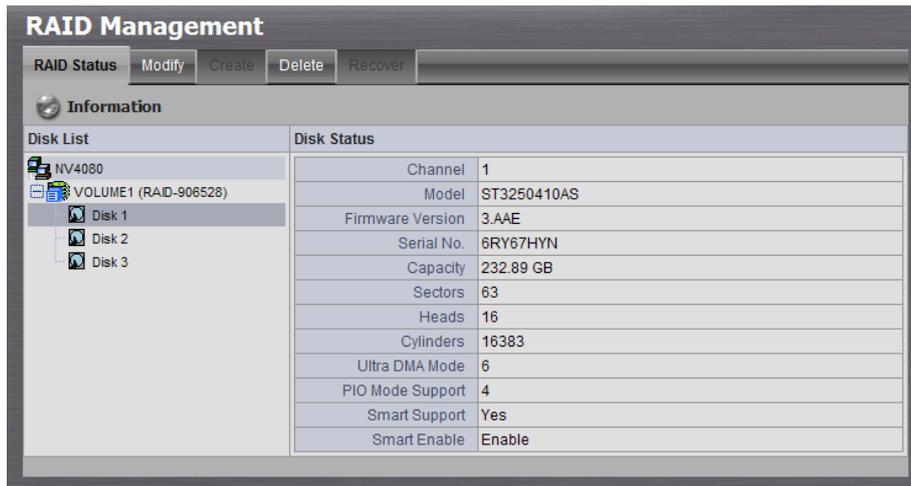

2.3.3 Migrate a RAID Volume

To migrate a RAID Volume means to change its RAID level or to add disk drives.

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Modify** tab.

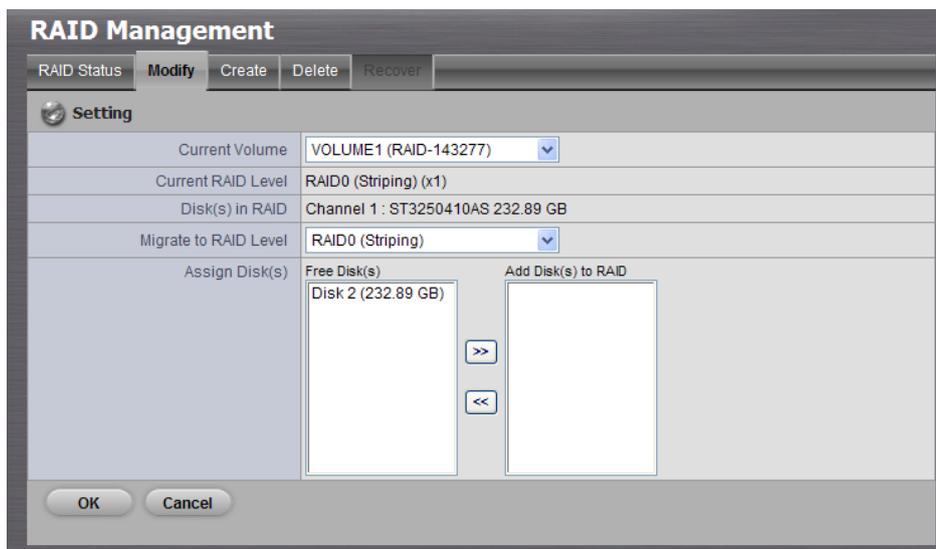

4. From the Current Volume drop-down menu, choose the RAID Volume which needs to be modified.
5. In the Migrate to RAID Level drop-down menu, choose the target RAID

Level.

6. To add disk drives, highlight disk drives in the **Free Disks** column and click the **>>** button to move them to the Disks in RAID column.
7. Click the **OK** button to finish it.

With those steps, the RAID Volume is modified as you directed. Migration requires several minutes, depending on the type of modification taking place and the size of your disk drives.

During the modification, your RAID Volume and all of the folders on it are fully accessible.


After the migration is completed, you must extend the file system so as to use the storage space you have added. You can extend the file system immediately or wait until later.

8. Click the **RAID & File System / File System Management**.
9. Click the **Extend File System** button.

2.3.4 Create a RAID Volume

In this system, the term RAID Volume refers to one or more disk drives working together as a RAID logical drive. You must have unassigned disk drives in your unit to create a new RAID.

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Create** tab.

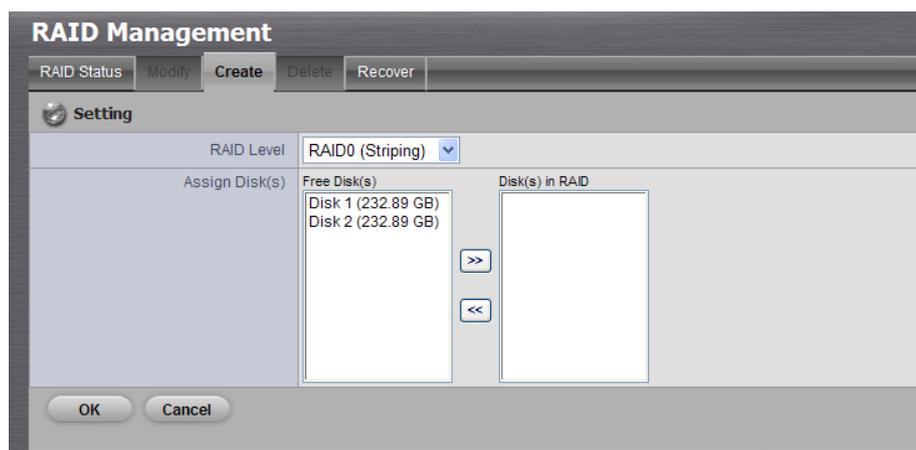

4. From the RAID Level drop-down menu, choose the RAID level you prefer for your disk array.
5. Highlight disk drives in the Free Disks column, then click the >> button to move them to the Disks in RAID column.
6. Click the **OK** button.

The RAID Volume is created and formatting begins. Formatting requires several minutes, depending on the size of your disk drives.

Important



After setting the RAID level and disks, we recommend not changing the number of disks. Changing the number of disks requires a re-creation of the RAID level, which will destroy all of your data.

Important



To reduce the possibility of having problem to access public folder in the unit, before creating new disk volume or modifying volume, please delete the invalid volume if any.

Note




If you use Express Mode when using the **Install Wizard**, the disk(s) will be set to RAID 1 (2 bay) or RAID 5 (4 bay) automatically. If you use Advance Mode when using the **Install Wizard**, the disk(s) will become the RAID level you set.

2.3.5 Designate a Spare Drive

If you have an unassigned disk drive, you can assign it as a spare drive.


1. Insert the unassigned disk drive.
2. Open Internet Explorer and log in to the unit.
3. Click **RAID & File System / RAID Management**.
4. Click the **Create** tab.
5. From the RAID Level drop-down menu, choose Spare Disk.

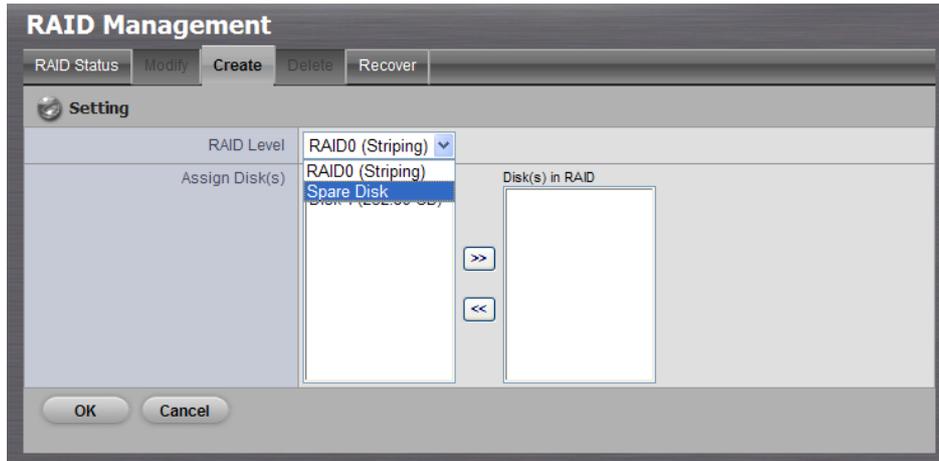

6. Highlight a disk drive in the Free Disks column and click the >> button to move it to the Disks in RAID column.
7. Click the **OK** button.

2.3.6 Delete a RAID Volume

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **Delete** tab.

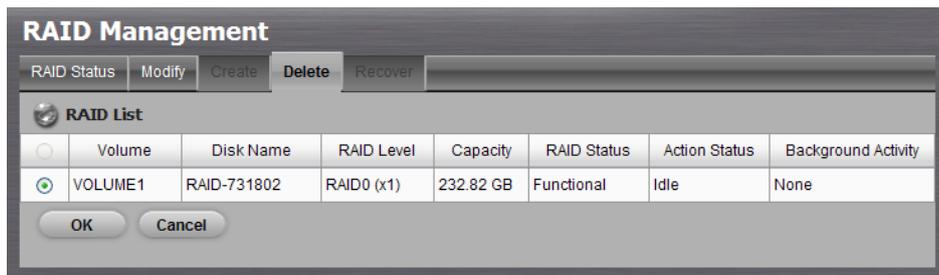

4. Click the option button beside the RAID Volume you want to delete.
5. Click the **OK** button.
6. A confirmation dialog pops up. Type "YES" into the field, and then click the **OK** button.
7. After a RAID Volume is deleted, you need to reboot the unit.

Caution



When you delete a RAID Volume, you delete all the folders in the RAID volume and all the data saved in the folders. Backup any important data before deleting a RAID Volume.

Note



You cannot delete a RAID Volume while a background activity is running, such as Migration or Rebuild. Wait until these activities are completed.

2.3.7 Recover

For the purpose and usage of recover, you can refer to [Respond to an Invalid RAID Volume](#).

2.3.8 View Protocol Status


There are another two ways to access the recorded data in the unit: through Workgroup or through FTP. Follow the following steps to view the status of these two ways.

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / Protocol Control**.
3. Click the **Information** tab.

Protocol Control		
Information	Windows	FTP Sharing
Protocol List		
Protocol	Status	Action
Windows	ON	Disable
FTP Sharing	ON	Disable

2.3.9 Modify the “My Network Places” Protocol Settings


1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / Protocol Control**.
3. Click the **Windows** tab.
4. Check and enter the unit’s information.
5. Click the **OK** button.

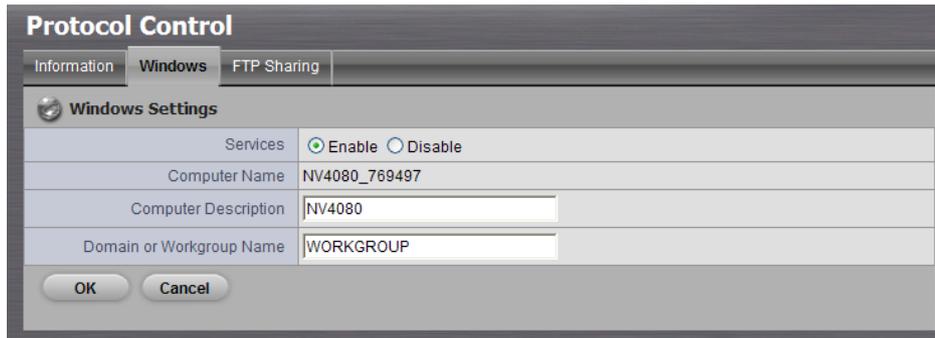

- **Services:** Whether users can access this unit through Windows Explorer or not.
- **Computer Name:** The name of this unit, which is set in the **Setup** tab in the **Network Setup** function.
- **Computer Description:** The name which will be displayed in Windows Explorer.
- **Domain or Workgroup Name:** The name of this unit's workgroup.

2.3.10 Modify the FTP Protocol Settings

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / Protocol Control**.
3. Click the **FTP Sharing** tab.
4. Check and enter the settings of this unit.
5. Click the **OK** button.

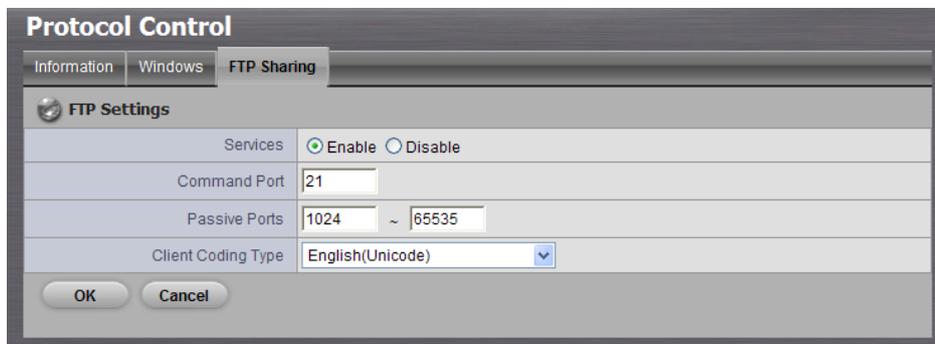

- **Services:** Whether users can access this unit through FTP or not.
- **Command Port:** The port for commands between a server and a client.
- **Passive Ports:** The data transmission port of passive mode.

- **Client Coding Type:** If your FTP client uses double-byte characters but does not support Unicode, choose your FTP client's encoding from the Client Coding Type drop-down menu.

2.4 Auto Backup

This feature enables you to automatically backup the recorded video of the previous date to FTP site. There are two steps to enable the function, one is **Set up Backup Schedule**, another is **Set up Backup Server**.

2.4.1 Set up Backup Schedule

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / Auto Backup Management**.
3. Click the **Backup Schedule** tab.
4. Set up backup schedule, select the backup channels, and check the **Enable** option to enable **Auto Backup**.

Auto Backup Management

Backup Schedule | Backup Server

Backup Schedule

Auto Backup Enable

Daily Backup Time 15 : 00

Start Time 00 : 00

End Time 12 : 00

Camera select: all / none
 Camera 1 Camera 2 Camera 3 Camera 4
 Camera 5 Camera 6 Camera 7 Camera 8

Current Event Settings

Unable to access FTP disable

Backup unfinished disable

Save Reset

- **Auto Backup:** Check the **Enable** option to enable this function.
- **Daily Backup Time:** The daily scheduled time to start backup process.
- **Start Time:** The start time of recorded video of the previous date.
- **End Time:** The end time of recorded video of the previous date.
- **Camera:** Select the channel(s) to backup.

5. **Current Event Settings** shows the condition of the events of auto

backup – enable or disable. Follow the steps of **System Events and Responding Actions Setup** to configure the event & action.

Note



The system backups recorded video files one by one. If the connection between the unit and FTP server is normal, but some problems of FTP causes the system unable to write files on FTP, the system would try each file three times before starting to backup the next file. If the connection is lost, the system would wait for the connection, so no file would be skipped.

2.4.2 Set up Backup Server

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / Auto Backup Management**.
3. Click the **Backup Server** tab.
4. Set up the FTP server and create a folder for backup files. The folder format is "FolderName", "FolderName/SubFolderName", and so on.

For example: AutoBackup/NVR

Auto Backup Management	
Backup Server	
FTP Site	nuuo.dnsalias.com
FTP Port	21
Username	FAE
Password
Backup to Remote Folder	AutoBackup/NVR
Save Reset Test FTP	

5. After setting up all the information, click the **Test FTP** button and the system will create a folder to FTP. Check it after testing. In this case, the route of the tested file will be:

ftp://nuuo.dnsalias.com/AutoBackup/NVR/NVRmini_ComputerName



6. Click the **Save** button.

Note



Make sure the FTP account with privileges of administrator who is able to upload, rewrite, delete files, and create new folder. Besides, make sure the FTP server has enough space for auto backup.

Note



To avoid the failure of auto backup, please check the normality of FTP server regularly (e.g., enough space for video, system conditions.).

2.5 Network Setup

2.5.1 View Network Status

1. Open Internet Explorer and log in to the unit.
2. Click **Network Setup / Network Setup**.
3. Click the **Information** tab to display the unit's network information.

Network Setup

Information Setup Jumbo Frame Port Setup DDNS Setup UPnP Port Forwarding

Network information

Computer Name	nv4080_pm
IP Address	192.168.3.50
Subnet Mask	255.255.252.0
Default Gateway IP Address	192.168.1.1
Primary Domain Name Server	192.168.1.1
Secondary Domain Name Server	168.95.1.1

2.5.2 Network Settings

1. Open Internet Explorer and log in to the unit.
2. Click **Network Setup / Network Setup**.
3. Click the **Setup** tab to set up the network settings of your unit.

Network Setup

Information Setup Jumbo Frame Port Setup DDNS Setup UPnP Port Forwarding

Network Setting

Computer Name	nv4080_pm
Ethernet Link Speed	<input type="radio"/> Auto <input type="radio"/> 1000Mbps <input checked="" type="radio"/> 100Mbps
Internet Protocol	<input type="radio"/> Obtain an IP address automatically <input checked="" type="radio"/> Specify an IP address
IP Address	192.168.3.50
Subnet Mask	255.255.252.0
Default Gateway IP Address	192.168.1.1
Primary DNS	192.168.1.1
Secondary DNS	168.95.1.1

OK Cancel

- **Computer Name:** Name your unit.

Note




Because of the internal data modifications required, it will take a few minutes to change the name of your unit. During this period, it will not be possible for you to access your unit. There is no need to restart the unit; simply wait until it is possible to re-access.

- **Ethernet Link Speed:** Select the LAN transmission speed you prefer. (4 bay)

- **Internet Protocol:** Check whether you want to apply a specific internet protocol to your unit.
- **IP Address:** IP address of this unit.
- **Subnet Mask:** Subnet mask address.
- **Default Gateway IP Address:** Gateway IP address.
- **Primary DNS:** Primary DNS (Domain Name System) address.
- **Secondary DNS:** Secondary DNS address.

4. Click the **Jumbo Frame** tab to use the unit's maximum transmission settings.

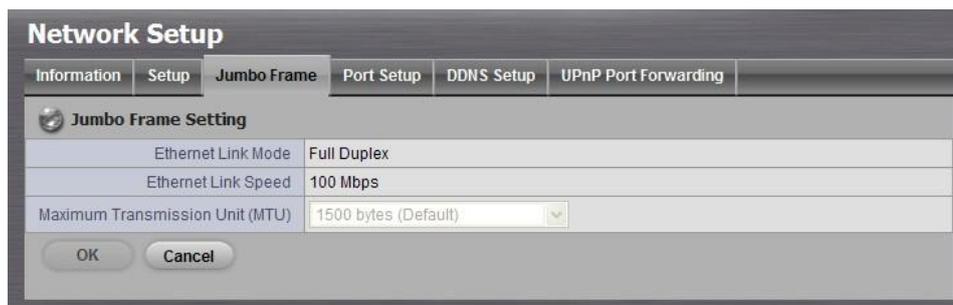

- **Ethernet Link Mode:** Full duplex or half duplex transmission.
- **Ethernet Link Speed:** Transmission speed.
- **Maximum Transmission Unit:** Limit the maximum transmission size. If the transmission package is larger than this setting, the system will divide it into smaller packages when transmitting.

5. Click the **Port Setup** tab to set the port of your unit.



6. Click the **DDNS Setup** tab to enable Dynamic Domain Name Server function, allowing you to connect unit with dynamic IP address.

Network Setup

Information Setup Jumbo Frame Port Setup **DDNS Setup** UPnP Port Forwarding

Dynamic DNS Setting

DDNS Enable

Provider DynDns

User name

Password

Host name

Update Period 16 minutes

Save Reset

2.5.3 Auto Port-Forwarding

This function is designed for saving time in port configuration on router if users want to access the unit (in LAN) from WAN. Once enabling UPnP Service on router, users can do port-forwarding for setting page (default: 80), liveview (default: 5150), playback (default: 5160), and CMS (default: 5170) automatically.

1. Open Internet Explorer and log in to the unit.
2. Click **Network Setup / Network Setup**.
3. Click the **UPnP Port-Forwarding** tab.
4. Click the **Search** button, and the searched routers will be listed.

Network Setup

Information Setup Jumbo Frame Port Setup DDNS Setup **UPnP Port Forwarding**

UPnP Router Search

Search Search complete

No.	Device Name	IP Address	
1	D-Link DIR-300	192.168.8.1	+

UPnP Port Forwarding List

Physical Port	Virtual IP	Virtual Port

5. Select the searched router, and all UPnP ports configured on this router will show under the **UPnP Port Forwarding List**.

Network Setup

Information Setup Jumbo Frame Port Setup DDNS Setup **UPnP Port Forwarding**

UPnP Router Search

Search Search complete

No.	Device Name	IP Address	
1	D-Link DIR-300	192.168.8.1	+

UPnP Port Forwarding List

Physical Port	Virtual IP	Virtual Port
51673	192.168.8.62	51673
47500	192.168.8.223	47500
47500	192.168.8.223	47500
1234	192.168.9.55	1234

6. After selecting one of searched routers, click the  icon to set up port-forwarding to this router automatically. You will find ports of setting, liveview, playback and CMS are listed.

Network Setup

Information Setup Jumbo Frame Port Setup DDNS Setup **UPnP Port Forwarding**

UPnP Router Search

Search Search complete

No.	Device Name	IP Address	
1	D-Link DIR-300	192.168.8.1	+

UPnP Port Forwarding List

Physical Port	Virtual IP	Virtual Port
51673	192.168.8.62	51673
47500	192.168.8.223	47500
47500	192.168.8.223	47500
1234	192.168.9.55	1234
80	192.168.3.50	80
5150	192.168.3.50	5150
5160	192.168.3.50	5160
5170	192.168.3.50	5170

Caution



For security reason, the privilege of UPnP port-forwarding is LOWER than port-forwarding configured on router. Therefore, if the ports have been used on router, we are unable to know before finding out access failure.

Note



UPnP port-forwarding is for temporarily use only. Most of UPnP router will clean up all UPnP ports after router reboots. Furthermore, for some routers, if the port you want to add has already been used for other devices in the same way (UPnP port forwarding), this “enable” action will cover over the settings.

2.5.4 Network Service Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Network Setup / Network Service**.
3. Click the **Live View & Playback Service** tab.

Network Service

Live View & Playback Service | CMS Service

Live Streaming Server

Port: 5150

Maximum Connections: 16

Playback Server

Port: 5160

Maximum Users: 6

Log Access: Enable

Black/White List

White List: Enable

Black List: Enable

IP Range: [] to []

Add to White List | Add to Black List

Index	IP	Access	Delete

Save | Reset

- **Live Streaming Server**
 - **Port:** Live streaming transmission port.
 - **Maximum Connections:** Maximum connections from remote access.
- **Playback Server**
 - **Port:** Playback transmission port.
 - **Maximum Users:** The number of users who can access playback

functions at the same time.

- **Log Access:** Check to record playback access information on NVR Log page, including access time, playback video channels, and time frame.
- **Allowed/ Blocked List**
 - **Allowed List:** Only IP addresses from the allowed list are allowed to log in.
 - **Blocked List:** IP addresses from the blocked list will be unable to log in.

Note



When setting Maximum Connections in Live Streaming Server settings, 1 connection means that only 1 user can connect to only 1 camera. If the maximum connections value is set to 16, and each user connects to 4 cameras, the allowed connections per user will become 4, rather than 16.

2.5.5 CMS Service Setup

1. Open Internet Explorer and log in to the unit.
2. Click **Network Setup / Network Service**.
3. Click the **CMS Service** tab.

Network Service	
Live View & Playback Service	
CMS Service	
CMS Server	
CMS Server	<input checked="" type="checkbox"/> Enable
Port	5170
Maximum Connections	8
Save Reset	

- **CMS Server:** Check the **Enable** option to enable CMS service.
- **Port:** the port number through which the CMS connects to this unit.
- **Maximum Connections:** The maximum number of allowed CMS connections.

2.6 Management

2.6.1 View the List of Users


1. Open Internet Explorer and login the unit.
2. Click **Management/ User Management**.
3. Click the **Create New Users** tab.
4. The list will be displayed on the bottom of the page.



No.	Name	Group	Live View	PTZ	IO	Playback	Backup Data	Delete Data
1	a	power user	1,2,3,4,5,6,7,8	0	0	1,2,3,4,5,6,7,8	0	0
2	b	user	1,2,3,4,5,6,7,8	0	0	1,2,3,4,5,6,7,8	0	0
3	c	guestuser	1,2,3,4,5,6,7,8	0	0	1,2,3,4,5,6,7,8	X	X

2.6.2 Create New Users

1. Open Internet Explorer and login the unit.
2. Click **Management/ User Management**.
3. Click the **Create New Users** tab.

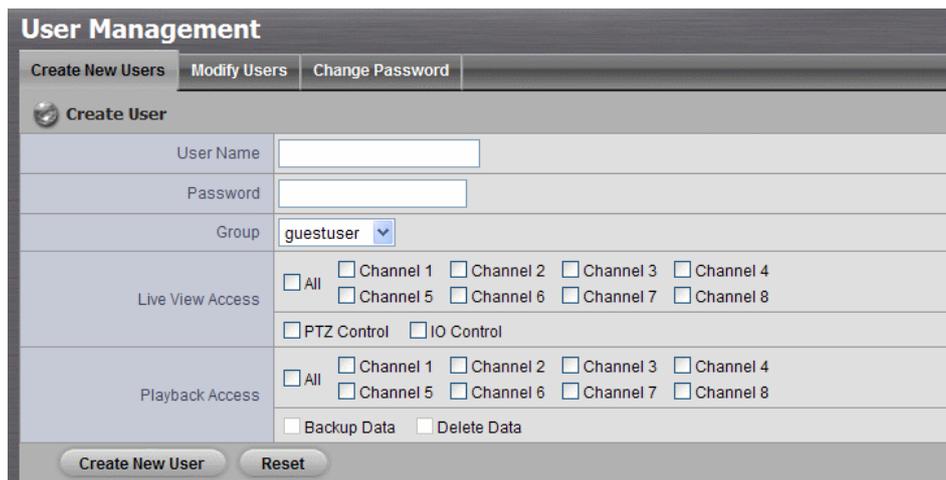

User Management

Create New Users | **Modify Users** | Change Password

Create User

User Name:

Password:

Group:

Live View Access: All Channel 1 Channel 2 Channel 3 Channel 4 Channel 5 Channel 6 Channel 7 Channel 8 PTZ Control IO Control

Playback Access: All Channel 1 Channel 2 Channel 3 Channel 4 Channel 5 Channel 6 Channel 7 Channel 8 Backup Data Delete Data

Create New User | Reset

4. Insert the user name of this new user.
 5. Insert the password of this new user.
 6. Choose the group of this user.
- **Power user**: Power user can do all the settings except the **Network Settings, RAID Settings, and Management function**.
 - **User**: User just can change his/her password and do the live view and playback functions.

- **Guest user:** User can do live view and playback function only.

7. Select the live view cameras which this user can access.
8. Select the playback channels which this user can access.
9. Check whether this user can backup or delete recorded data.
10. Click the **Create New User** button to finish it.

Note



The Administrator will be the only user who can use all of the functions. There is a default administrator account in the system, and you cannot create another “Administrator” account.

2.6.3 Modify User Information

1. Open Internet Explorer and log in to the unit.
2. Click **Management / User Management**.
3. Click the **Modify Users** tab.
4. Click one of the users in the User List on the bottom of this page.

The screenshot shows the 'User Management' interface. The 'Modify Users' tab is active, showing a form for editing the 'user' profile. The form includes fields for 'User Name' (user) and 'Group' (user). Under 'Live View Access', 'All' is unchecked, and channels 1-4 are checked. 'PTZ Control' and 'IO Control' are also checked. Under 'Playback Access', 'All' is unchecked, and channels 1-4 are checked. 'Backup Data' and 'Delete Data' are also checked. 'Modify User' and 'Reset' buttons are at the bottom of the form.

The 'User List' table below the form contains the following data:

No.	Name	Group	Live View	PTZ	IO	Playback	Backup Data	Delete Data	
1	poweruser	power user	1,2,3,4,5,6,7,8	0	0	1,2,3,4,5,6,7,8	0	0	
2	user	user	1,2,3,4	0	0	1,2,3,4	0	0	

5. Change the group of this user.
6. Select the live view cameras which this user can access.
7. Select the playback channels which this user can access.

8. Check whether this user can backup or delete recorded data.
9. Click the **Modify User** button to finish it.

2.6.4 Change a User's Password

1. Open Internet Explorer and log in to the unit.
2. Click **Management / User Management**.
3. Click the **Change Password** tab.

4. Choose the user.
5. Enter a new password.
6. Enter this new password again.
7. Click the **OK** button.

2.6.5 Delete Users

Except for the administrator, you can delete any users with the following steps.

1. Open Internet Explorer and log in to the unit.
2. Click **Management / User Management**.
3. Click the **Modify Users** tab.
4. Click the Delete icon of the user you want to delete.

No.	Name	Group	Live View	PTZ	IO	Playback	Backup Data	Delete Data
1	poweruser	power user	1,2,3,4,5,6,7,8	0	0	1,2,3,4,5,6,7,8	0	0
2	user	user	1,2,3,4	0	0	1,2,3,4	0	0

5. In the confirmation box, click the **OK** button.

2.6.6 Online License Activation

There are two types of license currently, camera license for 2ch-device and POS license for 2bay and 4bay S-series device. With the former license upgrade, the device possesses up to 4ch capacity. With the latter license upgrade, users can use **POS function**.

There are two ways to activate license, online and offline.

1. Open Internet Explorer and log in to the unit.
2. Click **Management / License Management**.

The screenshot shows the 'License Management' web interface. It has a tabbed interface with 'Activate' selected. Under 'Activate', there are two sections: 'Online Activation' and 'Offline Activation'. The 'Online Activation' section has a radio button selected, an 'S/N Type' dropdown, and an 'Input S/N:' text field. Below it is an 'Activate' button. The 'Offline Activation' section has three steps: 'Step 1: Export server information file' with an 'Export' button; 'Step 2: Copy exported offline.reg to PC connected to the Internet, and execute "OffLineTool.exe" to activate license and get the offline license file'; and 'Step 3: Import offline license file'. Below these steps is another 'S/N Type' dropdown, an 'Import license file:' text field with a 'Browse...' button, and an 'Import' button. At the bottom, there is a 'License List' section with a table header: S/N, Channel, Product, Status. The table content shows 'There are no licenses yet.'

3. Select **Online** as the Activation Type, input serial number, and click the **Activate** button.
4. The license will be updated in License List if activated successfully. System will reboot automatically.


The screenshot shows the 'License List' table with the following data:

S/N	Channel	Product	Status
XXXX-XXXX-XXXX-XXXX	2	NUUO NVRmini	Activated


2.6.7 Offline License Activation

If the device is set up in Intranet (Local LAN) without Internet connection, there is another way to activate license.


1. Open Internet Explorer and log in to the unit.
2. Click **Management / License Management**.

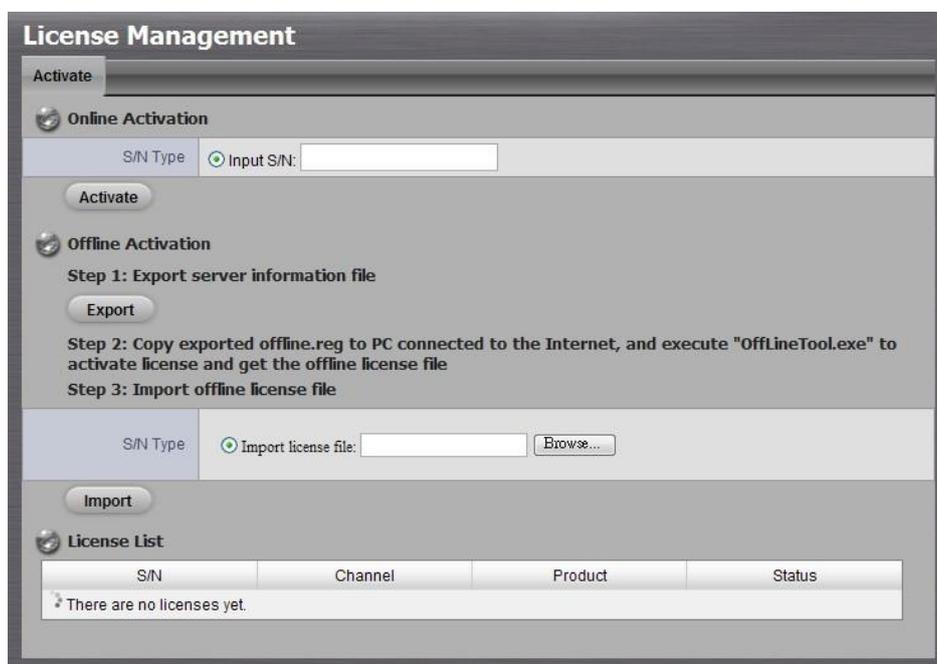


3. Click the **Export** button under the section of **Offline** Activation to export the information of this unit.
4. Download dialog pops up. Save the request file and take it to other PC which is connected to the Internet. Furthermore, the PC should be installed **OffLineTool.exe** which can be found from NVRmini tool kit v2.5. <ftp://nvrmini:nuuo@nuuo.dnsalias.com/NVRmini v2.5 AP.zip>

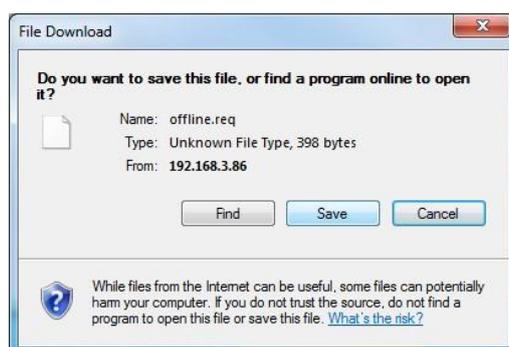


- Execute the OffLineTool.exe in that PC with Internet connection, and select the request file **offline.req**.

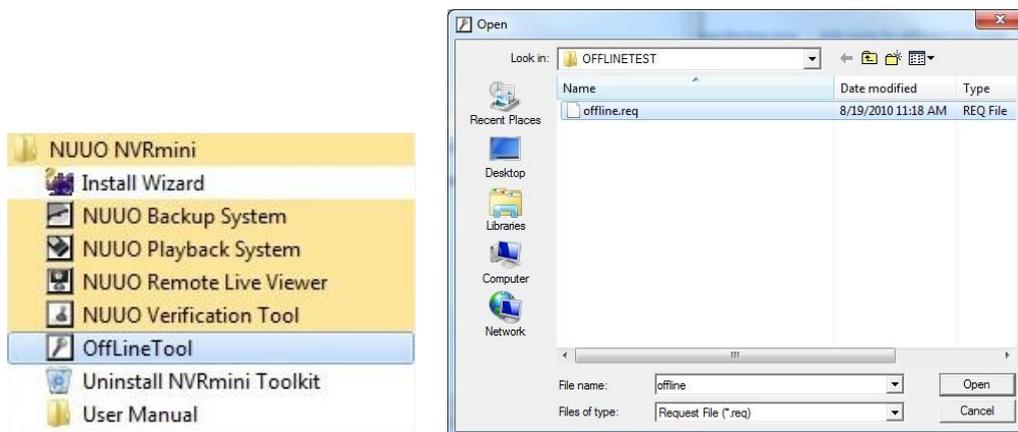

- Input the serial number, click the **Activate** button, and save the .dll file **offline_license.dll**.

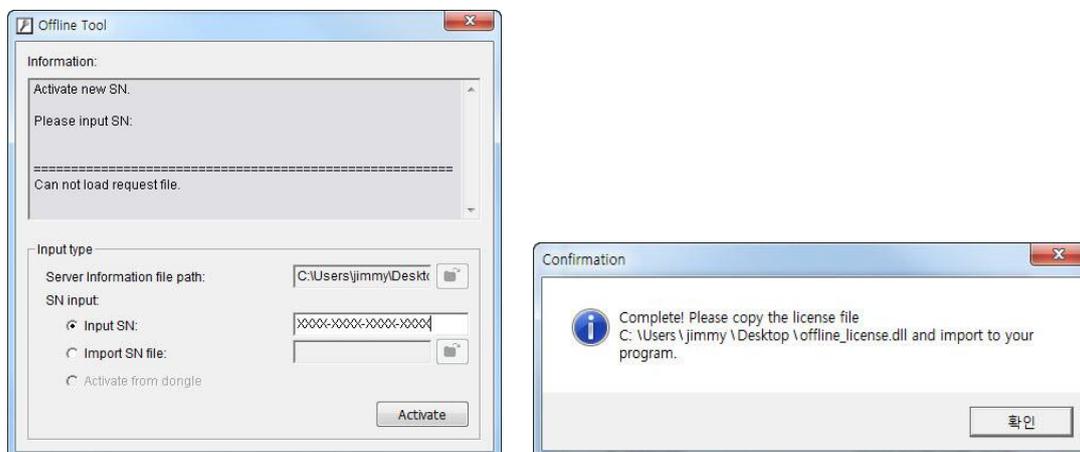

- Import the license file to the unit.

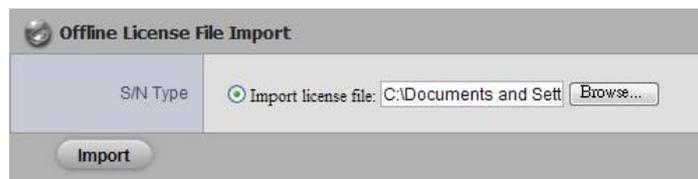


- The license will be updated in License List if activated successfully. System will reboot automatically.

S/N	Channel	Product	Status
XXXX-XXXX-XXXX-XXXX	2	NUUO NVRmini	Activated

2.6.8 View the Event Log

1. Open Internet Explorer and log in to the unit.
2. Click **Management / Log System** to find the event list of your unit.

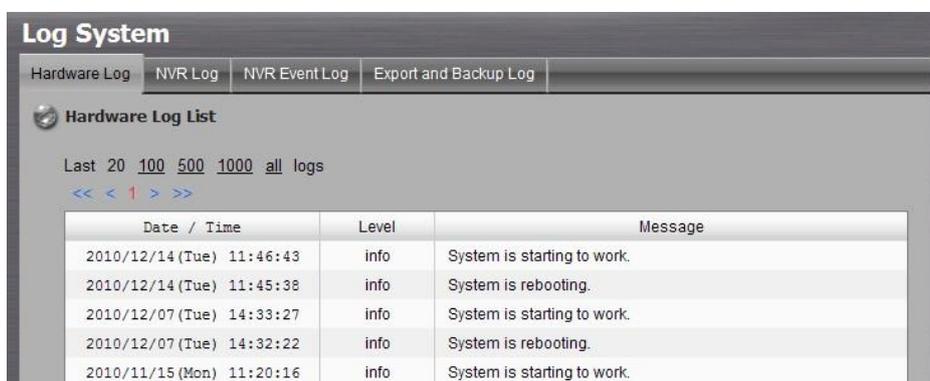

The screenshot shows a web interface titled "Log System" with tabs for "Hardware Log", "NVR Log", "NVR Event Log", and "Export and Backup Log". The "Hardware Log" tab is active, displaying a "Hardware Log List". Below the title, there are options to view the "Last 20", "100", "500", "1000", or "all" logs, along with navigation arrows. A table lists log entries with columns for "Date / Time", "Level", and "Message".

Date / Time	Level	Message
2010/12/14 (Tue) 11:46:43	info	System is starting to work.
2010/12/14 (Tue) 11:45:38	info	System is rebooting.
2010/12/07 (Tue) 14:33:27	info	System is starting to work.
2010/12/07 (Tue) 14:32:22	info	System is rebooting.
2010/11/15 (Mon) 11:20:16	info	System is starting to work.

There are four kinds of event which will be listed on this page.

- **Hardware Log:** The log information of the operations to your unit, such as reboot or shutdown.
- **NVR Log:** The log information of the NVR system, such as system, recording, user access information, POS and auto backup.
- **NVR Event Log:** The log information of the “Event & Action Management”, such as motion detection or camera connection lost.
- **Backup and Export Log:** The log information of the track of video data exported and backup.

Note



The NVR Event Log will be recorded only if event is selected on **Event & Action Management** page. As for user access information, please go to **Network Service** to check **Log Access** box to enable this function.

2.6.9 Save Unit Configuration

Save configuration can let you save the settings of this unit. These settings can be applied to other units, which will let you set other units more easily.

1. Open Internet Explorer and log in to the unit.
2. Click **Management / Save / Load Configuration**.
3. Click the **Save Configuration** tab.

Save/Load Configuration

Save Configuration | Load Configuration

Save

Volume: VOLUME1

Folder: PUBLIC

File Name: .cfg

Also Save: E-Map Settings POS Settings

Notice: Save configuration will just save Camera Settings, Recording Settings, Event & Action Settings, E-Mail Settings, and Server Settings.


OK Cancel

4. Choose the volume.
5. Choose the folder which the configuration file will be generated into.
6. Insert the file name.
7. Check the box of **E-Map Settings** or **POS Settings** if you want to keep the configuration.
8. Click the **OK** button.
9. The configuration file will be generated into the chosen folder.

2.6.10 Load Unit Configuration / Default Settings

Load configuration can let you apply another unit's settings to the current unit. Load Default Settings will revert all of the unit's settings back to the default factory settings.

1. Find your unit through Windows Explorer (insert "\\\" plus the IP address of your unit).
2. Use the administrator's ID to log in.
3. Put the configuration file into the folder "public" in your unit.
4. Open Internet Explorer and log in to the unit.
5. Click **Management / Save / Load Configuration**.
6. Click the **Load Configuration** tab.

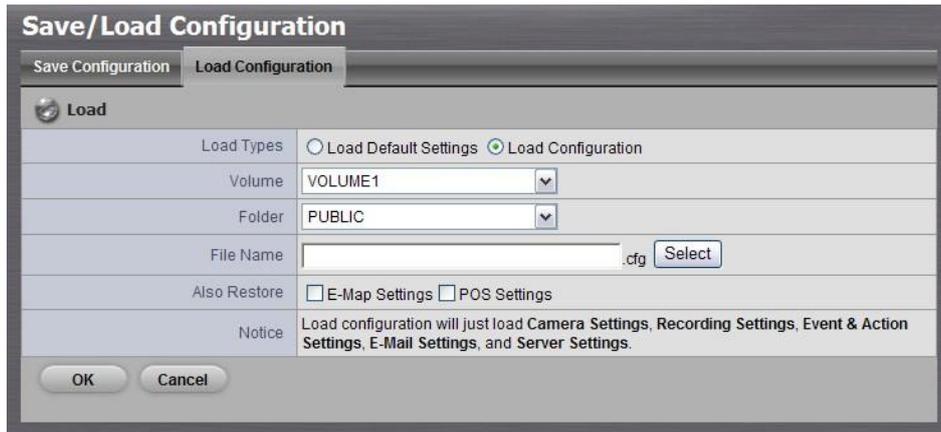

7. Check the **Load Configuration** or the **Load Default Settings** option. If choosing Load Default Settings, jump to step 11 directly.
8. Choose the volume.
9. Choose the folder “public”.
10. Select upgrade file or insert the file name.
11. Check the box of **E-Map Settings** or **POS Settings** if you want to restore the configuration.
12. Click the **OK** button.
13. In the confirmation box, type “YES” into the field provided, then click the **OK** button.
14. The system will begin to load the settings into your unit.

Caution



If there is POS database existed in NVRmini, loading configuration with different POS application config is likely to make the original POS data unsearchable.

Caution



In the condition of saved configuration is without E-map or POS settings, selecting loading configuration with E-map/POS settings will lead you get the default. The original E- map/POS settings (if any) are covered and untraceable.

Note




User account and privilege will be kept even if loading default setting, while camera settings, recording schedule, event & action settings, E-mail setting and server settings won't be.

2.7 System

2.7.1 View System Information

1. Open Internet Explorer and log in to the unit.
2. Click **System / System Information**.
3. Click the **System Information** tab.

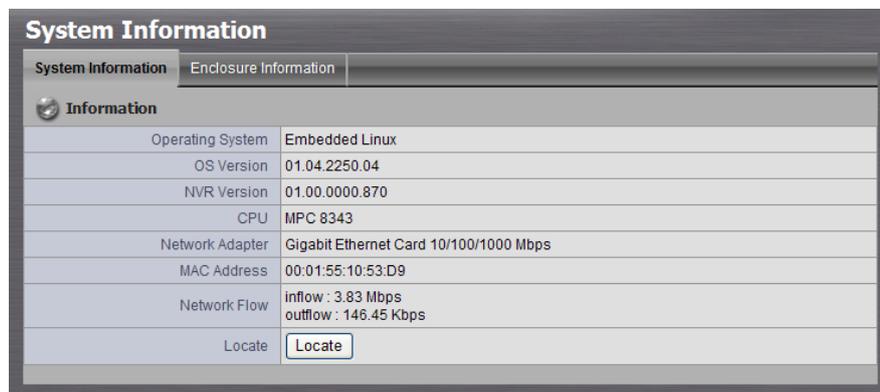

The screenshot shows a web interface titled "System Information". It has two tabs: "System Information" (selected) and "Enclosure Information". Below the tabs is a table with the following data:


Information	
Operating System	Embedded Linux
OS Version	01.04.2250.04
NVR Version	01.00.0000.870
CPU	MPC 8343
Network Adapter	Gigabit Ethernet Card 10/100/1000 Mbps
MAC Address	00:01:55:10:53:D9
Network Flow	inflow : 3.83 Mbps outflow : 146.45 Kbps
Locate	<input type="button" value="Locate"/>

The system information includes the following items.

- **Operating System:** Embedded Linux
- **OS Version:** OS version
- **NVR version:** NVR system version
- **CPU:** CPU model number
- **Network Adapter:** Network type and speed
- **MAC Address:** MAC address of this unit
- **Network Flow:** Input/ output network flow
- **Locate:** The buzzer in the unit will sound to let you know where the unit is.

2.7.2 View Enclosure Information

1. Open Internet Explorer and log in to the unit.
2. Click **System / System Information**.
3. Click the **Enclosure Information** tab.

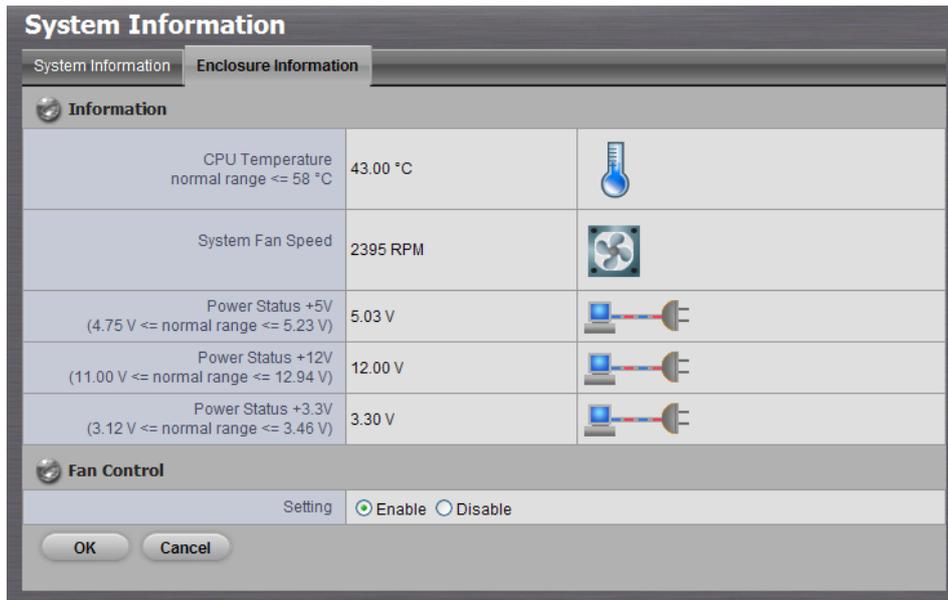

The enclosure information includes the following items.

- **CPU temperature:** Normal range <= 58°C
- **System Fan Speed:** Normal range >= 1800 RPM
- **Power Status 5V:** 4.75 V <= normal range <= 5.23 V
- **Power Status 12V:** 11.00 V <= normal range <= 12.94 V
- **Power Status 3.3V:** 3.12 V <= normal range <= 3.46 V


Note



If any value is out of specification, see **Check Enclosure Status** for details.

2.7.3 Upgrade the System

1. Find your unit through Windows Explorer (insert “\\” plus the IP address of your unit).
2. Use the administrator’s ID and password to log in.
3. Put the upgrade file into the folder “public” in your unit.
4. Open Internet Explorer and log in to the unit.
5. Click **System / System Upgrade**.
6. Click the **Firmware Upgrade** tab.

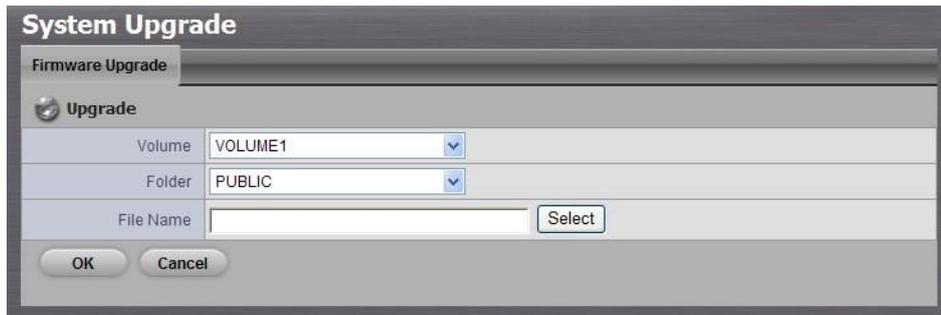

7. Choose the volume.
8. Choose the folder “public”.
9. Select upgrade file or insert the entire file name, including the extension name.
10. Click the **OK** button.
11. The system will begin the upgrade process.
12. After upgrade, the system will restart. You need to re-access the unit again after this.

Caution




If the current FW version is **v1.0** (NVR FW: 01.00.XXXX.951), please upgrade to **v1.2** (NVR FW: 01.00.XXXX.1247) before upgrading to further versions.

FW version reference: http://support.nuuo.com/mediawiki/index.php/NVRmini_versions

2.7.4 System Date and Time Setup

1. Open Internet Explorer and log in to the unit.
2. Click **System / Date / Time**.
3. Click the **Setup** tab.

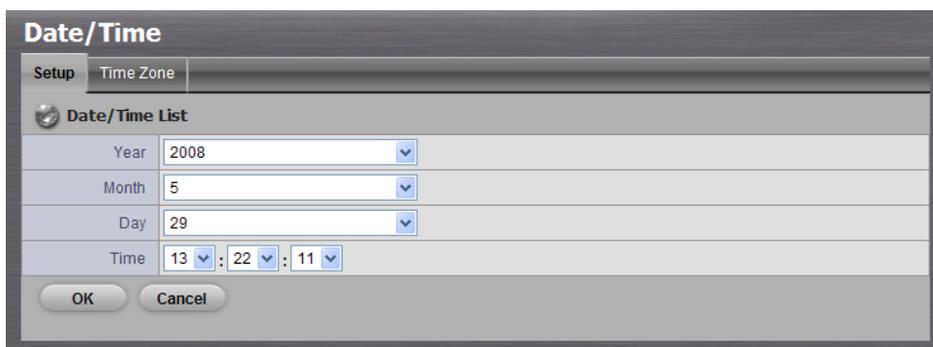

4. Choose the year.
5. Choose the month.
6. Choose the day.
7. Choose the time.
8. Click the **OK** button.

Caution



When you modify the date or time of the system, the system may find the wrong data when searching the recorded data. Backup the recorded data before changing the time.


Note



After you modify the date or time of the system, system will restart automatically.

2.7.5 Daylight Saving Time Setup

1. Open Internet Explorer and log in to the unit.
2. Click **System / Date / Time**.
3. Click the **Time Zone** tab.

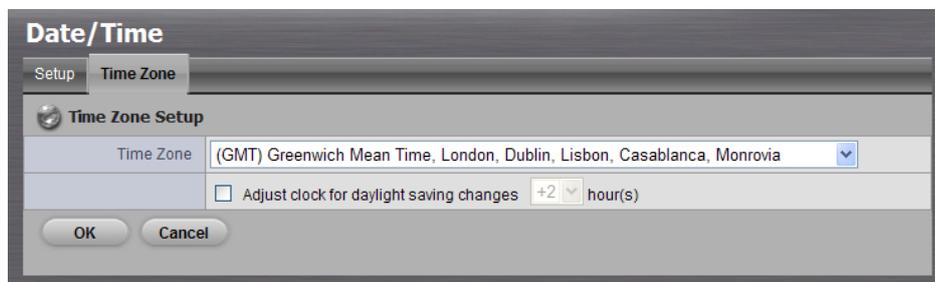


4. Check the **Adjust clock for daylight saving changes** option.
5. Choose the increment for daylight saving time in your location.
6. Click the **OK** button.

2.7.6 Enable and Disable the Buzzer

There is a buzzer in the unit. When the unit finishes booting or when a problem is detected, this buzzer will sound. This buzzer is enabled by

default. You can disable/enable this buzzer with the following steps. (We recommend that this buzzer should be enabled.)

1. Open Internet Explorer and log in to the unit.
2. Click **System / Buzzer**.
3. Click the **Setup** tab.

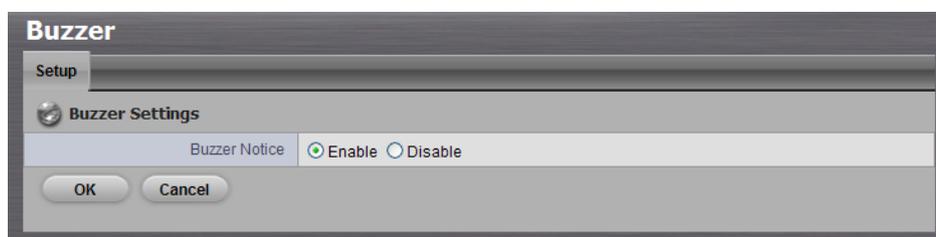


4. Check the **Enable** or **Disable** option.
5. Click the **OK** button.

2.7.7 View UPS Status

If you have an APC Uninterruptable Power Supply (UPS) attached to your unit, you can check its status with the following steps.

1. Open Internet Explorer and log in to the unit.
2. Click **System / APC UPS**.
3. Click the **Information** tab.

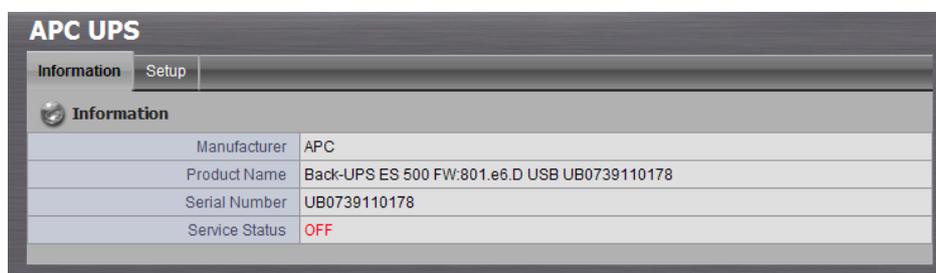


The Information tab displays the status of the UPS. If there is no UPS connected or recognized, the Service Status field reports "NO UPS."



2.7.8 UPS Setup

This feature enables you to tell your unit how long to run on UPS battery power and when to shutdown, after a power failure.

1. Attach the APC UPS to one of the unit's USB ports.
2. Open Internet Explorer and log in to the unit.
3. Click **System / APC UPS**.
4. Click the **Setup** tab.
5. Click the option button beside the shutdown option you want:

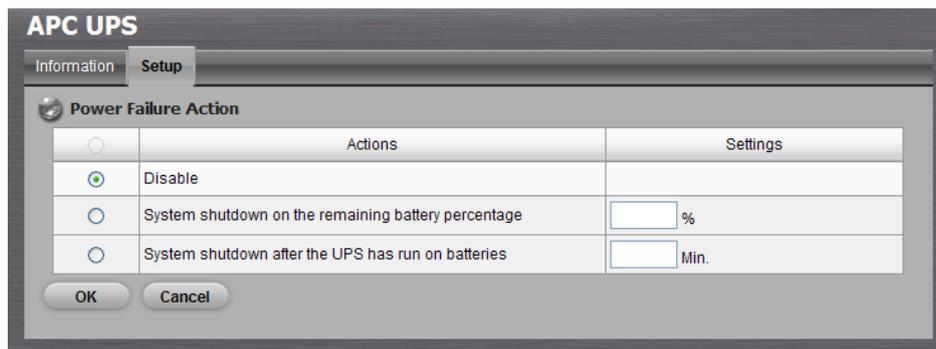


- **Disable**: Run until the UPS battery is depleted
 - **System shutdown on the remaining battery percentage**: Run until the UPS battery remains this percentage.
 - **System shutdown after the UPS has run on batteries**: Run on the UPS battery for a certain period of time.
6. If you choose battery percentage, enter a percentage amount in the % field.
 7. If you choose running time, enter the number of minutes into the Mins. field.
 8. Click the **OK** button.

2.7.9 Auto Power On

Automatically turn on the power when power resumes after power loss.

1. Open Internet Explorer and log in to the unit.
2. Click **System / Power**

3. Check the **enable** option.

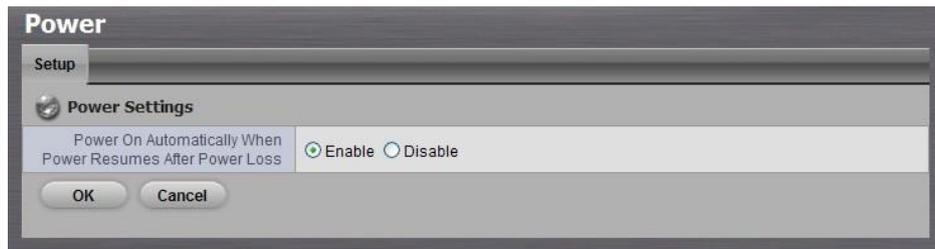

4. Click the **OK** button.

2.7.10 Restart the Unit

1. Open Internet Explorer and log in to the unit.
2. Click **System / Reboot / Shutdown**.
3. Click the **Options** tab.



4. Check the **Reboot** option.
5. Click the **OK** button.
6. In the confirmation box, click the **OK** button.

The restart procedure runs automatically. When the unit is fully online:

- The system status LED turns green (right)
- The buzzer beeps one time (if the buzzer is enabled)

Note



During system restart, none of your files will be accessible from your desktops / laptops.

2.7.11 Shut Down the Unit

The only time you need to shut down the unit is to replace the disk drive cooling fan or the power supply. During and after the shutdown, none of your files will be accessible from your desktops / laptops.

- **Shutdown by Software**

1. Open Internet Explorer and log in to the unit.
2. Click **System / Reboot / Shutdown**.
3. Click the **Options** tab.
4. Check the **Shutdown** option.
5. Click the **OK** button.
6. In the confirmation box, click the **OK** button.

- **Direct Shutdown**


1. Press and hold the power button for 5 seconds on your unit's front panel.
2. The system status LED will turn red.

3. POS

3.1 Introduction

3.1.1 System Introduction

NUUO POS, a Point of Sales Systems based on NUUO NVR/DVR/NVDR/NAS, provides financial transaction's surveillance solution in one central system. The architecture is as below; POS transaction data flows to NAS by Ethernet. Each Cash Register with an external receipt printer is connected by DB9 cable. The transaction information delivered in R232 format can be converted to Ethernet through SCB-C31A POS data capture converter.

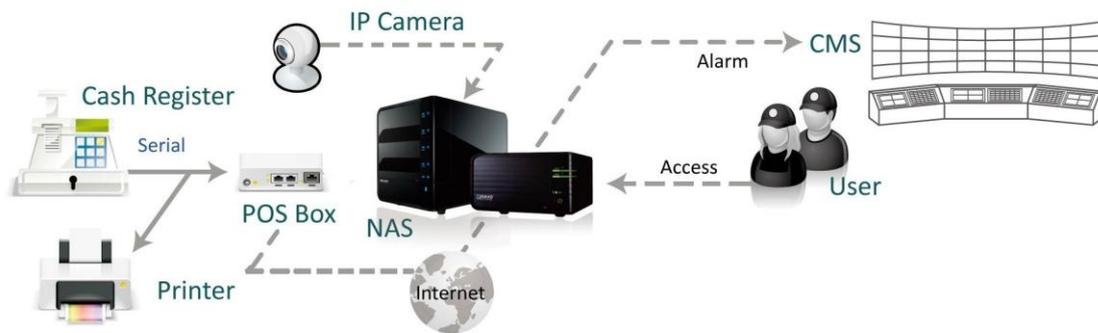

Definition of Terms

Terms	Definition
POS Original Data	Original data from POS. Usually with a lot of symbols and no line feed.
POS Transaction	Filtered result by user-defined tag-filter.

Product Specification

NUUO POS Box SCB-C31A	
Input	RS232
Output	Ethernet
DC In	DC +10V to +15V
Power consumption	500 mA
Operating Temperature	-20 to 65°C
Operating Humidity	0-90 % Non-Condensing

Baud Rate	110 bps to 230.4 kbps
Data Bits	5, 6, 7 or 8
Stop Bits	1, 1.5 or 2
Parity	None, Even, Odd, Mark, Space
Flow Control	None, RTX/CTS, XON/XOFF, DTR/DSR

3.1.2 Hardware Installation – SCB-C31A

To connect Cash Register, Printer, and SCB-C31A POS data capture converter together, please follow below steps:

Step 1: Please refer the user manual to setup Cash Register and printer.

Step 2: Using a “Y-shape” DB-9 cable, one DB-9 female connect to POS system and one DB-9 male connect to the receipt printer Y-shape (provided by Printer vendor).

Step 3: Using another DB-9 female connect to SCB-C31A POS Data Capture R232/Ethernet converter with Null modem.

Note





There are two kinds of serial cable: Straight pass-through and Null-Modem. The connection between SCB-C31 POS Data capture box and Y-cable must be null modem (in package).

Step 4: Check the system switch of the SCB-C31A is switched to OFF-OFF position.

Step 5: Connect SCB-C31A with power source.

Step 6: Connect SCB-C31A with internet port by RJ45 LAN cable.

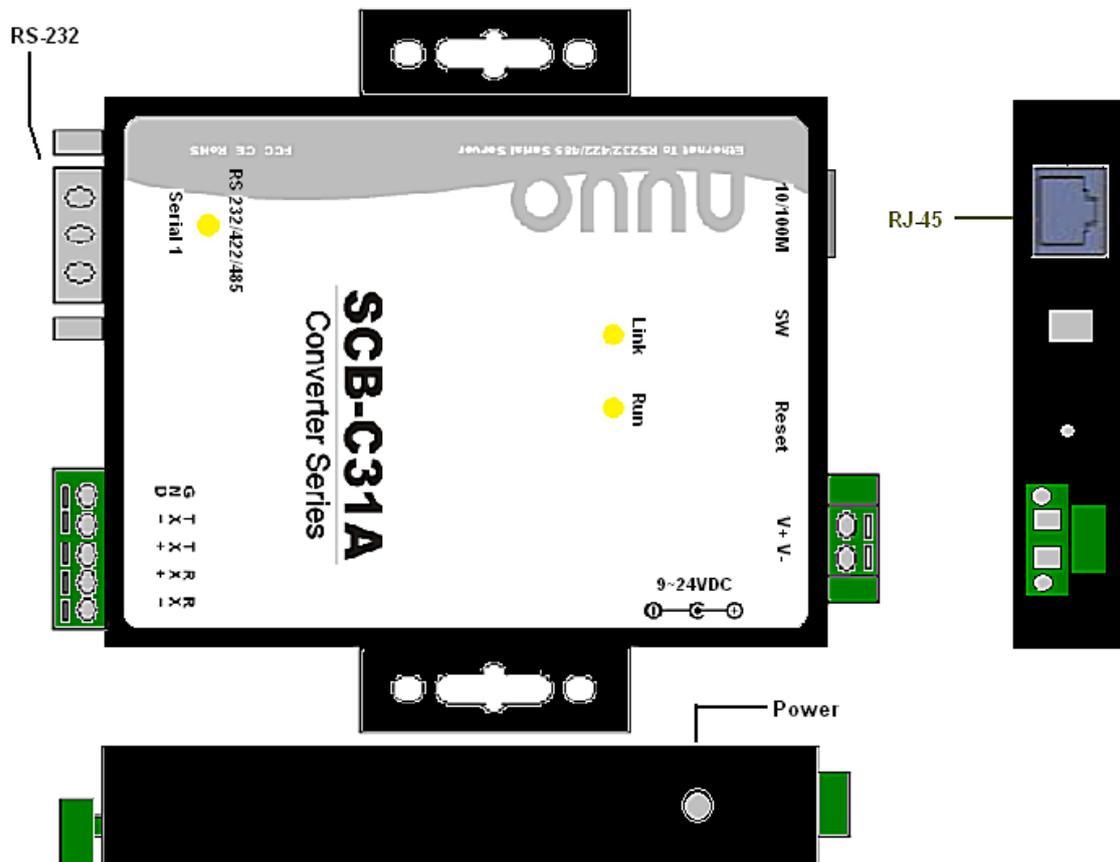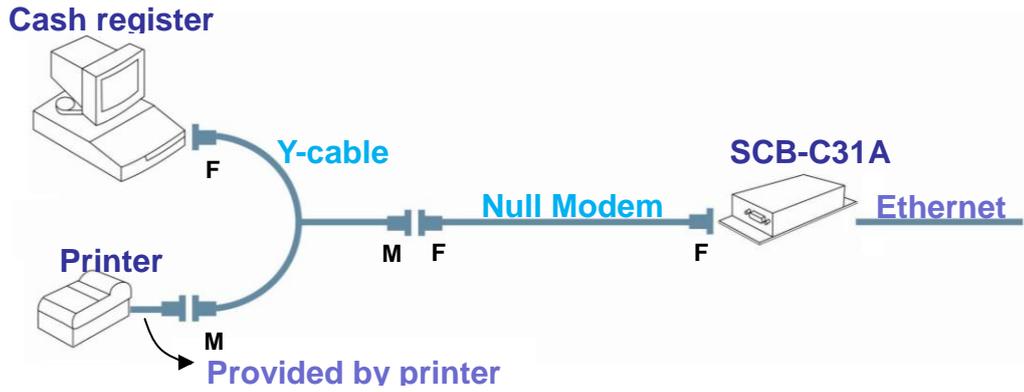

The LED Indicators:


LINK LED: Ethernet cable connection and data active.

RUN LED: System is ready (Blinking).

Serial 1: Transmitting/Receiving Indicator.

3.1.3 Software Installation – SCB-C31A

Step 1: Use IE-browser to setup SCB-C31A, the default IP address is **192.168.1.1**

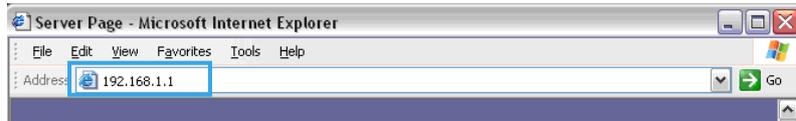

Step 2: Setup IP address and password in **Server** page, and click the **Save** button.

Note



Each time you switch the page of the web, please click **Save** at first. If you leave this page without saving, all changes will be ignored.

Step 3: Setup Password if needed. Password is only using to activate a security feature on the serial server. Once a password is entered it will be required to access the menu and make change of configuration when access.

Note



Please write down the Serial number and MAC address, these two parameters are necessary when user forget your password.

A screenshot of the "SCB-C31A Web Configuration - SCB-C31A" web interface. The page has a blue header and a left sidebar with "Server", "Serial Port", and "Operation" sections. A note at the top states: "Note: If you leave this page without saving, all changes will be ignored!". The main content area contains several configuration fields: "Server name" (SCB-C31A), "Serial number" (00814), "Version & Date" (1.3.30 & 050910), "Password" (highlighted with a red box), "DHCP" (Enable), "IP address" (192.168.1.29), "Netmask" (255.255.252.0), "Gateway" (192.168.1.1), "MAC address" (000B:B4:81:12:B8), "Link status" (100/Full Duplex), and "Hardware ID" (FP-1001-A2). At the bottom, there are buttons for "Save", "Default", "Running", and "Reset".

Step 4: Setup according to your POS or Cash Register. Usually all devices are default setting, you can reserve your time to pass this step.

Step 5: Please **restart/reset** the box after changing configurations to active setup.

To reset the unit manually apply power, insert a small plastic tool, and press lightly depressing reset located between the switch. Hold for 3 seconds and release. The Link and Run light will go out and turn back on. The SCB-C31A will revert to the last setting.


Note



Every time you change the configuration of SCB-C31, please check above setting, especially maximum connection and Remote IP address to avoid connection fail.

3.1.4 Connection via TCP Client

If the cash register possess network, please install system according to following diagram and purchase a POS license to activate this function.

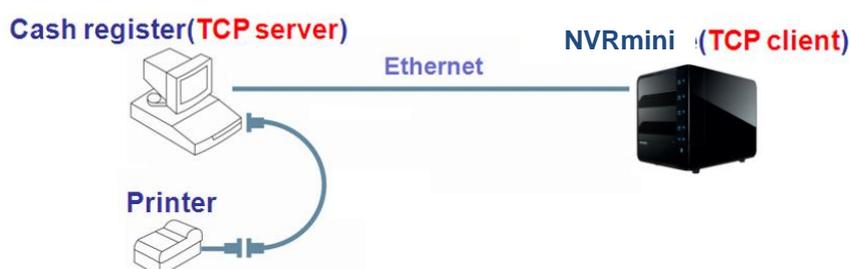

3.2 Software Setup

3.2.1 Activate POS License


If you are not the SCB-C31 user, you need to activate POS license before starting the following settings, please refer to [License Activation](#) for details.

3.2.2 NVR POS Setting

1. Open Internet Explorer and log in to the unit.
2. Click **POS & I/O / POS Settings**.



3. Click the **Settings** tab to set POS application.

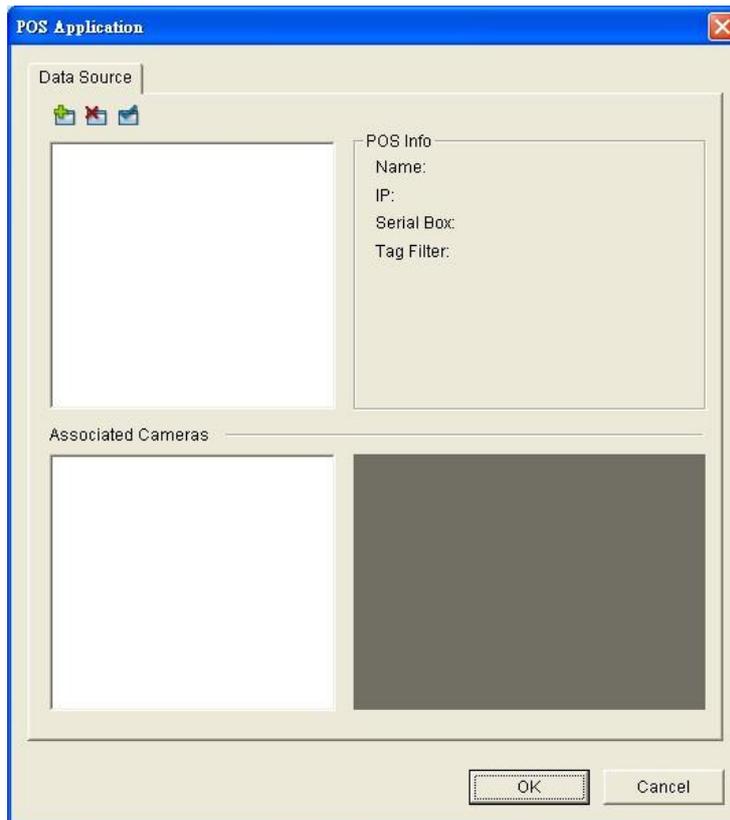


- **Data Source:** List of all the data sources.
 -  **Insert:** Click to insert POS and do the POS settings. See **Insert POS Setting** for details.
 -  **Delete:** Click to remove the selected POS from the list. See **Delete POS Device** for details.
 -  **Configure:** Click to configure the selected POS and modify the POS settings. See **Configure POS Setting** for details.
- **POS info:** The setting information of the selected POS on this window.

- **Name:** Name of the POS data source.
 - **IP:** IP of the POS data source.
 - **Serial Box:** The serial box data source used.
 - **Tag Filter:** Tag type to filter the data from POS. See **Tag Filter** for details.
- **Associated Cameras:** List of all the associated cameras of the selected POS.
4. Click the OK button to finalize the modification.

3.2.3 Insert POS Setting

1. Click  **Insert** button to open the **POS Setting** window.
2. Set up basic data source, including **Name**, **Model**, **IP address**, and **Port**. There are three types of models.
 - **SCB-C31:** The device possesses one POS license, and should be equipped with the cash register not working as TCP server.
 - **SCB-C31A:** The difference from SCB-C31 is not possessing one POS license, so user should activate POS license.
 - **TCP Client:** Cash register possesses with network, so no need to have SCB-C31A as a converter. POS license is needed.
3. After setting, click **Test Connection** to test POS device connection.

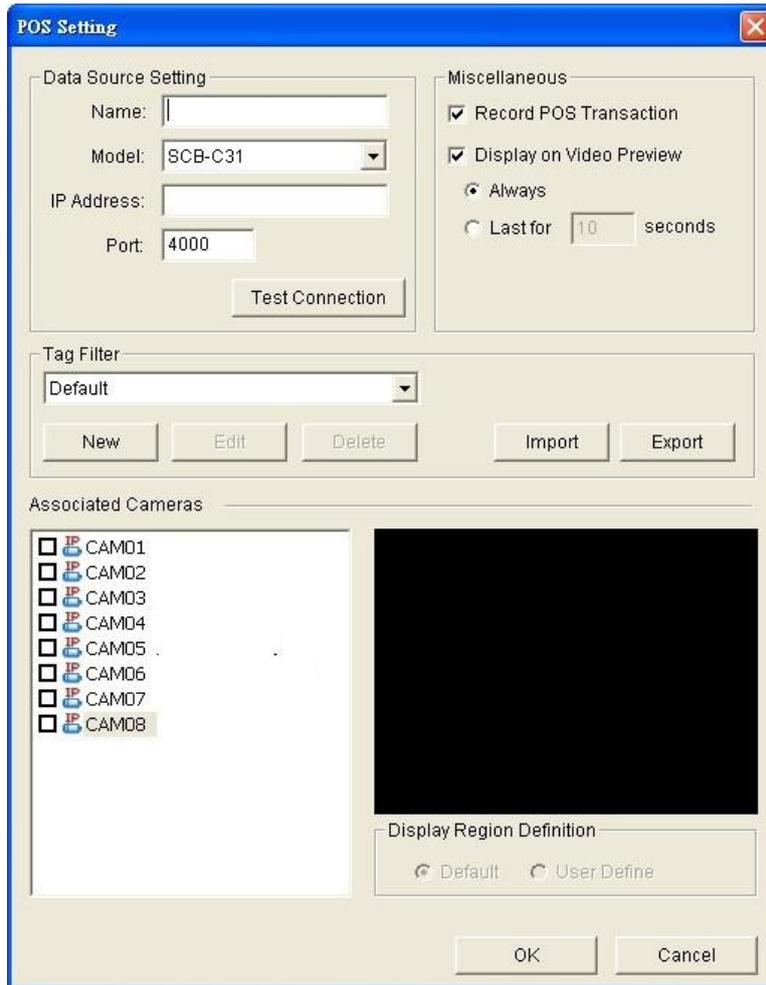

4. Set up Miscellaneous options, including **Record POS Transaction** and **Display on Video Preview**.
 - **Record POS Transaction:** Select this checkbox to record POS transaction data. Users are allowed to search the POS data.
 - **Display on Video Preview:** Select this checkbox to display POS transaction overlay on associated camera live video. Two types of transaction data display time:
 - **Name:** Name of the POS data source.
 - **Always:** Keep transaction data on video until receiving next transaction date.
 - **Last for ___ seconds:** Each transaction data only lasts on video for ___ seconds after receiving the last data of transaction.
5. Select **Tag Filter**. See **Tag Filter** for details.
6. Select the camera of **Associated Cameras** to display POS transaction data overlay on live video.

7. Set up display area for each camera video in **Display Region**

Definition.

- **Default:** The default display area is in the upper left corner of video image.
 - **User Define:** Enable **User Define**, and define display area by dragging rectangle
8. Click the **OK** button to save.

3.2.4 Delete POS Device

1. Choose POS device.
2. Click  **Delete** button to remove this POS device from the system.

3.2.5 Configure POS Setting

1. Choose POS device.
2. Click  **Configure** button to open the POS Setting window.
3. Refer to **Insert POS Setting** to modify configuration.

3.3 Tag Filter


The original transaction data from POS system is hard to read. Users can define filters to make the POS strings meaningful. The system also provides a simple default tag filter to filter out some common EPSON commands, users can base on this default tag filter to edit their customized filters.

3.3.1 Add New Tag Filter

1. Click  **Insert** button or choose a device and click  **Configure** button to open the **POS Setting** window.
2. Click **New** to open tag filter window.
 - **General:** Name of Tag Filter and Connect button.
 - **Original Data:** Original transaction data from POS device.
 - **Filtered Data:** Filtered data after definition.
 - **Filter Function:** Tool used for defining filter type.
 - **Filter List:** List of all filters.
 - **Data Tool:** Clear/import/export buttons to clear/import/export the

original and filtered data.

- **Filter Tool:** Upper/down buttons to arrange the priority of each filter; remove button to remove the filter from list.

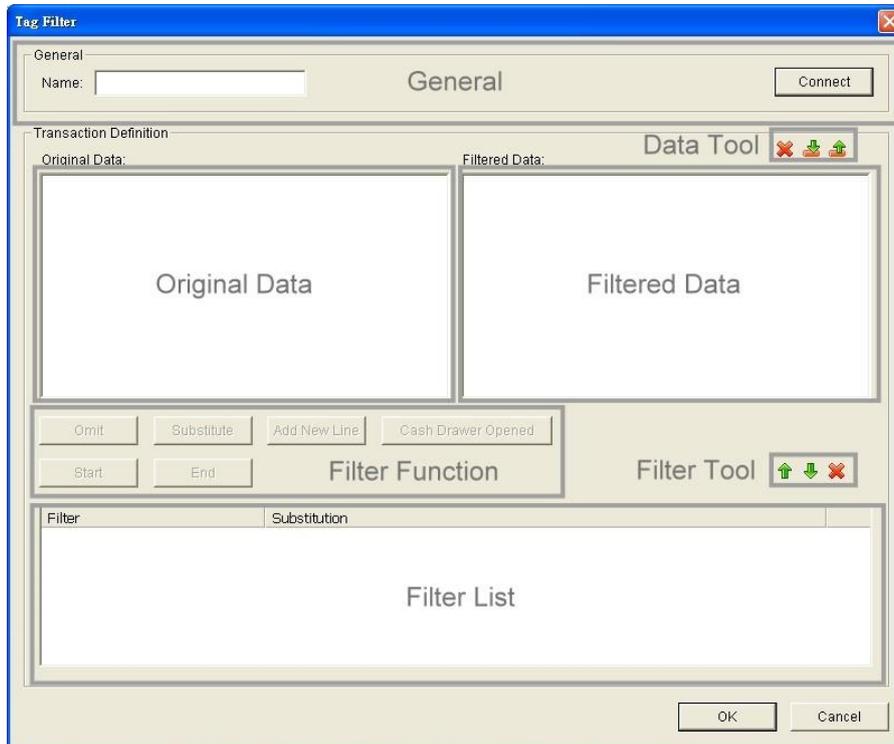


3. Enter name of this tag filter.
4. Click **Connect** button to capture POS transaction data from POS device. The original transaction data will be shown on the left window.

Note



If you don't want the data keep importing when editing filter, click **Disconnect** button to stop connecting.

5. Data Tools
 - **Clear:** Remove data from Original Data window and Filtered Data window.
 - **Import:** Reload exported binary data.
 - **Export:** Capture and export original binary data.
6. Start to edit tag filters. Click and drag to select text from Original Data window, and then use the below six buttons to define filters. The filtered transaction data will be shown on the right window.

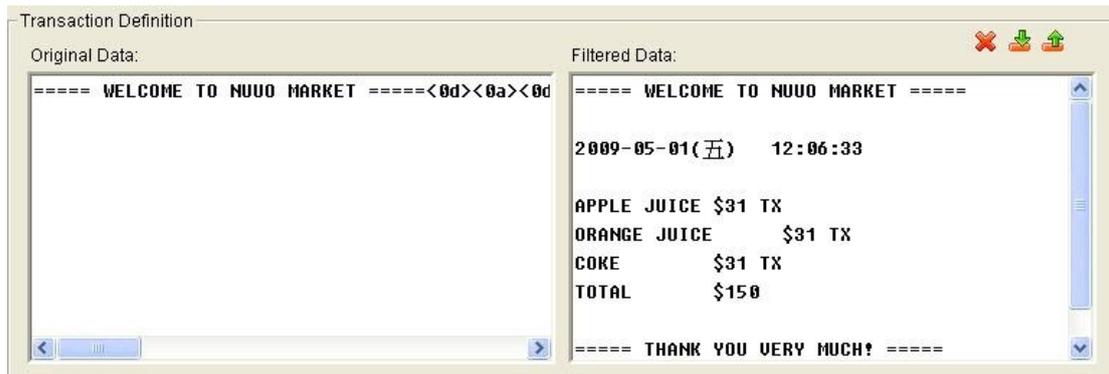


- **Omit:** Neglect the selected text which is meaningless or not important. The text will disappear on the right window.



- **Substitute:** Use another word(s) to replace the selected text. The system will pop up a substitution panel for replacing word(s) users want. The replaced text will be shown on the right window.




- **Add New Line:** Define the selected text as the symbol for changing to new line. The result will be shown on the right window.

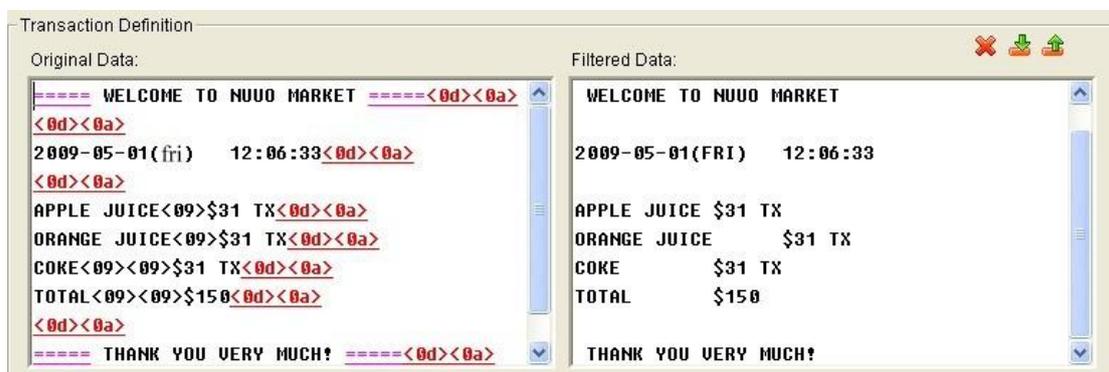


- **Start:** Define the selected text as the symbol for transaction beginning. The filtered data will be separated line as below.



- **Cash Register Opened:** Define the selected text as the symbol for opening cash register. The filtered data will be shown the **<Cash Drawer Open>** mark as below.

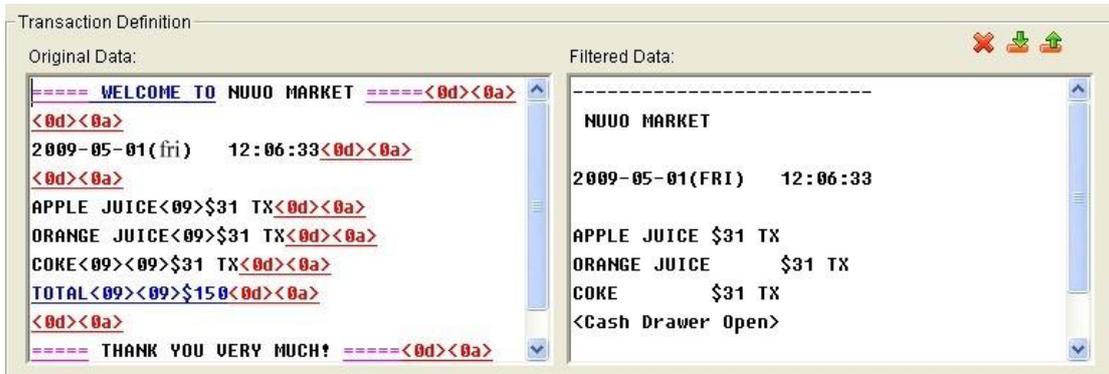

- **End:** Define the selected text as the symbol for transaction ending. The filtered data will be separated line as below.

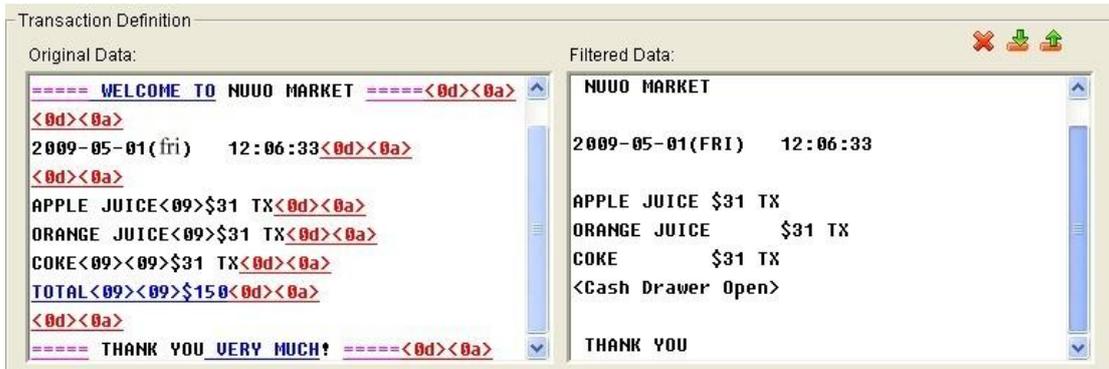

7. Filter Tools

-  **Up:** Move a tag filter up; the upper filter will be operated earlier.
-  **Down:** Move a tag filter down; the lower filter will be operated later.
-  **Delete:** Remove a filter from this tag filter list.

Filter	Substitution
 =====	
 fri	FRI
 <0d><0a>	<New Line>
 WELCOME TO	<Transaction Start>
 TOTAL<09><09>\$150	<Cash Drawer Open>
 VERY MUCH	<Transaction End>

8. Click the **OK** button to save.

3.3.2 Edit Tag Filter

1. Select Tag Filter name from drop-down menu.
2. Click **Edit** button.
3. Configure the Tag Filter window.
4. Click the **OK** button to save.

3.3.3 Delete Tag Filter

1. Select Tag Filter name from drop-down menu.
2. Click **Delete** button to delete it.

3.3.4 Import/Export Tag Filter


1. Click **Import/Export** button and select Import/Export URL.
2. Click **Open/Save** to Import/Export Tag Filter.
3. After importing tag filters, users can simply select tag filter from drop-down menu without editing new tag filter.

3.4 POS Display Font


The system allows users to set up the fonts of POS transaction data on live view video and playback video.

3.4.1 Live View

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View**.
3. Click the **General Setting** button to open **Live View Setting** window.

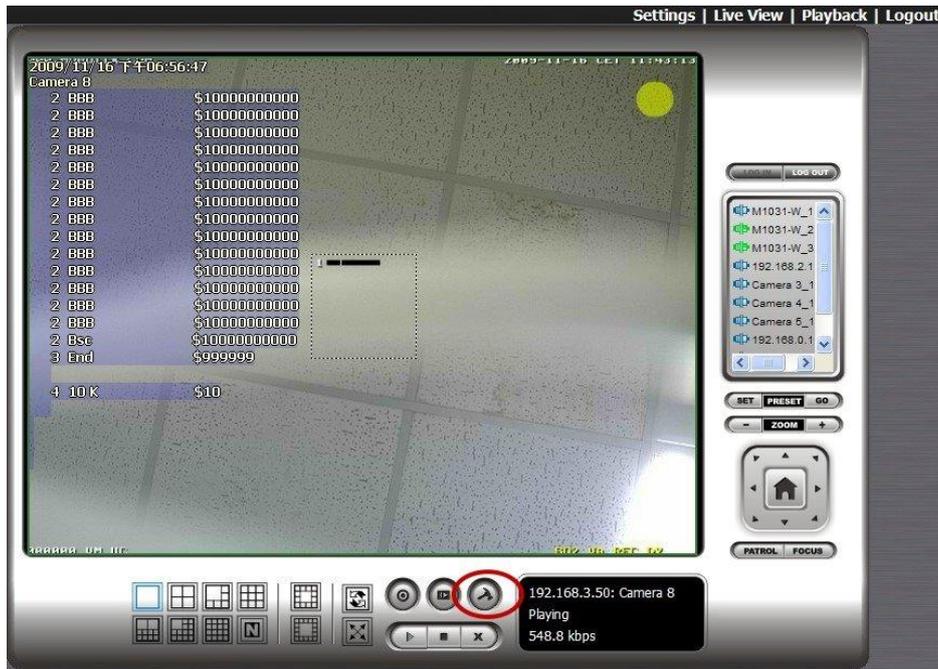


4. Select the font, font size, font color and background for the POS transaction data overlaid the video.

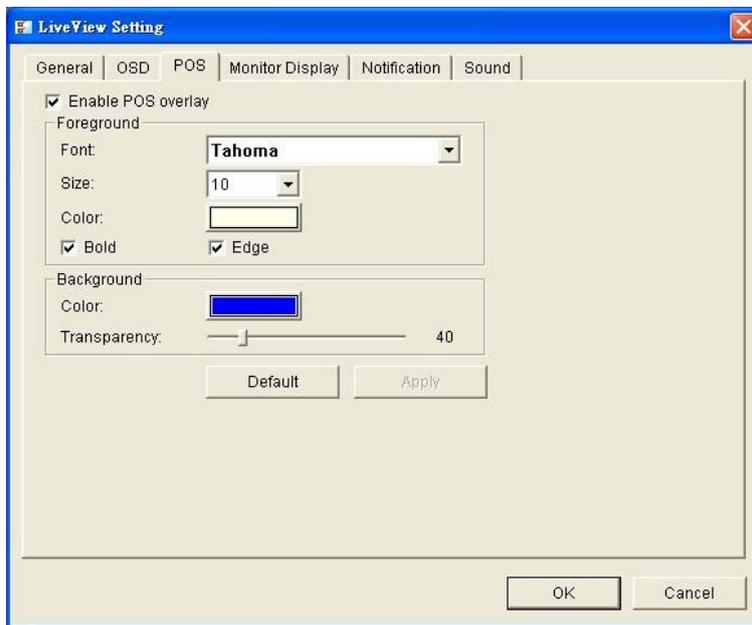


5. Click the **OK** button to save.

3.4.2 Remote Live Viewer

1. Startup > NUUO NVRmini > Remote Live Viewer
2. Click the **General Setting** button to open **Live View Setting** window.

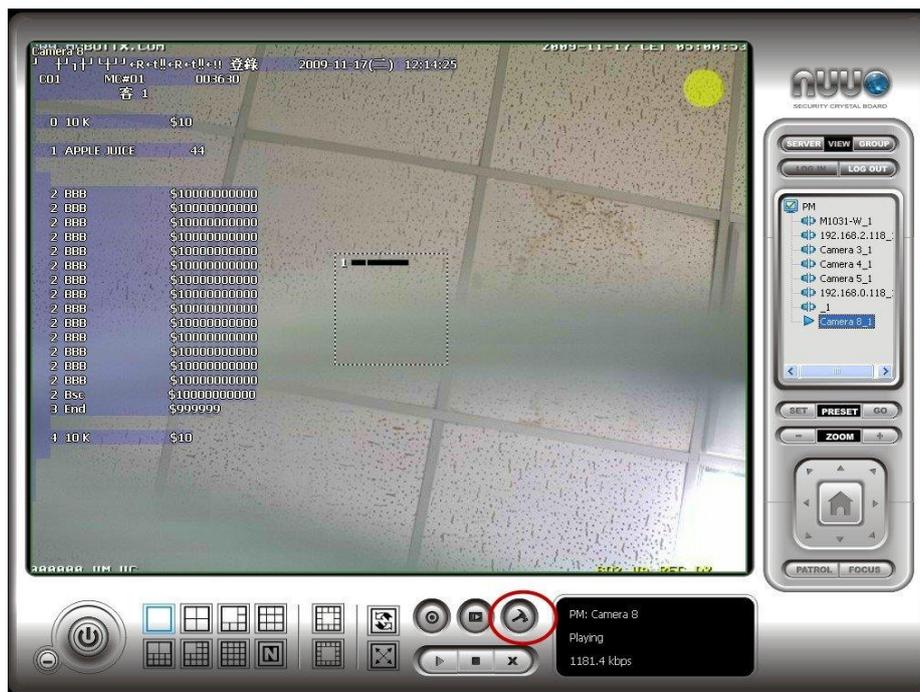

3. Select the font, font size, font color and background for the POS transaction data overlaid the video.

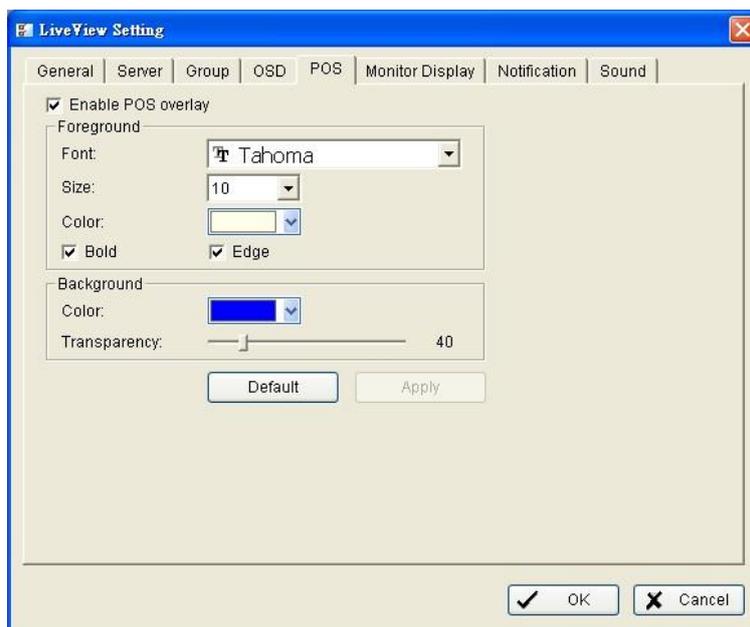


4. Click the **OK** button to save.

3.4.3 Playback

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button.
3. Click the **Setting** button to open **Setting** window.




4. Select the font, font size, font color and background for the POS transaction data overlaid the video. Also, select the type of transaction data display time.

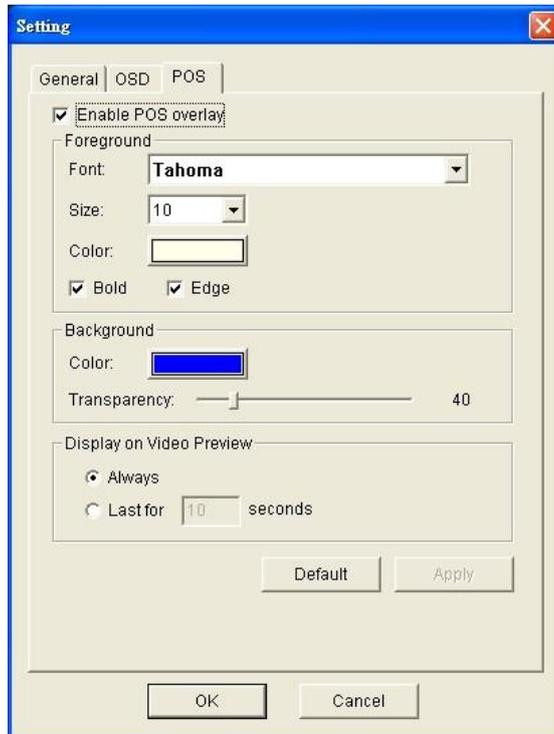


3.4.4 Playback System

1. Startup > NUUO NVRmini > Playback System

2. Click the **Setting** button to open **Setting** window.

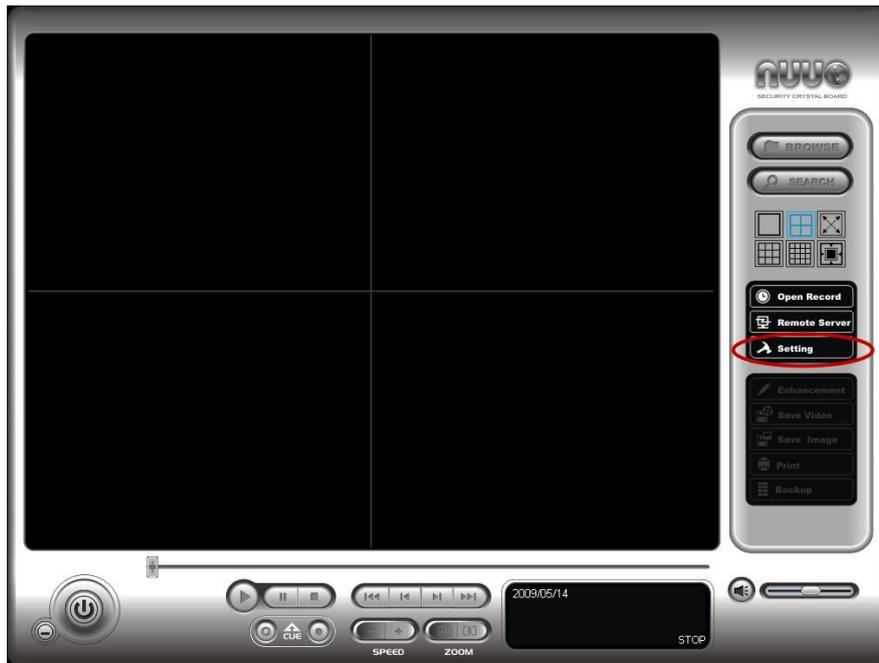

3. Select the font, font size, font color and background for the POS transaction data overlaid the video. Also, select the type of transaction data display time.

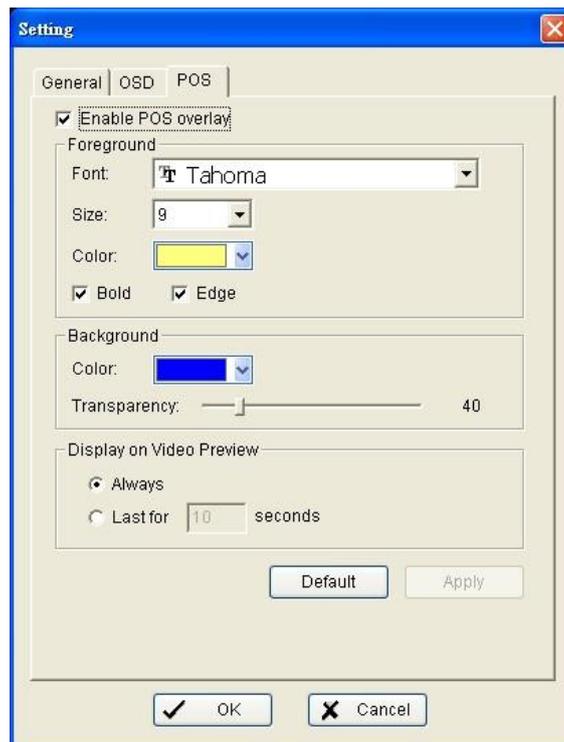

3.5 POS Transaction Data Search


POS Search tool is used to search key word of all transaction data.

3.5.1 Search POS Transaction Data through Playback

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button.
3. Click the **Open Record** button to open **Data Time Search Dialog** window.



4. Click the **POS Search** button  to open **POS Search Dialog** window.

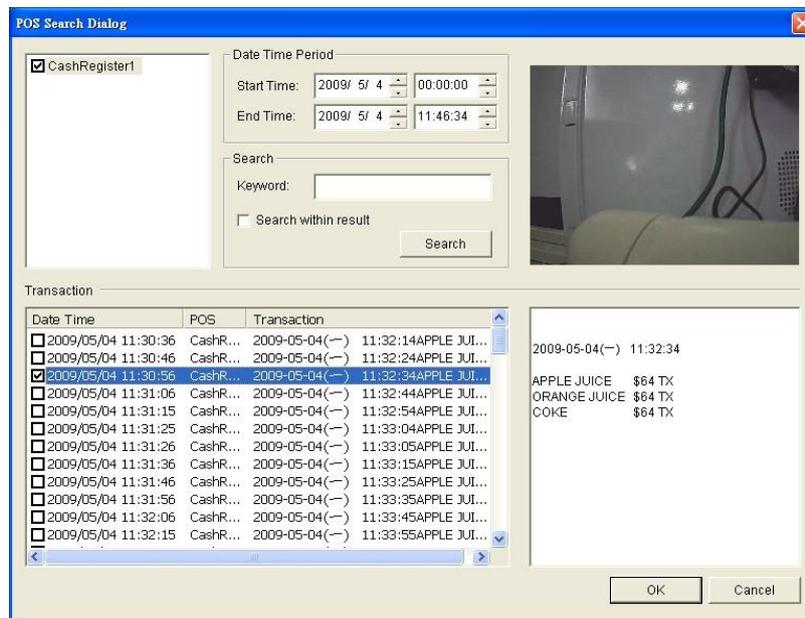

5. Select a POS device(s) from the POS list.
6. Set up Start Time and End Time in **Data Time Period** section.

7. Enter the keyword you want to search.
8. Click the **Search** button, the results will be shown in Transaction table.
9. Select an item from Transaction table, the transaction detail will be shown in the table of lower right corner, and the recorded video of associated camera will be shown in the upper right corner.
10. Select the checkbox of **Search within result**, and enter a keyword, you can search the data within the results.

3.5.2 Search POS Transaction Data through Playback System

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button to open **Data Time Search Dialog** window.
3. Click the **Remote Server Site**  icon on the top of the window to select the server users want to access.
4. Follow the step 4 through 10 of **Search POS Transaction Data by Playback** to search the data.

3.6 Playback Video with POS Data


Enable POS overlay in **Setting** window to view recorded video with POS transaction data (Refer to **POS Display Font**). If the option is enabled, the system will auto display transaction data when playing recorded video. There are two modes to select video period.

3.6.1 Select Period by POS Search

1. Refer to **POS Transaction Data Search**.
2. Select the transaction data from the result list, and click **OK**.

Date Time	POS	Transaction
<input type="checkbox"/> 2009/05/04 11:30:36	CashR...	2009-05-04(一) 11:32:14APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:30:46	CashR...	2009-05-04(一) 11:32:24APPLE JUI...
<input checked="" type="checkbox"/> 2009/05/04 11:30:56	CashR...	2009-05-04(一) 11:32:34APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:06	CashR...	2009-05-04(一) 11:32:44APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:15	CashR...	2009-05-04(一) 11:32:54APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:25	CashR...	2009-05-04(一) 11:33:04APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:26	CashR...	2009-05-04(一) 11:33:05APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:36	CashR...	2009-05-04(一) 11:33:15APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:46	CashR...	2009-05-04(一) 11:33:25APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:31:56	CashR...	2009-05-04(一) 11:33:35APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:32:06	CashR...	2009-05-04(一) 11:33:45APPLE JUI...
<input type="checkbox"/> 2009/05/04 11:32:15	CashR...	2009-05-04(一) 11:33:55APPLE JUI...

3. The period you select from POS search results will be selected automatically.

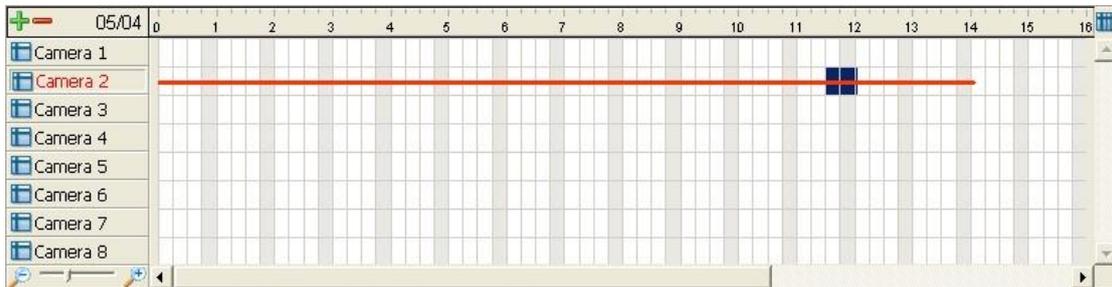

4. Click **OK** to playback videos.

3.6.2 Select Period by Data & Time through Playback

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button.
3. Click the **Open Record** button to open **Data Time Search Dialog** window.
4. Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in **Date Time Period** section after choosing cameras.
5. Click **OK** to playback videos.

3.6.3 Select Period by Data & Time through Playback System


1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button to open **Data Time Search Dialog** window.
3. Click the **Remote Server Site**  icon on the top of the window to select the server users want to access.
4. Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in **Date Time Period** section after choosing cameras.
5. Click **OK** to playback videos.

3.7 Backup Video with POS Data

There are three ways to backup video with POS transaction data.

3.7.1 Backup through Internet Explorer

1. Open Internet Explorer and log in to the unit.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.

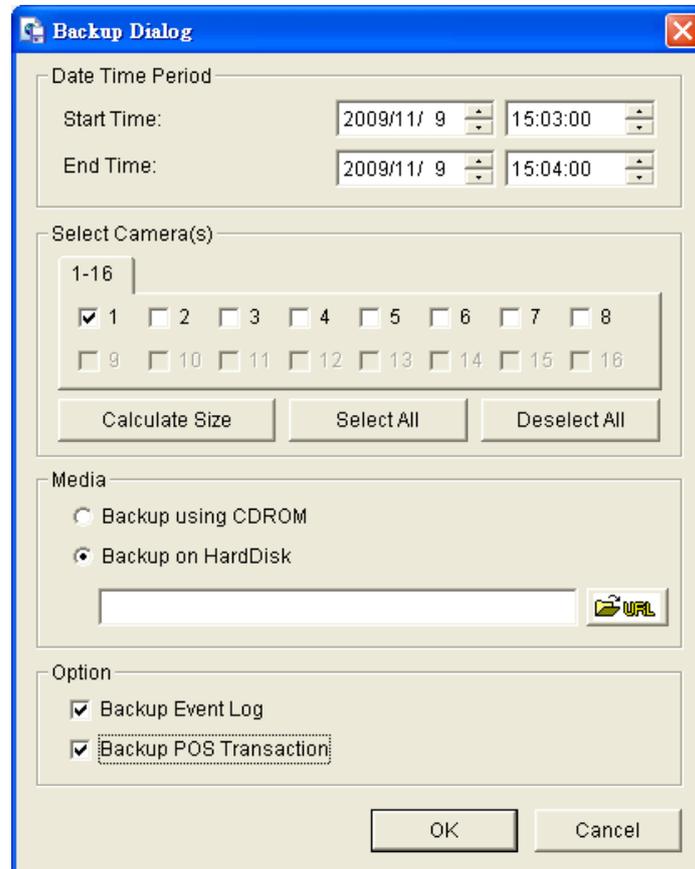

4. Check the **Backup POS Transaction** option.
5. Set the Start Time and End Time you want to backup.
6. Select the cameras you want to backup.
7. Select the directory you want to save the backup data.
8. Click the **Backup** button.
9. The system will then begin backup process automatically.

3.7.2 Backup through Playback System

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.

4. Check the **Backup POS Transaction** option.
5. Set the Start Time and End Time you want to backup.
6. Select the cameras you want to backup.
7. Select the directory you want to save the backup data.
8. Click the **Backup** button.

3.7.3 Backup through Backup System


Please refer to step 1 to 14 of the content of **Backup and Delete Records**, and check the **Backup POS Transaction** option.

4. I/O

4.1 Introduction

4.1.1 System Introduction


NUUO provides remote I/O solution for NVRmini by connecting SCB-C31 with NUUO I/O Box SCB-C24/26/28. Refer to the below architecture, I/O device is connected directly with I/O Box, and input/output signal delivered in RS485 format are converted to Ethernet through SCB-C31. NVRmini can use the signals to do more sophisticated setup, such as starting recording when input triggered, triggering output as an event happened, and much more.

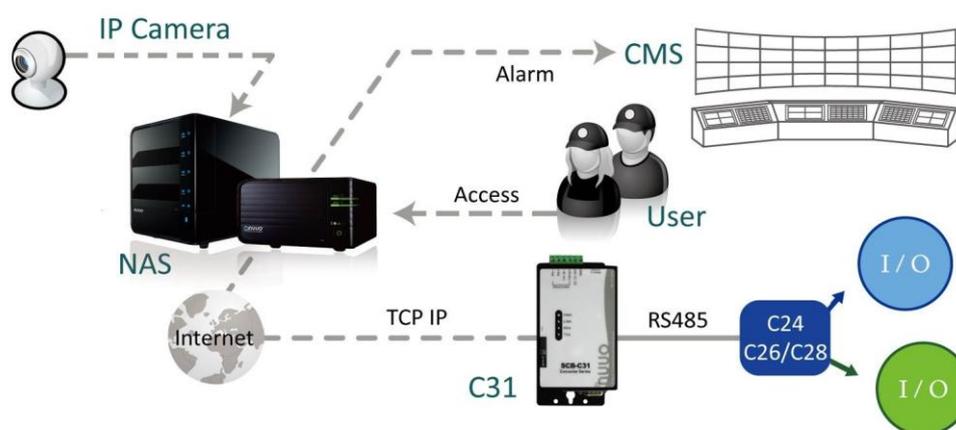

4.1.2 HW Installation

SCB-C24/26/28 must work with SCB-C31 (Ethernet-RS485 converter). Further, **the C31 Box cannot be used for POS and converter at the same time, and one C31 Box can be paired with one NAS unit only.** Please follow the steps below to configure the devices.

- Step 1: Check the system switch of SCB-C31 is switched to OFF-OFF position.
- Step 2: Connect SCB-C31 with power source.
- Step 3: Connect SCB-C31 with internet by RJ45 LAN cable.
- Step 4: Connect I/O Box with power source.
- Step 5: Connect SCB-C31 and I/O Box with cable, positive connection (TX+/D+ and DATA+) and negative connection (TX-/D- and DATA-). Take SCB-C31 with I/O Box SCB-C24 for example as below.

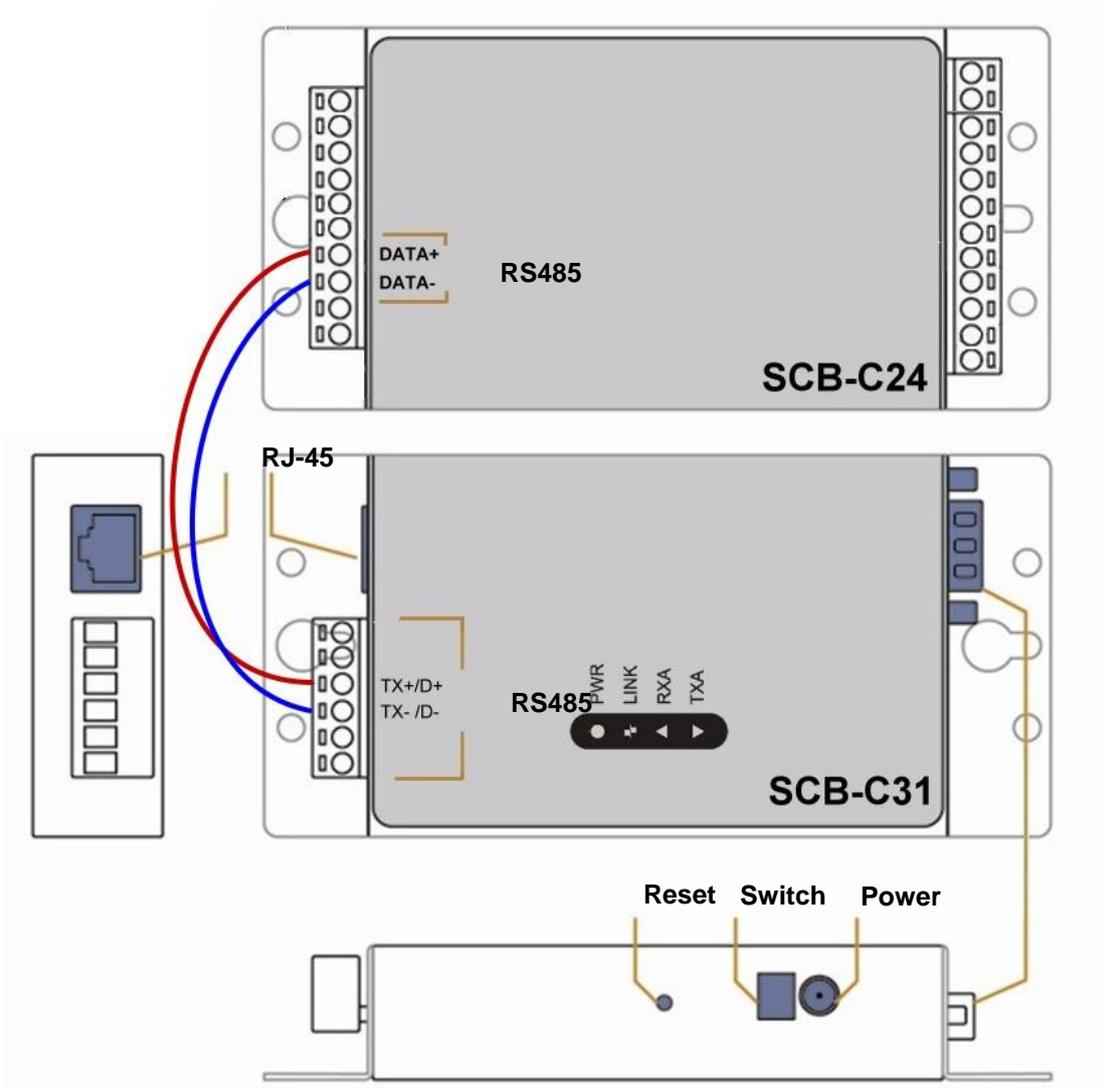

Important



Multiple I/O Boxes can be connected to a single SCB-C31. However, series connection of I/O boxes is forbidden.

Furthermore, the default ID for each I/O Box is the same. Please follow the direction to setup I/O Box one by one.

4.1.3 Software Installation – SCB-C31

Step 1: Open Internet Explorer to setup SCB-C31. The default IP address is 192.168.1.1.



Step 2: Setup IP address and port.

1. **Static IP Address**
2. **Server Listening Port:** The default port is 4000, which is not the port for setting page, but for signal transmission.

Serial Settings	
Data Baud Rate	9600
Data Bits	8
Data Parity	None
Stop Bits	1
Flow Control	None
Network Settings	
	<input checked="" type="checkbox"/> Enable DHCP
Static IP Address	192.168.1.1
Static Subnet Mask	255.255.255.0
Static Default Gateway	192.168.1.3
Static DNS Server	168.95.1.1
Connection Type	TCP
Transmit Timer	30
Server/Client	Server
Server:	
Server Listening Port	4000
Client:	
Destination IP	192.168.1.2
Destination Port	4000
	<input type="checkbox"/> Enable Reboot
	Apply Reset
	Firmware Upgrade

Step 3: Click the **Apply** button to activate configuration.

Important




Due to the stability of data transmission, one SCB-C31 can be paired with one NAS unit only.

4.1.4 Software Installation – SCB-C24/26/28

The default ID of I/O Box is identical. To avoid the conflict between Boxes, please connect only one Box with SCB-C31 and execute the setup application to change the ID from the default value (1).

1. Execute IOConfig.exe, type in the IP address and port of SCB-C31, and click the **Scan** button.

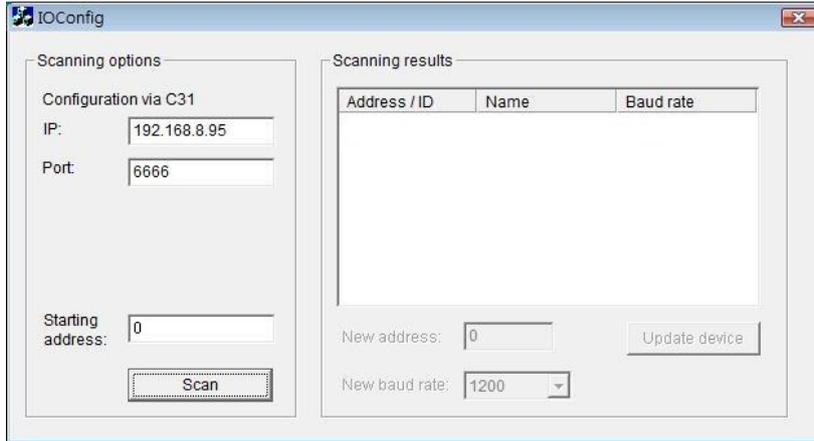


Note




IOConfig.exe starts scanning the ID from 0 to 255, and it may take around a minute to finish scan.

- When the I/O Box is discovered, click on the item and change the ID from the **New Address** field. Click the **Update device** button to activate the settings.

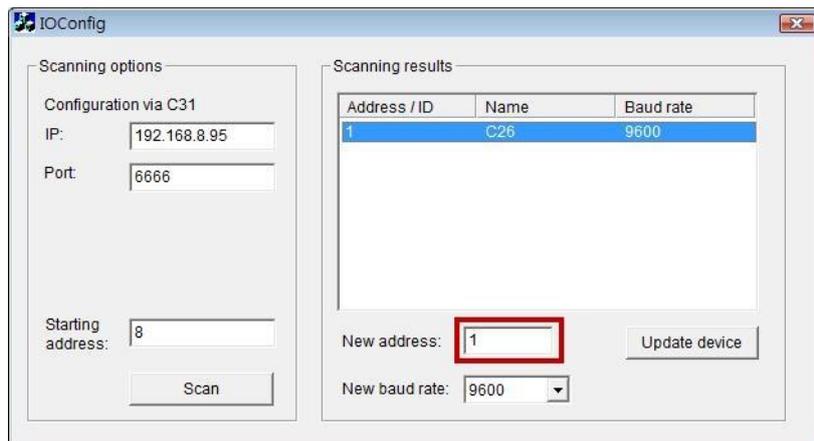

- Scan again to make sure the configuration is validated. In this case, we changed the ID to 10, so we can modify the number of "Starting address" to 10 to save the searching time.

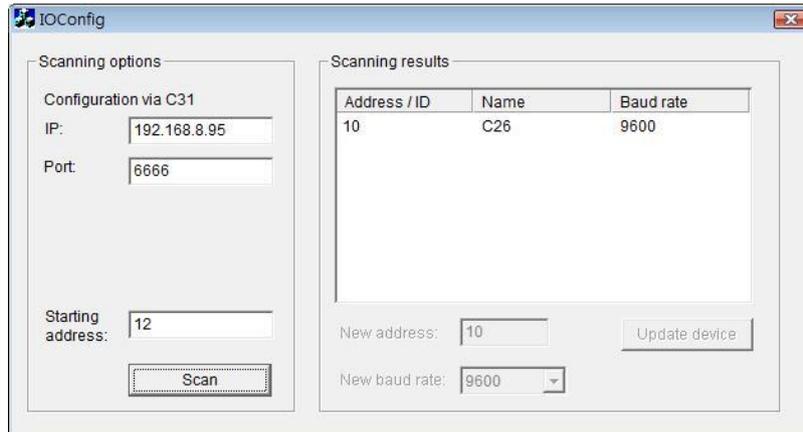


4. Refer to the **HW Installation** section to connect other I/O Box and repeat the steps 1 through 3 above to configure more I/O Boxes.

4.2 Software Setup

4.2.1 Add I/O Box

1. Open Internet Explorer and log in to the unit.
2. Click **POS & I/O / I/O Settings / I/O Box Settings**.
3. Enter the information of I/O box.

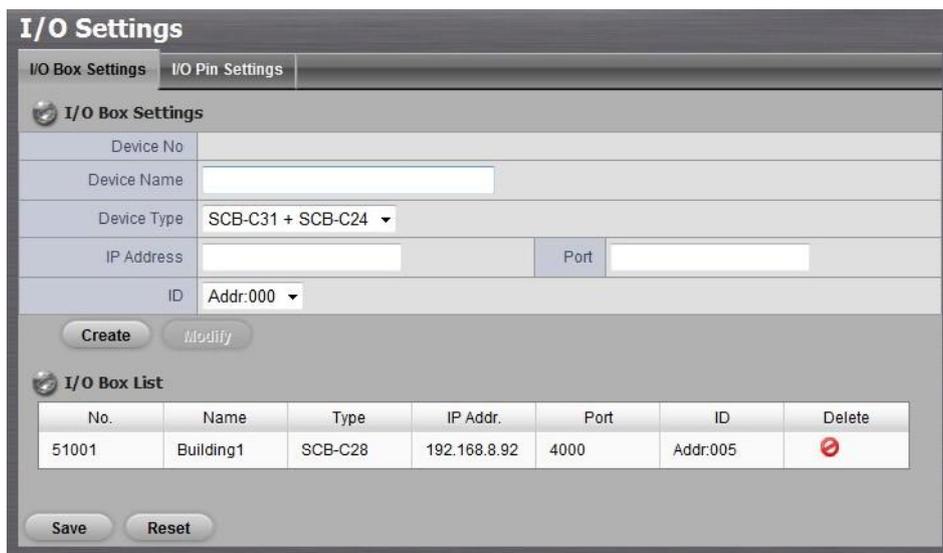

- **Device No:** The unique ID system distributes in sequence automatically.
- **Device Name:** The name of the I/O box.
- **Device Type:** The types of I/O box, including SCB-C24, SCB-C26,

and SCB-C28.

- **IP Address:** The IP Address of SCB-C31.
- **Port:** The transmission port of SCB-C31.
- **ID:** The ID of the I/O box.

4. Click the **Create** button, and the information will be updated in I/O Box List.
5. Repeat steps 3 and 4 to add more I/O boxes in the list.
6. Click the **Save** button to activate the settings. Meanwhile, system will distribute an unique ID to each device.

4.2.2 Modify I/O Box Information

1. Open Internet Explorer and log in to the unit.
2. Click **POS & I/O / I/O Settings / I/O Box Settings**.
3. Click the I/O box which you want to modify from the list.
4. Modify the information of this I/O box, and click the **Modify** button.
5. Click the **Save** button to activate the settings.

4.2.3 I/O Pin Setting

1. Open Internet Explorer and log in to the unit.
2. Click **POS & I/O / I/O Settings / I/O Pin Settings**.
3. All input and output pins are shown in this page, including the ones from cameras and I/O boxes. Check the box to enable a pin (defaulted), and type a name in the field for each I/O pin.

Device Name	I/O Pin	Name	Output Duration
Location 7	<input checked="" type="checkbox"/> Input #0	<input type="text"/>	
	<input checked="" type="checkbox"/> Output #0	<input type="text"/>	N/A
I/O BOX 51001(Building 2)	<input checked="" type="checkbox"/> Input #0	Gate	
	<input checked="" type="checkbox"/> Input #1	Lobby	
	<input checked="" type="checkbox"/> Input #2	First Floor	
	<input checked="" type="checkbox"/> Input #3	Second Floor	
	<input checked="" type="checkbox"/> Output #0	<input type="text"/>	10 sec.
	<input checked="" type="checkbox"/> Output #1	<input type="text"/>	N/A
	<input checked="" type="checkbox"/> Output #2	<input type="text"/>	N/A
	<input checked="" type="checkbox"/> Output #3	<input type="text"/>	N/A

Save Reset

4. For output pin, you can configure its duration time to control how long output acts after it's triggered. The duration range is 3 sec~60 sec. N/A stands for unlimited.
5. Click the **Save** button.

Note



If the box of I/O pin is unchecked, this pin won't be shown on relative application pages. In other words, you cannot do any setting/operation with this pin. See details in next section.

4.3 Relative Configuration and Application

4.3.1 Record on Input Trigger

Refer to [Recording Schedule / Event Setup](#).

4.3.2 Input and Responding Actions

Refer to [I/O Box Input and Responding Action Setup](#).

4.3.3 I/O Control Panel in Live View

Refer to [Live View Control Panel](#).

5. Live view

There are two ways to execute the live view function: with Internet Explorer or with the **Remote Live Viewer** application.


5.1 Internet Explorer

5.1.1 Live View Control Panel




- **PTZ Camera Control:** You may control the camera view by using the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support the PTZ function.
- **Set Preset Point / Go to Preset Point:** Adjust the camera view and click the  button to set up this view as preset point. Repeat the process to add more preset points. Click the  button to see the preset view.
- **Zoom:** Click the + or – button to zoom in or zoom out the view.


- **Play / Stop / Drop:** Select a camera / video and click this button to play/stop/disconnect a particular channel.
- **Information Display Window:** Display video information including server name, video current status, and bit rate for a selected channel.
- **Start Menu > E-Map:** Upload map and drag camera or I/O on it to track device location and alarm status with instant response when an event occurred. See details in the chapter of **E-Map**.
- **Start Menu > I/O Control Panel:** Utilize I/O device function remotely. User can remotely adjust the Output Pins by turning it on or off.

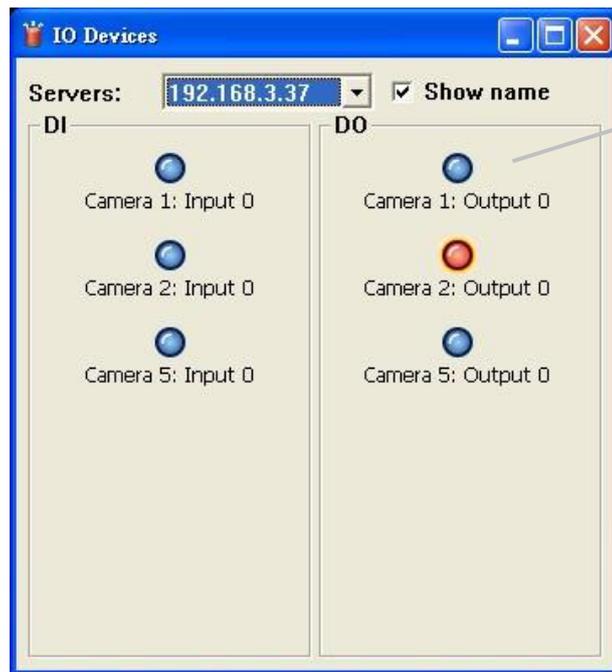

- **Auto Scan:** Activate auto scan to rotate the channels on the display screen. For instance, you may select to show only 4-split screen on the liveview, while connecting 16 channels to the system. With auto scan function, you are able to see all 16 channels by turns.
- **Layout:** Click to change the multiple-split layout.

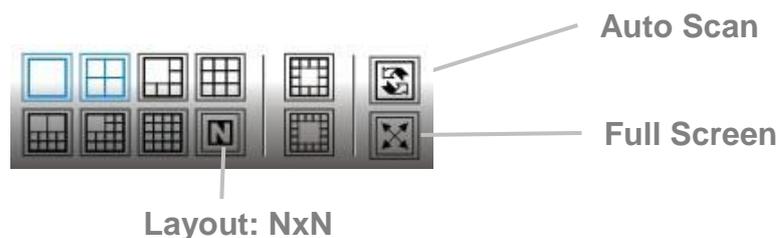

You can right click on the camera screen to enable the following function.

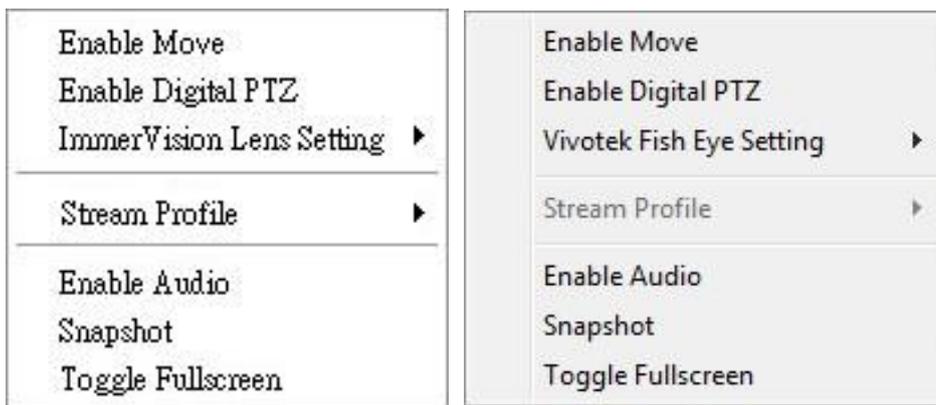

- **Enable Move:** Adjust the current view of camera which supports PT function by dragging the  button on the display screen.
- **Enable Digital PTZ:** Click the + or – button to zoom in or zoom out the view. The lower right square flashing on the video grid indicates the correspondent view of the camera.
- **ImmerVision Lens Setting:** Select the mode of lens, original, PTZ mode, Quad mode and Perimeter mode.
- **Vivotek Fisheye Setting:** Select the mode of lens, Original, Rectilinear mode, Full-view panorama mode, Dual-view panorama mode. Type of modes depends on lens location.
- **Stream Profile:** Select the stream profiles, original, low, minimum.
- **Enable Audio:** Enable audio on active channel(s).
- **Snapshot:** Select the snapshot function to capture a specific video image immediately.
- **Toggle Fullscreen:** Select it to view cameras with full screen. Press “Esc” or right click un-select full screen to go back to the original view.

Also, right click on camera list to duplicate and connect/disconnect designate cameras, and do other functions.



- **Duplicate Camera:** Select the duplicate camera function to create multiple views. The duplicated camera will be shown with green indicator as the right picture. Combine this function with digital PTZ, users are allowed to enlarge different spots and view them in different channels without failing to record the whole view.
- **Connect / Disconnect:** Click to connect or disconnect the designate camera.
- **Login / Logout Server:** Click to login or logout.
- **Connect All / Disconnect All:** Click to connect or disconnect all cameras.

5.1.2 Live View Setting

1. Open Internet Explorer and log in to the unit.
2. Set the cameras.
3. Click the **Live View** button on the top of the page.
4. Select a camera(s) from the camera list on the right and then drag it to where you wish the image to be displayed.



Important



When running Internet Explorer, do not use the function "Open in New Window". Using this function may cause Internet Explorer to become unstable.

5.1.3 General Setting

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **General** tab.




5. Check the **Enable audio on active channel** option to enable audio streaming on active channel. This function synchronizes with right click on camera to enable audio.
6. Check **Synchronize video frames** to avoid the tearing problem occurring in video display while increasing the CPU loading.
7. Click the **OK** button.

5.1.4 Stream Profile Setting

Select the preferred stream type of each camera as default live view profile.


1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Camera** tab.

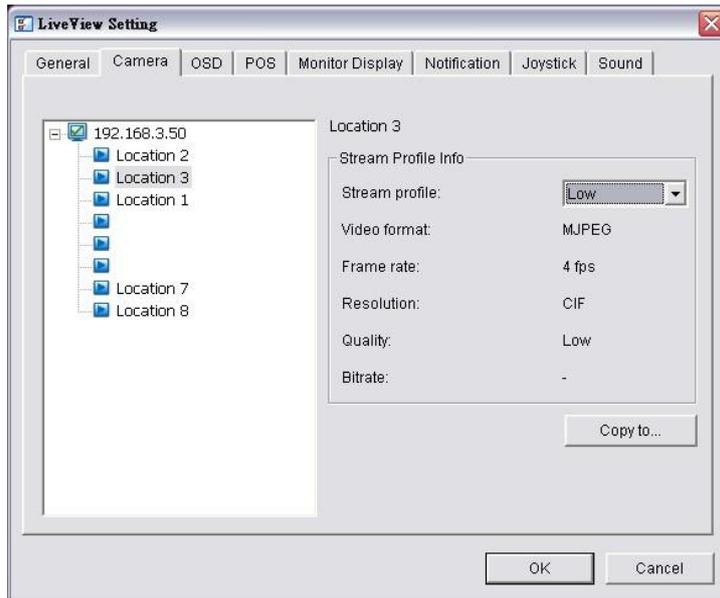

5. Adjust the stream profile of every camera with stream profile enabled in the **setting page**.
6. Click a camera and select its stream profile, and click the **Copy to...** button to apply this profile to other channels.
7. Click the **OK** button.

5.1.5 OSD (On-screen display) Setting


1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **OSD** tab.

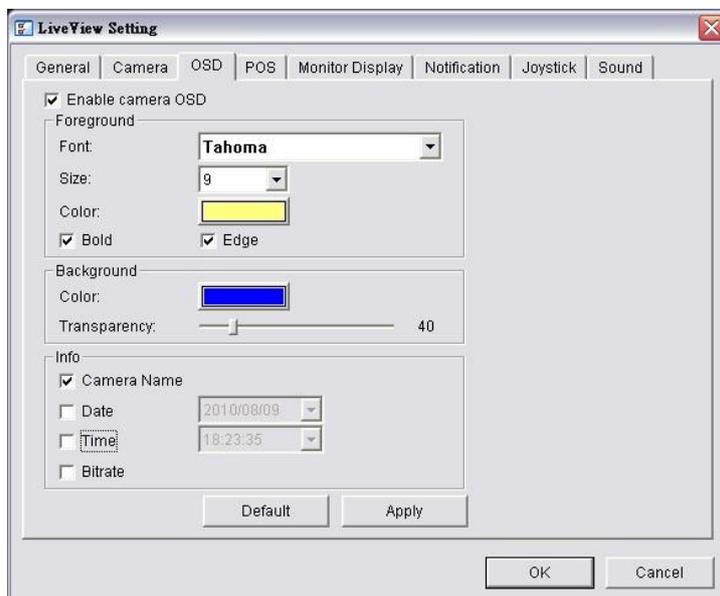

5. Check the **Enable camera OSD** option.
6. Set the foreground and background settings of the OSD.
7. Select which kinds of information will be displayed on the screen.
8. Click the **Apply** button to preview the result.
9. Click the **Default** button to back to the default settings if necessary.
10. Click the **OK** button.

5.1.6 Monitor Display Setting


1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Monitor Display** tab.

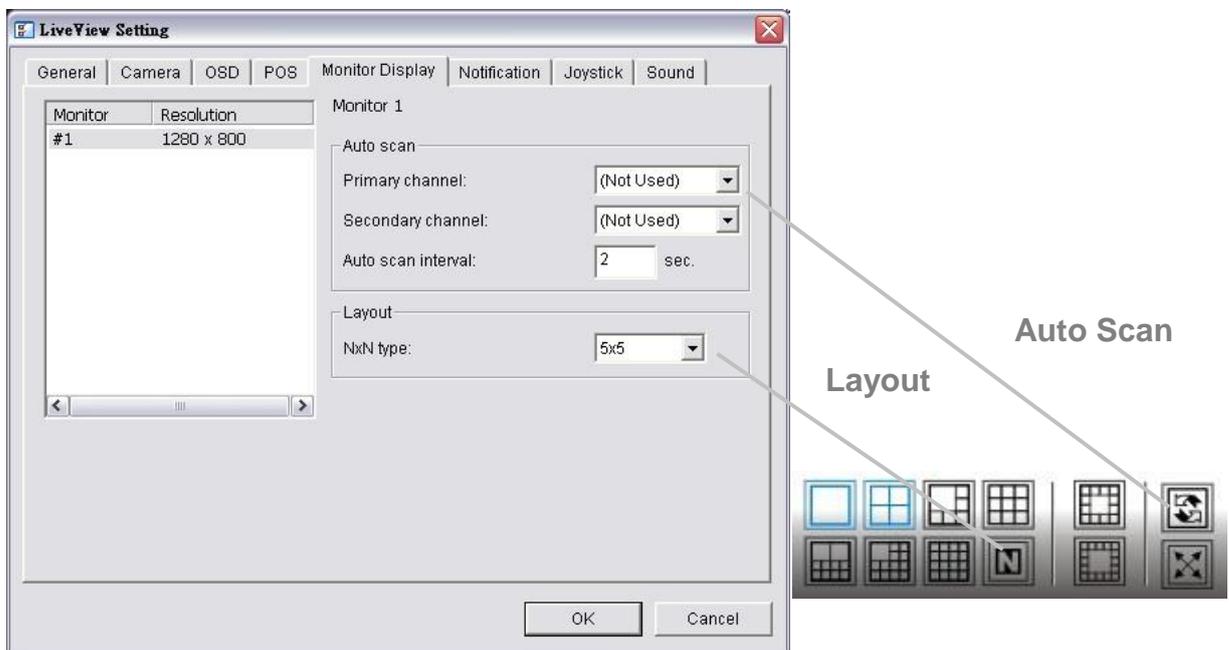

5. Select **Primary channel** which will always be on the screen when activating auto scan; while select **Secondary channel** which has second priority when activating auto scan. Enter the time interval for auto scan.
6. Select the screen division of NxN type.
7. Click the **OK** button.

5.1.7 Notification

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Notification** tab.

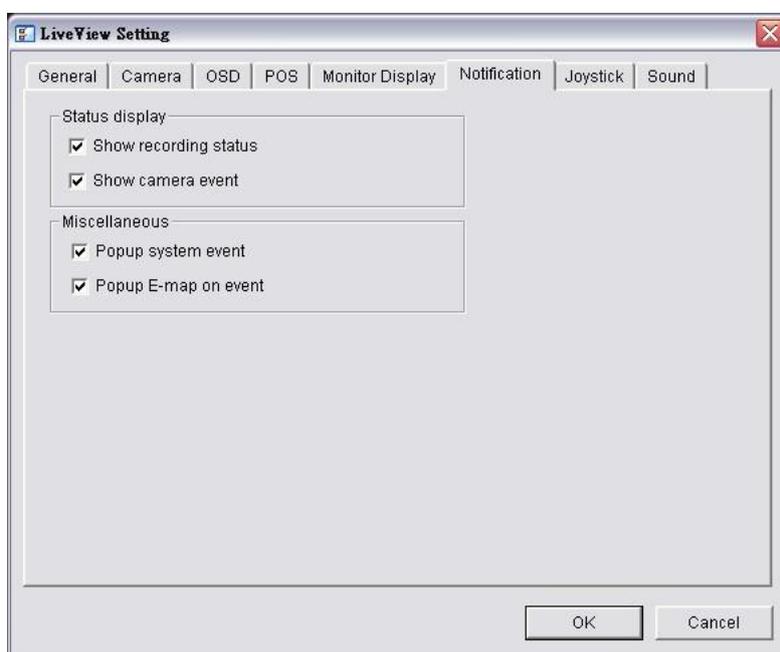

5. Check **Show recording status** to show the crystal ball with recording status on monitor display.
6. Check **Show camera event** to display the words of detected camera event on the correspondent screen.
7. Check **Popup system event** to pop up system event message dialog as a warning when a system event occurred.
8. Check **Popup E-map on event** to pop up E-map with event indicator when camera or I/O Box event occurred.
9. Click the **OK** button.


Note




“Popup E-map on event” only activates on event, which means that you should not only edit camera and I/O on E-map but setup camera motion, camera input and I/O Box input as an event. Refer to **Event & Action Management** to do the settings.

5.1.8 Set up Joystick Control

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Joystick** tab.

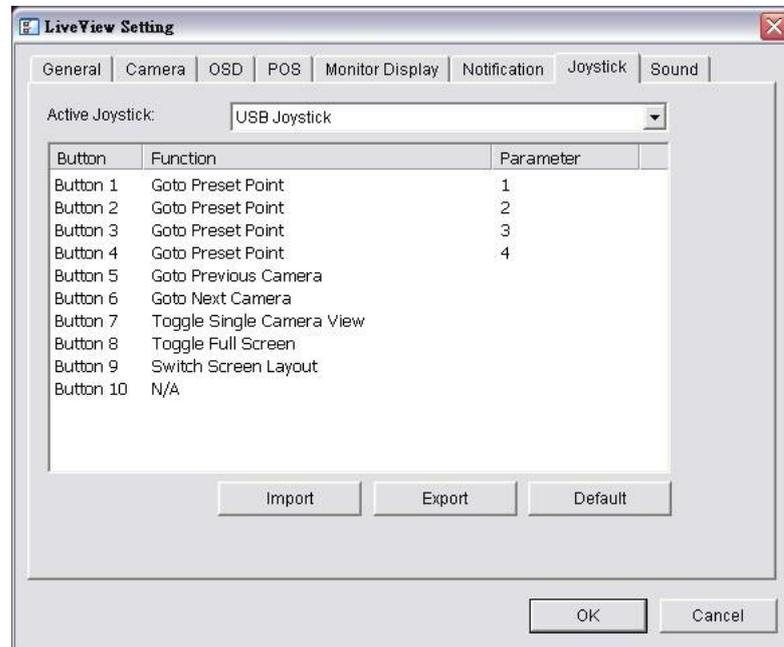

- **Function:** You can choose the function from the drop-down menu for the button of the joystick.

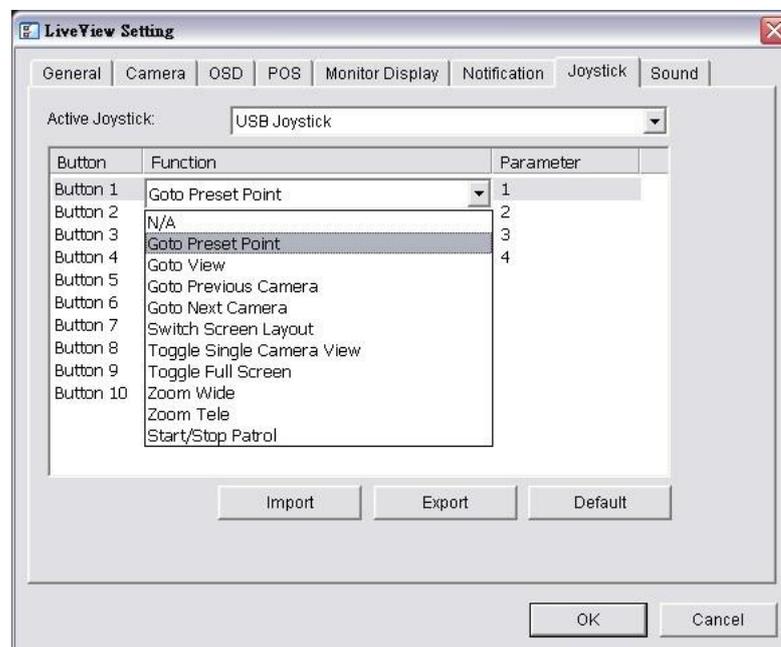


- **Parameter:** Choose the preset point from the drop-down menu.
- **Default:** Click to back to default setting.
- **Import:** Click to import the settings.
- **Export:** Click to export the settings.

5. Click the **OK** button.

5.1.9 Set up Live View Sound on Event

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **General Setting** button.
4. Click the **Sound** tab.

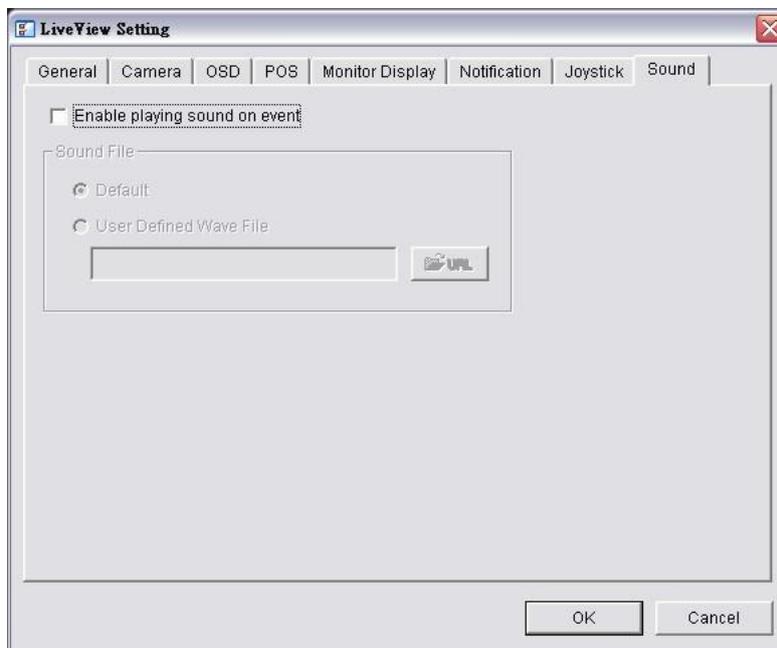

5. Check the **Enable playing sound on event** option.
6. Select sound file, default sound or user defined sound (.wav).
7. Click the **OK** button.


Note



The function only activates on event, which means you have to setup camera motion, camera I/O and I/O Box I/O as an event. Refer to **Event & Action Management** to do the setting.


5.2 Remote Live Viewer Application

5.2.1 Remote Live Viewer Application Control Panel

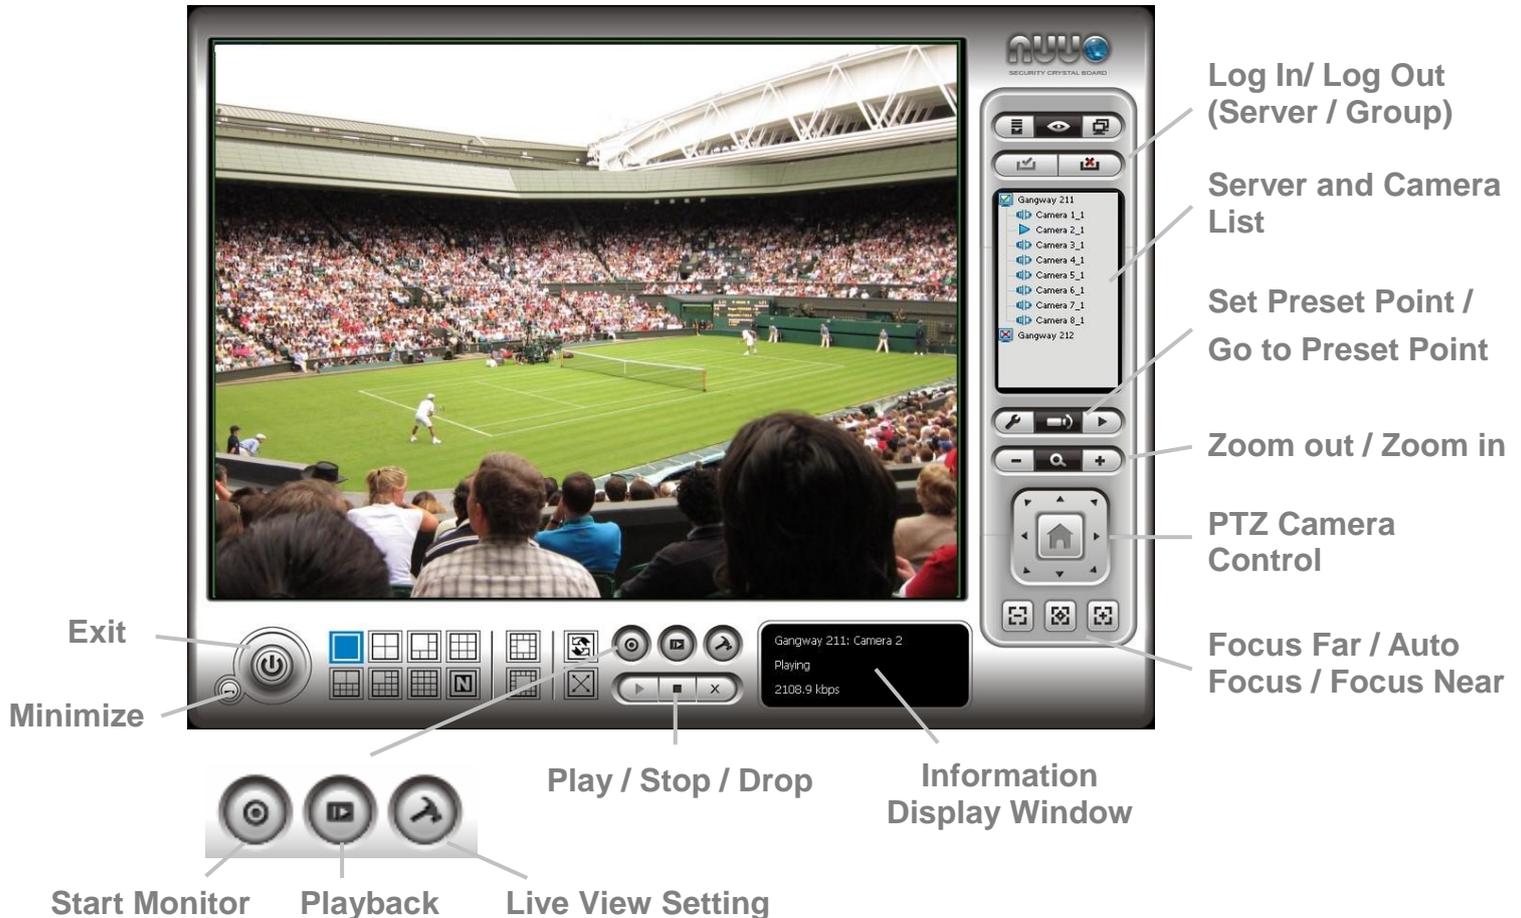


- **PTZ Camera Control:** You may control the camera view by using the PTZ camera control panel to adjust the camera's view. This is only available with cameras that support the PTZ function.
- **Set Preset Point / Go to Preset Point:** Adjust the camera view and click the  button to set up this view as preset point. Repeat the process to add more preset points. Click the  button to see the preset view.
- **Zoom:** Click the + or – button to zoom in or zoom out the view.
- **Minimize:** Minimize the Remote Live Viewer window.
- **Exit:** Shut down the application.
- **Play / Stop / Drop:** Select a camera/ video and click this button to play/stop/disconnect a particular channel.

- **Information Display Window:** Display video information including server name, video current status, and bit rate for a selected channel.
- **Start Monitor > E-Map:** Upload map and drag camera or I/O on it to track device location and alarm status with instant response when an event occurred. See details in the chapter of **E-Map**.
- **Start Monitor > Remote I/O:** Select Open Monitor to append monitor to view more live videos on multiple monitors. Utilize I/O device function remotely. - User can remotely adjust the Output Pins by turning it on or off.
- **Playback:** View playback video remotely.

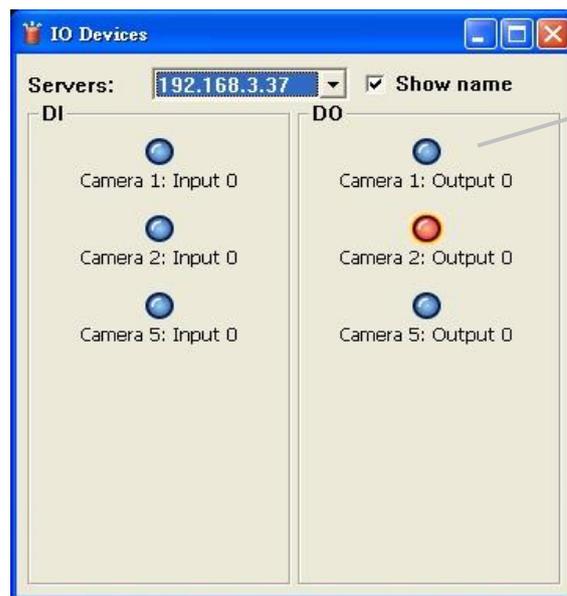

Click to turn on/off the "Output" pins

You can right click on the camera screen to enable the following function.

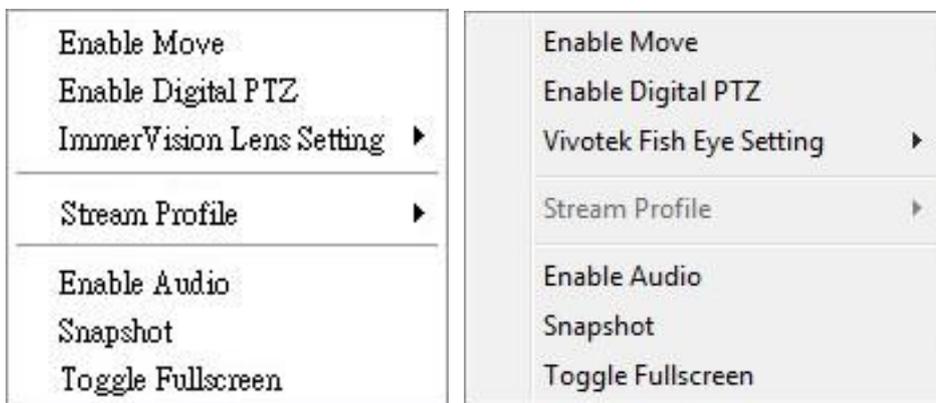

- **Enable Move:** Adjust the current view of camera which supports PT function by dragging the  button on the display screen.

- **Enable Digital PTZ:** Click the + or – button to zoom in or zoom out the view. The lower right square flashing on the video grid indicates the correspondent view of the camera.
- **ImmerVision Lens Setting:** Select the mode of lens, original, PTZ mode, Quad mode and Perimeter mode.
- **Vivotek Fisheye Setting:** Select the mode of lens, Original, Rectilinear mode, Full-view panorama mode, Dual-view panorama mode. Type of modes depends on lens location.
- **Stream Profile:** Select the stream profiles, original, low, minimum.
- **Enable Audio:** Enable audio on active channel(s).
- **Snapshot:** Select the snapshot function to capture a specific video image immediately.
- **Toggle Fullscreen:** Select it to view cameras with full screen. Press “Esc” or right click un-select full screen to go back to the original view.

Also, right click on camera list to duplicate and connect/disconnect designate cameras, and do other functions.




- **Duplicate Camera:** Select the duplicate camera function to create multiple views. The duplicated camera will be shown with green indicator as the right picture. Combine this function with digital PTZ, users are allowed to enlarge different spots and view them in different channels without failing to record the whole view.
- **Connect / Disconnect:** Click to connect or disconnect the designate camera.
- **Login / Logout Server:** Click to login or logout.
- **Connect All / Disconnect All:** Click to connect or disconnect all cameras.

5.2.2 Unit Connection Setting

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.



3. Click the **Server** tab.
4. Insert the unit name.

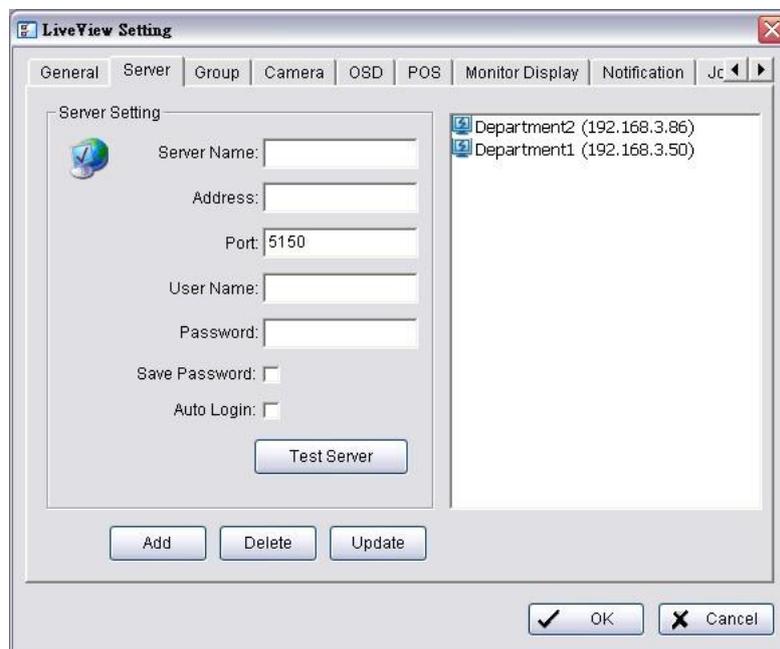


5. Insert the IP address.
6. Modify the port if necessary.
7. Insert the user name.
8. Insert the password.
9. Check the **Save Password / Auto login** option.
10. Click the **Test Server** button to test the connection between the local application and the remote unit.
11. Click the **Add** button to add this unit into your remote server list.
12. Click the **OK** button.

5.2.3 General Setting

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.



3. Click the **General** tab.

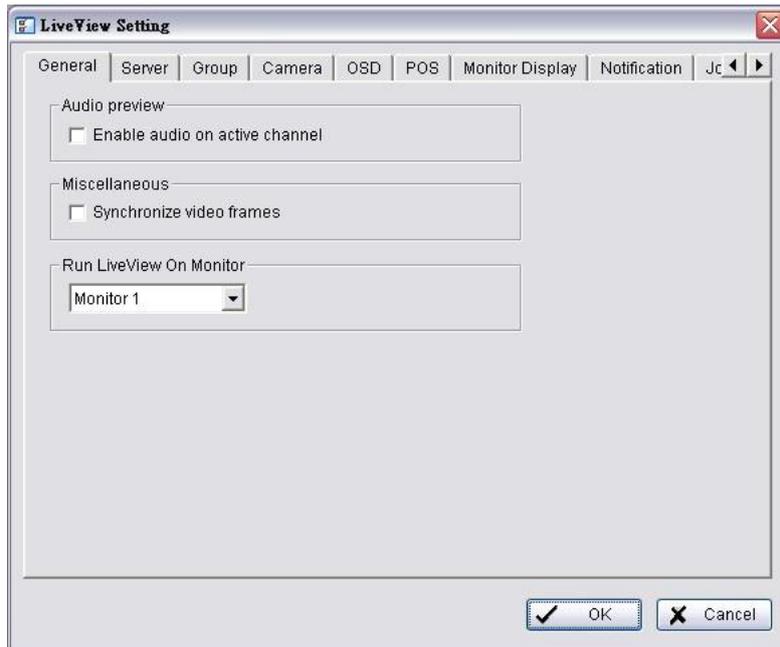


4. Check the **Enable audio on active channel** option to enable audio streaming on active channel. This function synchronizes with right click on camera to enable audio.
5. Check **Synchronize video frames** to avoid the tearing problem occurring in video display while increasing the CPU loading.
6. Select monitor(s) to run LiveView.
7. Click the **OK** button.

5.2.4 Camera Group Setting

You can put different cameras into the same group.

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Group** tab.

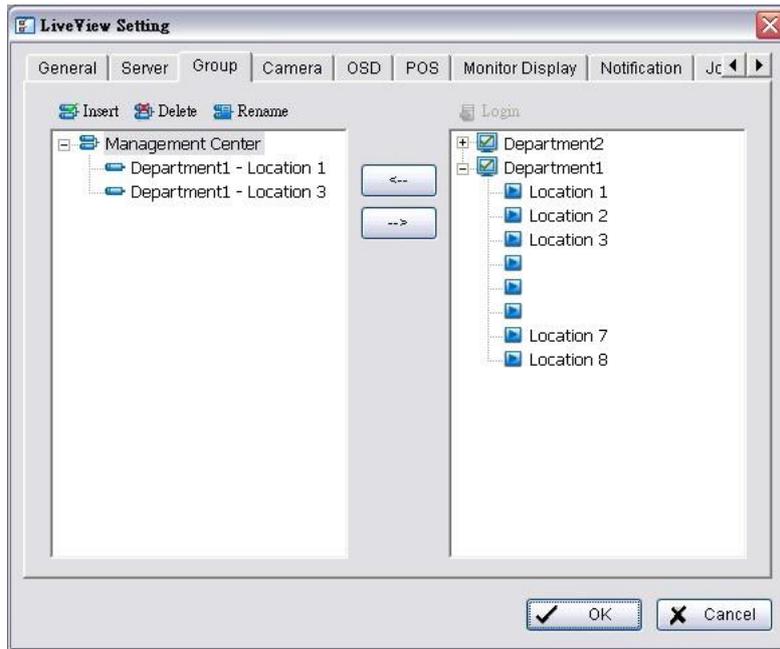

4. Log in to all the servers that contain the camera(s) you would like to put into the group(s).
5. Click the **Insert** button to create a new group.
6. Name this group.
7. Highlight the camera(s) that you would like to add into this group and then click the <-- button.
8. Repeat step 6 to establish the group.
9. Repeat steps 3 through 7 to establish other groups.
10. Click the **OK** button.


5.2.5 Delete/ Rename Camera Groups

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Group** tab.
4. Click the group which you want to modify.
5. Click the **Delete** or **Rename** button to remove or rename that group.
6. Repeat steps 3 and 4 to modify other groups.
7. Click the **OK** button.

5.2.6 Stream Profile Setting

Select the preferred stream type of each camera as default live view profile.


1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Camera** tab.

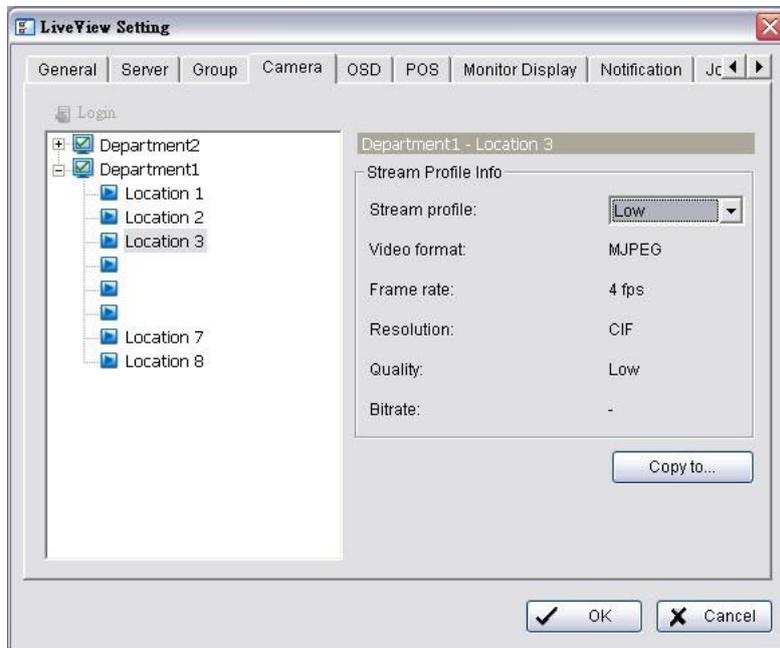

4. Adjust the stream profile of every camera with stream profile enabled in the **setting page**.
5. Click a camera and select its stream profile, and click the **Copy to...** button to apply this profile to other channels.
6. Click the **OK** button.

5.2.7 OSD (On-screen display) Setting


1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **OSD** tab.

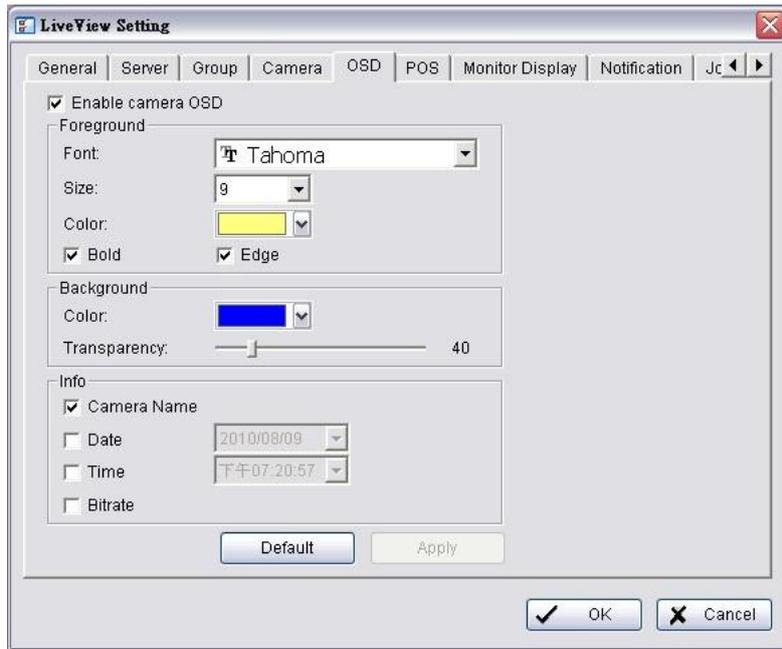

4. Check the **Enable camera OSD** option.
5. Set the foreground and background settings of the OSD.
6. Select which kinds of information will be displayed on the screen.
7. Click the **Apply** button to preview the result.
8. Click the **Default** button to back to the default settings if necessary.
9. Click the **OK** button.

5.2.8 Monitor Display Setting


1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Monitor Display** tab.

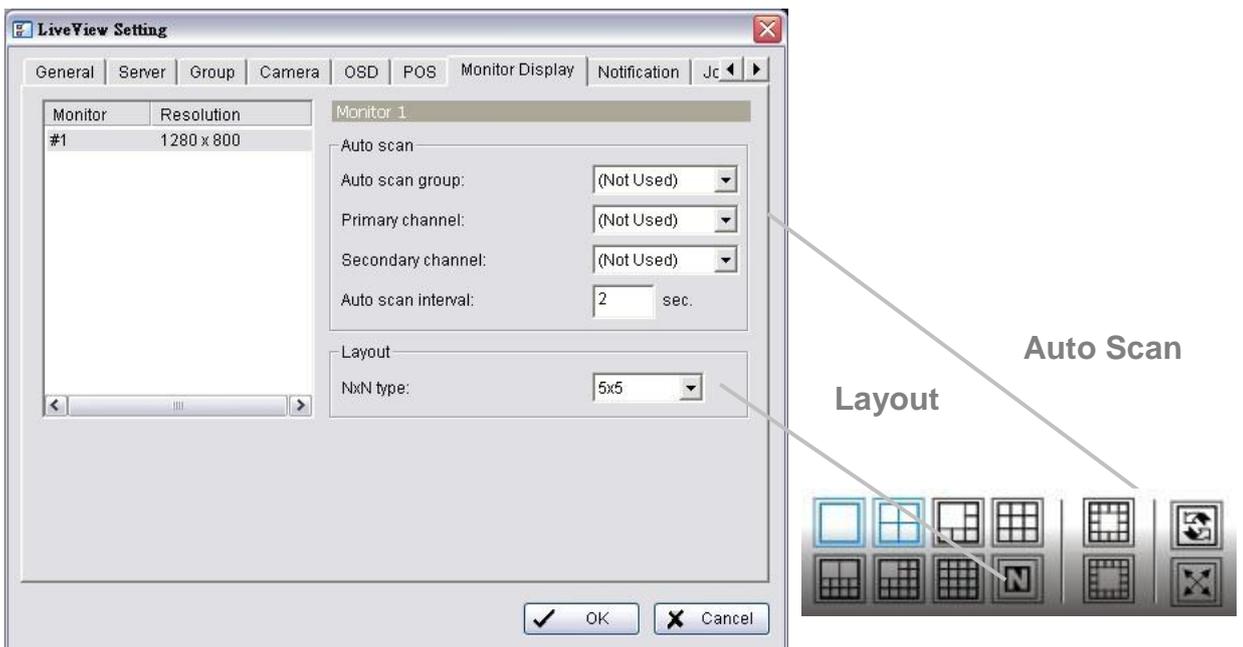

4. Select appointed server group to activate auto scan.
5. Select **Primary channel** which will always be on the screen when activating auto scan; while select **Secondary channel** which has second priority when activating auto scan. Enter the time interval for auto scan.
6. Select the screen division of NxN type.
7. Click the **OK** button.

5.2.9 Notification

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Notification** tab.

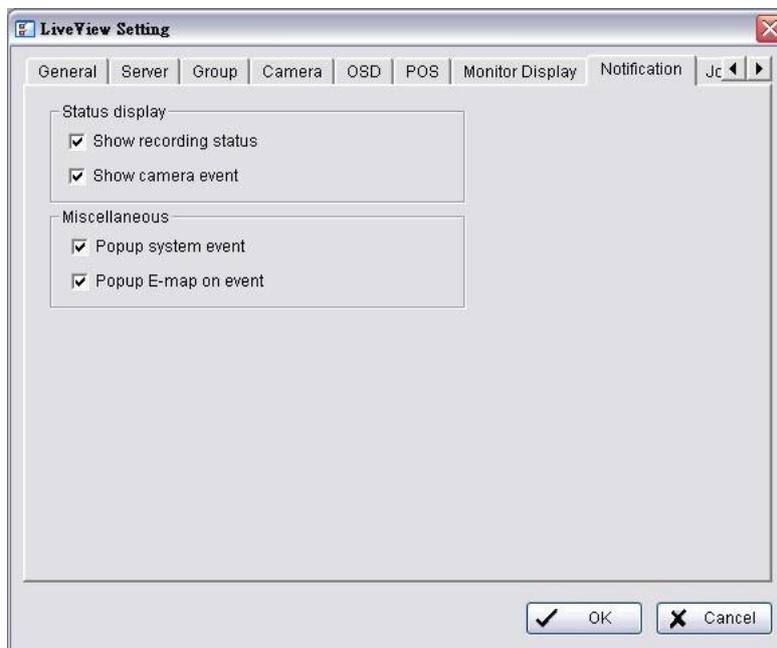

4. Check **Show recording status** to show the crystal ball with recording status on monitor display.
5. Check **Show camera event** to display the words of detected camera event on the correspondent screen.
6. Check **Popup system event** to pop up system event message dialog as a warning when a system event occurred.
7. Check **Popup E-map on event** to pop up E-map with event indicator when camera or I/O Box event occurred
8. Click the **OK** button.


Note




“Popup E-map on event” only activates on event, which means that you should not only edit camera and I/O on E-map but setup camera motion, camera input and I/O Box input as an event. Refer to **Event & Action Management** to do the settings.

5.2.10 Set up Joystick Control

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Joystick** tab.

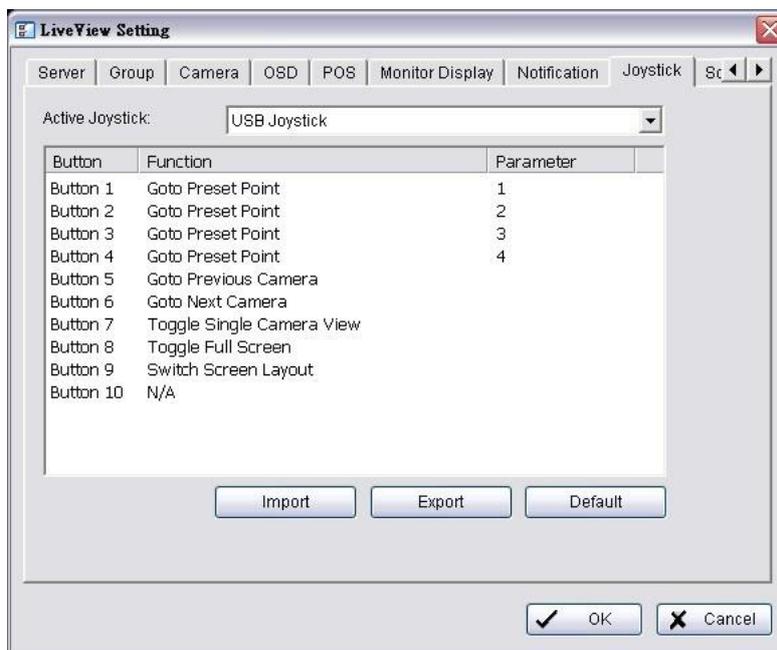

- **Function:** You can choose the function from the drop-down menu for the button of the joystick.

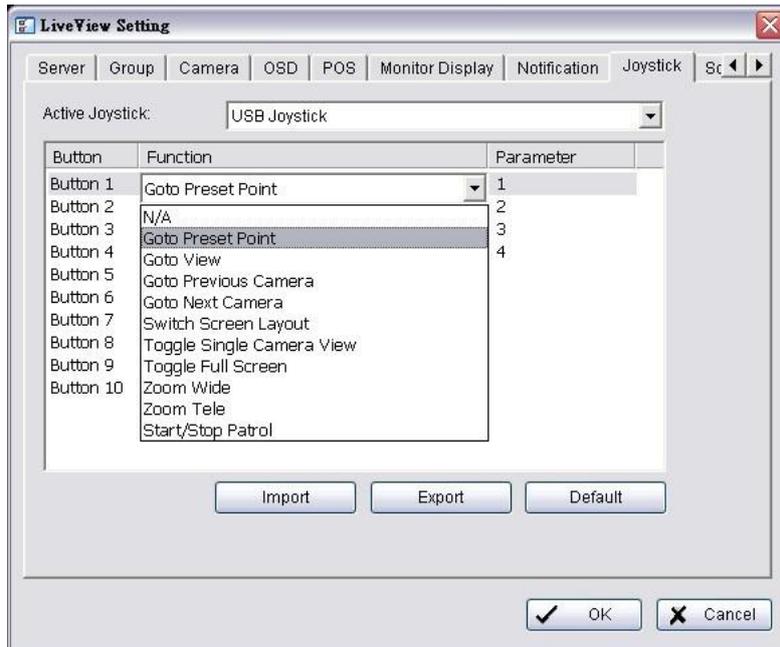

- **Parameter:** Choose the preset point from the drop-down menu.
- **Default:** Click to back to default setting.
- **Import:** Click to import the settings.
- **Export:** Click to export the settings.

4. Click the **OK** button.

5.2.11 Set up Live View Sound on Event

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **General Setting** button.
3. Click the **Sound** tab.



4. Check the **Enable playing sound on event** option.
5. Select sound file, default sound or user defined sound (.wav).
6. Click the **OK** button.

Note



The function only activates on event, which means you have to setup camera motion, camera I/O and I/O Box I/O as an event. Refer to **Event & Action Management** to do the setting.

5.2.12 Set up Remote Live Viewer

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the unit you wish to access in your remote server list.
3. Click the **LOG IN** button to access your unit.
4. Select a camera(s) from the camera list on the right and then drag it to where you wish the image to be displayed.

6. E-Map

There are two ways to execute the live view function: by Internet Explorer or by **Remote Live Viewer** application.

With E-map, user can easily track the device location and alarm status with instant response when an event occurs. The arrows and lightening icon on E-map represent cameras and I/O devices. These icons will turn red as being triggered by alarms.

There are two modes in E-map application, Edit Mode and Browse Mode.

-  **Edit Mode**: The function buttons on the bottom of this E-map dialog will be active. Users can add/edit/delete maps and indicators of devices.
-  **Browse Mode**: Users are not allowed to do any configuration but check the map hierarchies and device list to see indicators and related information.

6.1 Internet Explorer

1. Open Internet Explorer and log in to the unit.
2. Click the **Live View** button on the top of the page.
3. Click the **Start Menu** button and select **Open E-Map**.


6.1.1 E-Map Control Panel



-  **Map**: Select a map you want to show on E-map Window.
-  **Camera**: Select the camera to see preview video or mark indicator on E-map.
-  **Digital Input**: Select it to highlight the device with green ring on map and show status on Information Window. If the Digital Input is from IP camera, the preview window will display live video of the camera.
-  **Digital Output**: Select it to highlight the device with green ring on map and show status on Information Window. If the Digital Output is from IP camera, the preview window will display live video of the camera.
-  **Map Indicator**: Clicking the indicator will lead to the next map layer. If you want to move to the upper layer, select it by mouse directly or click  icon on the map.
-  **Camera Indicator**: The indicator of cameras dragged from Device and Map Tree List to show preview video and related information. When event occurs, the color of indicator will turn red.
-  **Digital I/O Indicator**: The indicator of I/O devices dragged from Device and Map Tree List to show related information. When event occurs, the color of indicator will turn red.
- **Information Window**: The window shows the related information of each indicator.
 - **Map**: Show map name.
 - **Camera**: Show camera name and connecting status.
 - **Digital Input**: Show Digital Input name and status (0 or 1).
 - **Digital Output**: Show Digital Output name and status (0 or 1).

6.1.2 Add Map

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Right click on the Map icon  in Device and Map Tree List to obtain the option menu to add map, or just click the **Add Map** button to configure.

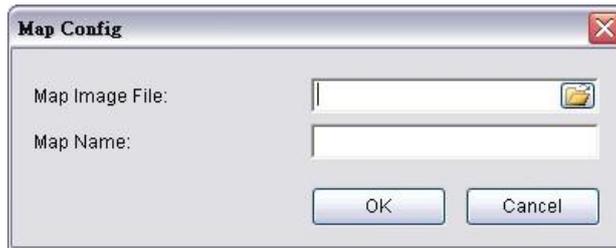

3. Select a map file and insert a name. Click the **OK** button, and then the map you added appears in the Device and Map Tree List.
4. The map indicator  appears on the upper left of map. Drag it to the position you want on appointed map.
5. Repeat steps 2 through 4 to add more maps.
6. Click the **Upload** button to activate all the settings.

Note



The maximum file size of each map is 500KB. There are 10 layers of map, and the map capacity of each layer is 10.

6.1.3 Edit Map

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Right click on the Map icon  in Device and Map Tree List to obtain the option menu to edit map, or just click the **Edit Map** button to configure.
3. Repeat step 2 to edit more maps.
4. Click the **Upload** button to activate all the settings.

6.1.4 Delete Map

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Right click on the Map icon  in Device and Map Tree List to obtain the option menu to delete map, or just click the **Delete** button.
3. Repeat step 2 to delete more map.
4. Click the **Upload** button to activate all the settings.

6.1.5 Add/Rotate Device Indicator


1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Select the map which you want to add device indicator on.
3. Select a device from list and directly drag it to the desired location on the map.
4. Select a camera indicator and right click on the indicator or click the **Rotate** button to adjust the direction of camera indicator if needed.
5. Repeat steps 2 and 4 to add more indicators on.
6. Click the **Upload** button to activate all the settings.

6.1.6 Delete Device Indicator

1. Make sure being in “Edit Mode” and all devices are inserted and connected.
2. Select the indicator and right click on the indicator or click the **Delete** button.
3. Repeat step 2 to delete more indicators.
4. Click the **Upload** button to activate all the settings.

6.1.7 Layout Adjustment

Adjust the Layout

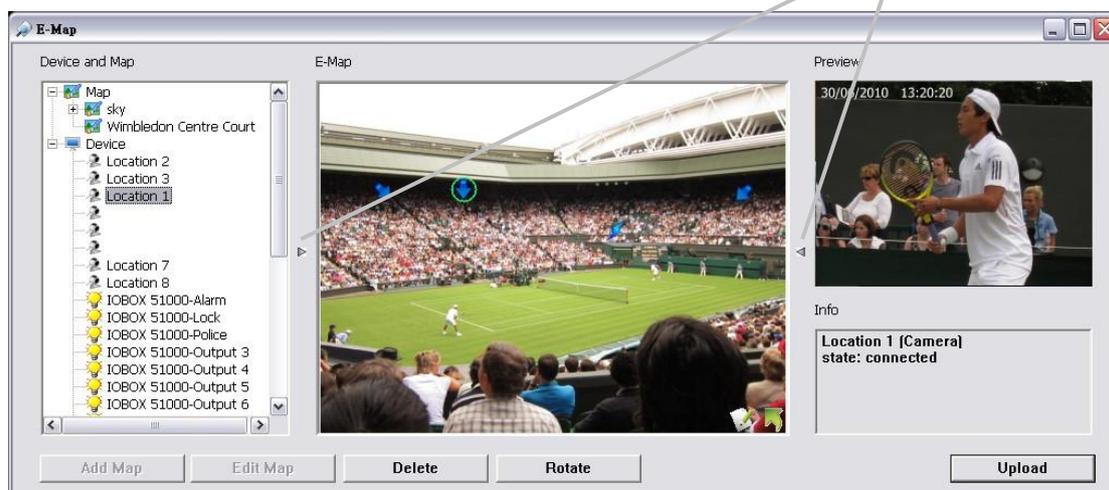

- ▶ ◀ **Adjust the Layout:** Click the triangular indicator to hide the Device and Map Tree List / Preview and Information Window on right and left side of the window. Click the indicator again to back to the default.

-  **Maximize the Map**: Click the icon on the upper right to get the full screen display of E-map.

6.1.8 Relative Configuration and Application

When an event occurs, related E-map pops up to indicate the location of this event. Please check the **Notification** function for details.

6.2 Remote Live Viewer Application

1. Startup > NUUO NVRmini > Remote Live Viewer.
2. Click the **Start Monitor** button and select Open E-Map.

6.2.1 E-Map Control Panel



Server List

Edit Mode /
Browse Mode
Switch Button

Device and Map Tree List

E-Map Picture

Preview Window and Information

- **Server List**: Select a server to display the E-map of the server.

Note




The E-Map function of Remote Live Viewer is quite similar with the one in Internet Explorer, so you can refer to the section of **Internet Explorer** for the details.

7. Playback

There are two ways to execute the playback function: with Internet Explorer or with the **Playback System** application.

7.1 Internet Explorer

7.1.1 Playback Control Panel

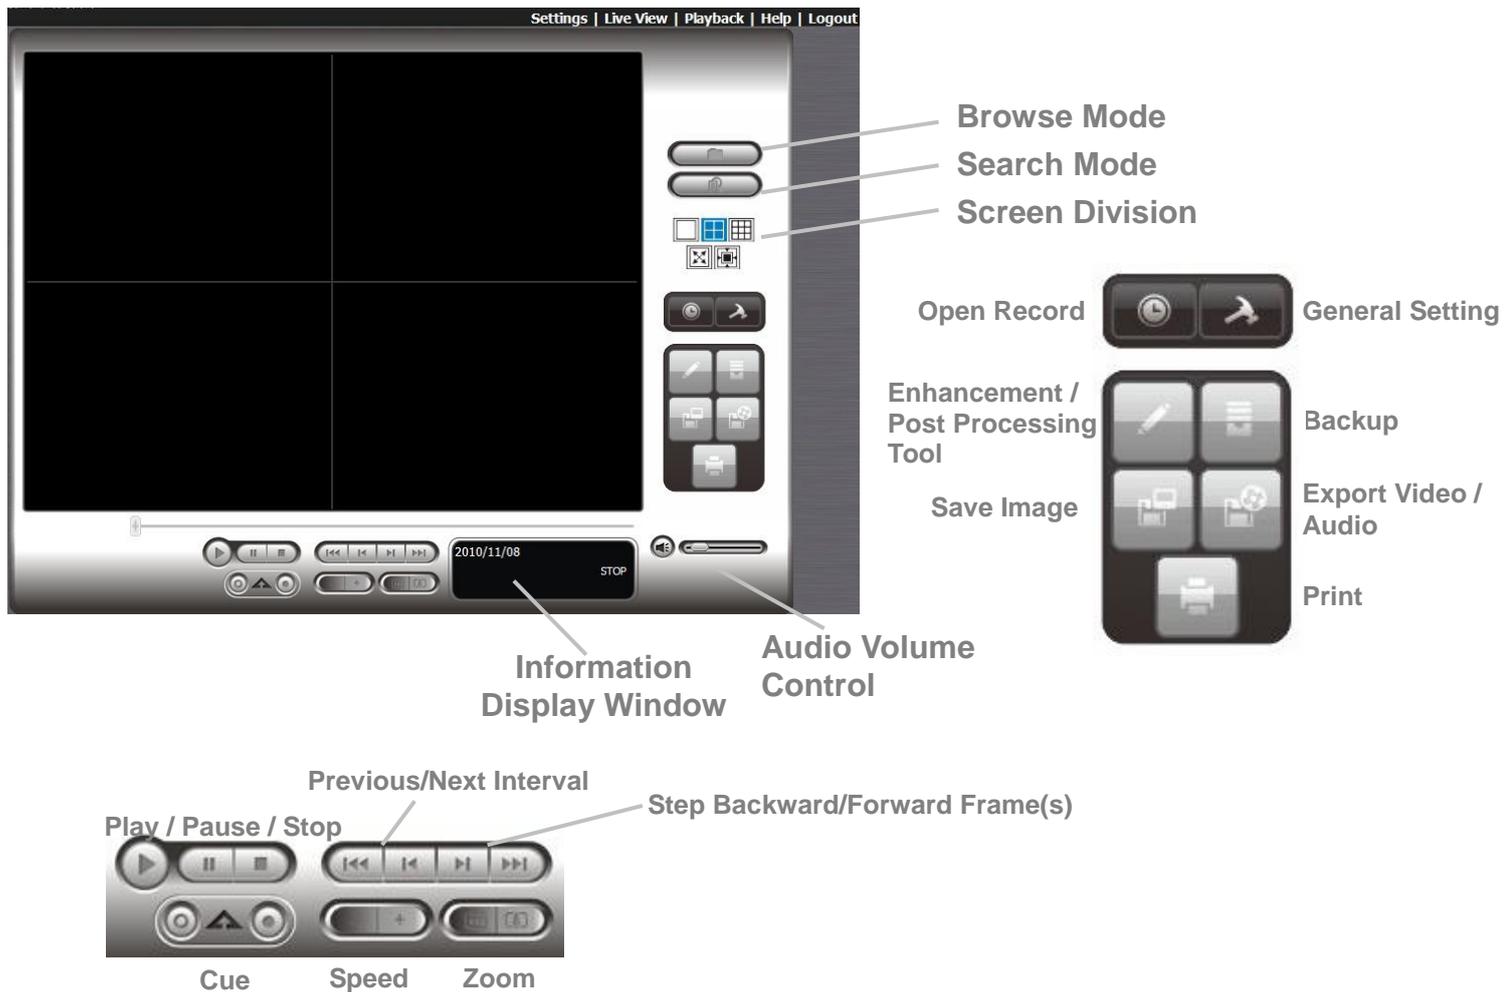

- **Information Display Window:** Displays video date and time, cue-in / cue-out point times, and speed.
- **Audio Volume Control:** Adjust the sound level.
- **Screen Division:** Allocate the sub-screen display by clicking on the desired layout icon. To switch to single camera display, double click a particular sub-screen. Double click the screen again to regain previous screen division layout.

- **Browse Mode:** Play the recorded video when in Search Mode.
- **Open Record:** Click the **Open Record** button to access the Date-Time Panel and select the video records which you want to review.
- **General Setting**
 - **Record Display**
 - Calendar View: view the Record Display Window as a calendar.
 - List Control: view the Record Display Window as a list control.
 - **Play**
 - Play when open: check this option to set the system to start playing the video clip every time a record is withdrawn.
 - Auto-skip when recording in motion-only mode: check this option to set up the system to automatically skip to the points where there were motions recorded.
 - Next interval: set the interval with which the video goes forward when you click the **Next** button on the control panel.
 - Previous interval: set the interval with which the video goes backward when you click the **Previous** button on the control panel.
 - **Capture Image**
 - Save in clipboard: the image will be saved in the clipboard and can be pasted to other application software.
 - Manually save the image file: you can manually select where you want to save the image, name the saved file, and choose the format you want to save the image.
 - Automatically save the image file: by presetting a path/URL and the image format, the system will automatically save the image accordingly when you click the **Save Image** button on the control panel.

You can right click on the camera screen to enable the following function.



- **Toggle Fullscreen:** Select it to view cameras with full screen. Press

“Esc” or right click un-select full screen to go back to the original view.

- **Enable ImmerVision PTZ:** Adjust PTZ in PTZ mode.
- **ImmerVision Lens Setting:** Select the mode of lens, original, PTZ mode, Quad mode and Perimeter mode.
- **Enable Vivotek Fisheye PTZ:** Adjust PTZ in PTZ mode.
- **Vivotek Fisheye Setting:** Select the mode of lens, Original, Rectilinear mode, Full-view panorama mode, Dual-view panorama mode. Type of modes depends on lens location.

7.1.2 Search the Recorded Video

The screenshot shows the 'Date Time Search Dialog' window. At the top left, there are four icons: a refresh icon, a shopping cart icon, and two play/pause icons. Below these are labels: 'Refresh', 'POS Search', and 'Previous/ Next Recording Date'. The main window contains a calendar for November 2009, a 'Date Time Period' section with 'Start Time' and 'End Time' pickers, a 'Video Preview' window showing a room scene, a 'Time Table' with a grid for cameras and recording status, and a 'Recording Types' legend at the bottom. Labels point to 'Record Display Window', 'Recording Types', 'Date Time Period', 'Video Preview', and 'Time Table'.


- : refresh the Record Display Window.
- or : go to previous or next recording date.
- **Record Display Window:** Display the available recorded video records.
- **Date Time Period:** Select the start and end time points that indicate the time period you would like to view after choosing cameras.
- **Video Preview:** Check the **Enable Preview** option to view the selected video.
- **Time Table** (preset recording schedule): Click the icon to select all channels; click the icon to deselect all channels. Finally, use


the  scale bar to modify the scale of the time table.

There are two recording modes: **Record Always** and **Record on Event**. The Time Table will display these two modes in different colors.

- **Show Records**: Show the period of recording data in the Time Table.
- **Show Event Log**: Show Event Log makes Time Table show the time of event detection. Color of event type can be defined by preference.

	Color	Event Type
<input checked="" type="checkbox"/>		Signal Lost
<input checked="" type="checkbox"/>		Motion From Camera

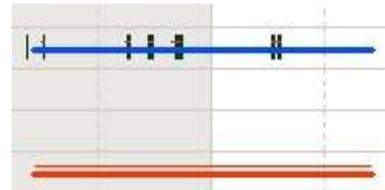

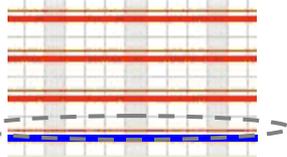1. From the Record Display Window at the top left of the Date Time Panel, select the date you want to search the record from. The red lines shown on the time table indicate available recorded video records. 
2. Use color bars to differentiate recording types from each other. This will help you select video clips.
3. Highlight the video clip you want to review by left-clicking and dragging the time period. You may also utilize the Start Time and End Time in Date Time Period Section after choosing camera. In addition, modify the scale of the time table with the  or  icon on the bottom left.
4. Check the **Enable Preview** option to get the preview of the video you select.
5. Click the camera name to increase or decrease cameras you want to playback.
6. Click the **OK** button.

Note



The Record Display Window can be shown in (a) calendar view or (b) list control view. To modify the settings of the record display window, click the **General Setting** button at the right of the page.

7.1.3 Play the Recorded Video

1. Be sure that you have set the schedule / recording event first.
2. Open Internet Explorer and log in to the unit.
3. Click the **Playback** button on the top of the page.
4. Click the **Open Record** button.
5. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
6. Highlight the video records that you want to review.
7. Click the **OK** button.


7.1.4 Intelligent Search

After opening the recorded video, click the **Search Mode** button to obtain the Intelligent Search Tool panel. You can search for unusual events during the recording period.

There are 5 types of unusual events: **General Motion**, **Foreign Object**, **Missing Object**, **Focus Lost**, and **Camera Occlusion**.

- **General Motion**: Detect all movements in the defined area.

1. Define detection zone by dragging to draw a detection zone. You may define more than one zone by repeating this step.
2. Modify the sensitivity setting by changing the slider control. Moving toward the right will increase the sensitivity level, which means a relatively small movement will trigger the alarm.
3. Set the interval. Moving toward right will increase time interval so that the alarm will only be triggered when the movement lasts longer.
4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event found.
5. Click the **Search** button.

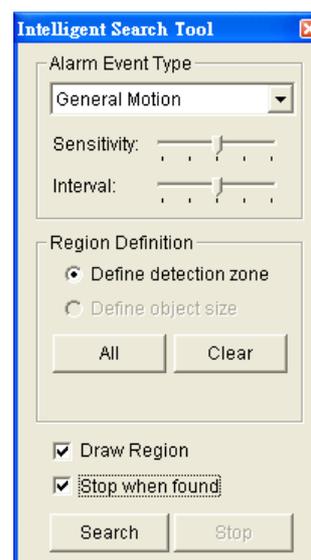

- **Foreign Object**: Alarm is set on when any additional object appears

in the defined area on the screen.

1. Define detection zone by dragging to draw a detection zone.
2. Modify the sensitivity setting.
3. Set the Interval.
4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event found.
5. Click the **Search** button.


- **Missing Object:** Alarm is set on when the selected object is removed from the defined area on the screen.

1. Define detection object by dragging to draw a detection zone.
2. Modify the sensitivity setting.
3. Set the Interval.
4. Check the **Stop when found** option. If unchecked, the search tool will list all the events it found, instead of stopping at the moment the event found.
5. Click the **Search** button.

- **Focus Lost:** System will inform you when the camera(s) lose its focus.
- **Camera Occlusion:** Alarms when the camera is blocked.

7.1.5 Recorded Video Enhancement

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK** button.
6. Click the **Enhancement** button.
7. Check the General Setting.

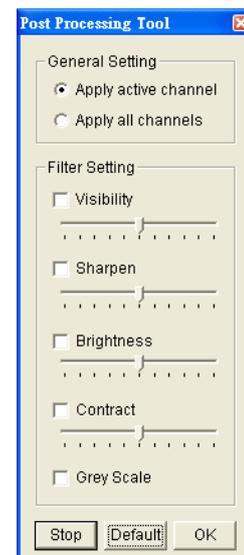


- **Apply active channel:** The settings will only be applied to the selected channel.
 - **Apply all channels:** The settings will be applied to those currently shown on the screen.
8. Set the Filter Setting.
- **Visibility:** Check the option and adjust the gamma value of the image to enhance the image and make it cleaner.
 - **Sharpen:** Check the option to activate the function. Move the slider control to the right to sharpen the image, to the left to soften it.
 - **Brightness:** Check the option to activate the function. Move the slider control to the right to make the image brighter.
 - **Contrast:** Check the option to activate the function. Move the slider control to the right to increase contrast.
 - **Grey Scale:** Check the option to show the record in gray-scale mode so the image displays in black and white.
9. Click the **OK** button.
- **Stop:** Stop the enhancement function and close the enhancement tool. (The system will automatically back to the default settings.)
 - **Default:** Back to the default settings, however, the enhancement tool still works.
 - **OK:** Apply the modifications of the settings.

7.1.6 Save a Video

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK** button.
6. Choose the camera display that you want to save as a video clip.
7. Set up the cue in and cue out points; the cue in and cue out time will be shown on the information window.



8. Click the **Save Video** button.

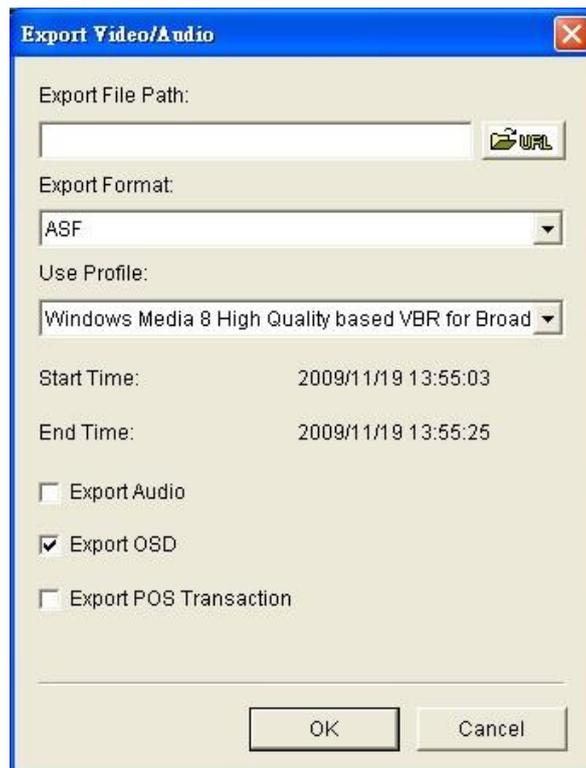

9. Choose the folder where you want to save the file.
10. Insert the file name and click the **Save** button.
11. Choose the export format.
12. Choose the use profile.
13. Check to export the recorded video with Audio, OSD and POS Transaction.
14. Click the **OK** button.

Note



We recommend that you export to the .asf format when saving video. In exporting to the .avi format, the frame rate will be

increased when playing in the video player, causing the video to run faster than normal.

7.1.7 Save an Image

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK** button.
6. Choose the camera display that you want to save pictures.
7. Click the **Save Image** button when the image you want is shown on the screen.
8. Choose the folder where you want to save the file at.
9. Choose the folder and the image format (BMP or JPEG) you prefer.
10. Insert the file name.
11. Click the **Save** button.

Note



You may skip step 3 by presetting the folder where you want to save the images and the format you want to save them in.

7.1.8 Print an Image

Print the current image of the video you choose.

1. Open Internet Explorer and log in to the unit.
2. Click the **Playback** button on the top of the page.
3. Click the **Open Record** button.
4. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from.
5. Highlight the video clip you want to review, and then click the **OK**

- button.
6. Choose the camera display from which you want to print pictures.
 7. Click the **Print** button when the image you want is shown on the screen.
 8. Set print settings.



- **Print Content:** Print the image from currently selected channel or all the channels shown on the screen.
- **Page Setting**
 - **Print in original size:** Check to have the image print in original size.
 - **Fit the page:** Check to have the image fit the page.
 - **Align Image:** Top, center, or bottom

9. Click the **Print** button.


7.1.9 Backup the Recorded Video

Different from Save Video, the Backup function will save all the recorded videos which belong to the time slot you set, instead of the clips.

1. Open Internet Explorer and log in to the unit.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.




4. Set the Start Time and End Time you want to backup.
5. Select the cameras you want to backup.
6. Select the directory you want to save the backup data.
7. Click the **Backup** button.
8. The system will then begin backup process automatically.

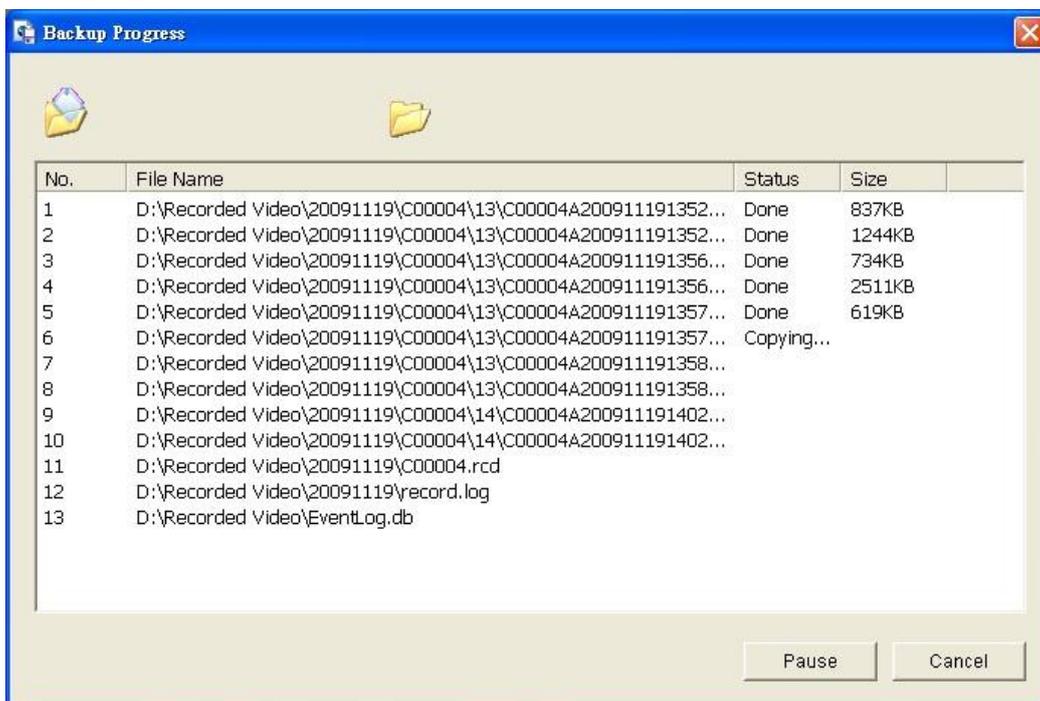

7.2 Remote Playback System Application

7.2.1 Playback System Application Control Panel

The **Playback System** control panel is similar to the playback panel in Internet Explorer. Check [Playback Control Panel](#) for more details about those buttons.

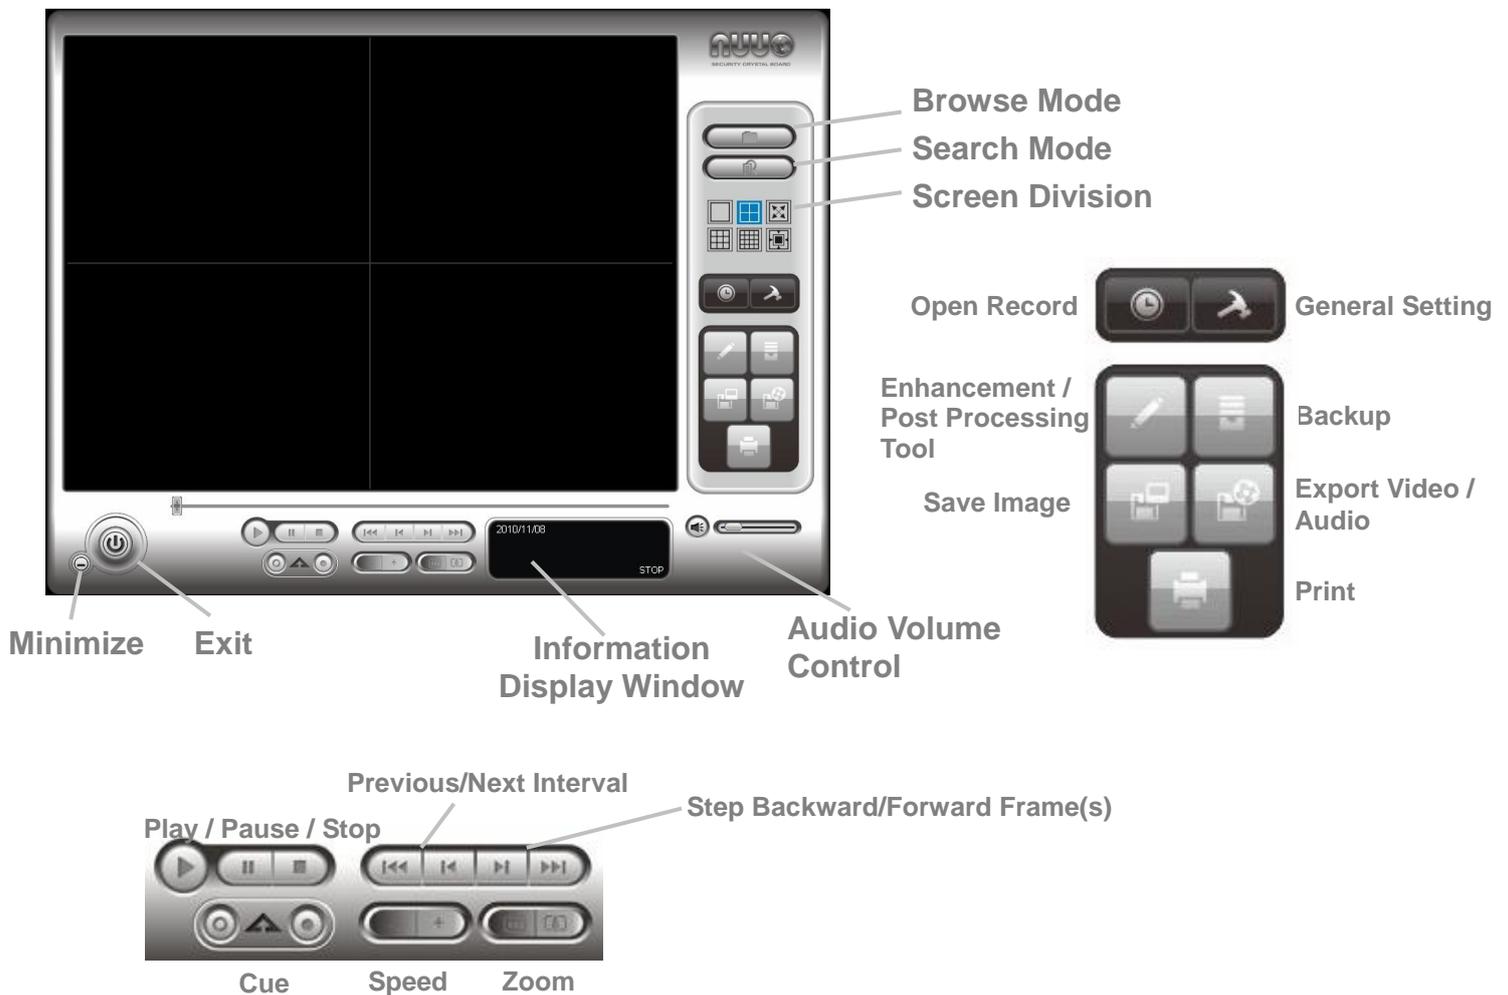


7.2.2 Set up Unit Connections

Before using the **Playback System** application, you need to set a connection to your unit first.

1. Startup > NUUO NVRmini > Playback System.
2. Click the **General Setting** button.


3. Click the **Server** tab.

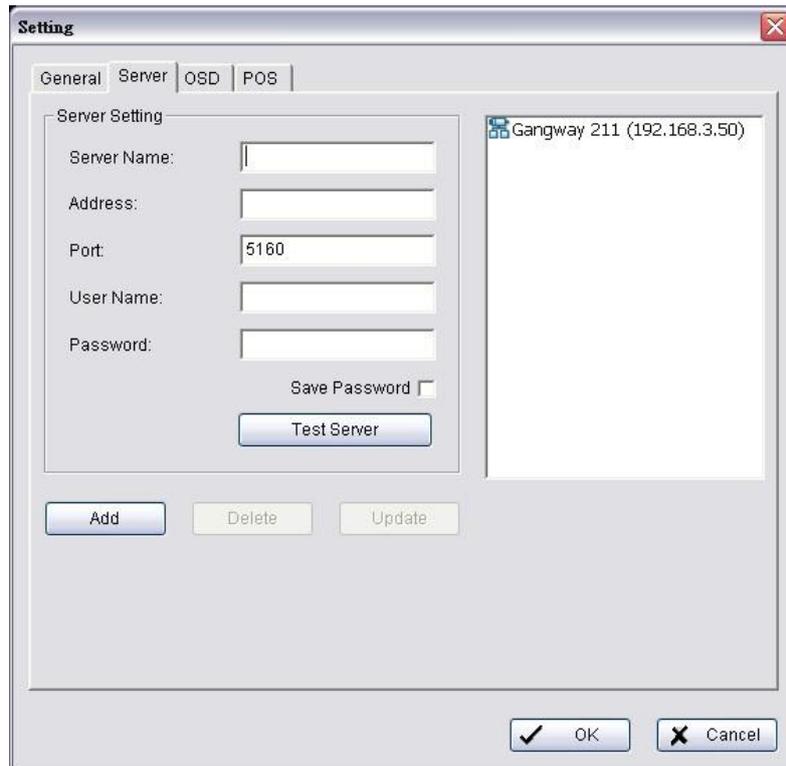

4. Insert the name of your unit.
5. Insert the IP address of that unit.
6. Modify the port if necessary.
7. Insert the user name.
8. Insert the password.
9. Check the **Save Password** option.
10. Click the **Test Server** button to test the connection between the local application and the remote unit.
11. Click the **Add** button to add this unit into the remote server list.
12. Click the **OK** button.

7.2.3 Search the Recorded Video

Remote Playback
Site Management

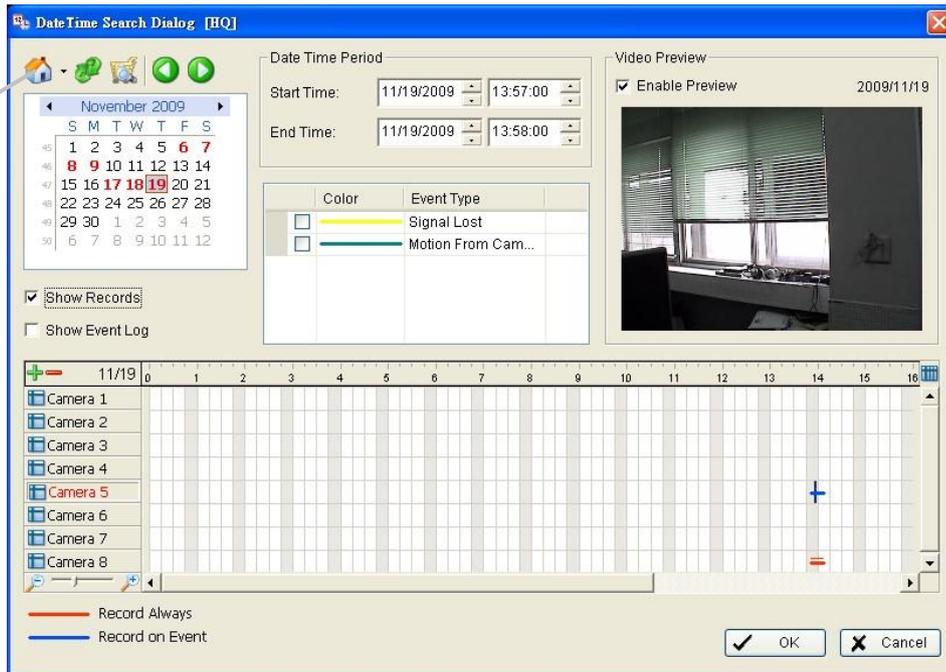

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button.
3. Click the  icon on the top of the Date-Time Panel to obtain the Remote Playback Site Management dialog, and then select the server you want to access.
4. Highlight the records you want to view in the Time Table.
5. Set the Date Time Period.

The search process in the **Playback System** application is similar to that of Internet Explorer. Check **Search the Recorded Video** for more details about the setting process.

7.2.4 Play the Recorded Video

1. Be sure that you have set up the recording schedule / response first.
2. Startup > NUUO NVRmini > Playback System.
3. Click the **General Setting** button and the **Server** tab to set connections to your unit. See **Set up Unit Connections** for more details.
4. Click the **Open Record** button.
5. The Record Display Window will show the information of the available

video clips. Select the date you want to search the record from. Check **Search the Recorded Video** for more details.

6. Highlight the video records that you want to review.
7. Select the start and end points in Date Time Period to adjust the time slot.
8. Click the **OK** button.

7.2.5 Intelligent Search

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check **Search the Recorded Video** for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display for which you want to implement smart search.
6. Click the **Search Mode** button to open the Intelligent Search Tool panel.
7. Set up unusual events here to detect abnormalities occurring during the recording period. Check **Intelligent Search** for more details.
8. The searched events will be listed. Click to find that event.

There are 5 types of unusual events: ***General Motion, Foreign Object, Missing Object, Focus Lost, and Camera Occlusion.***

- **General Motion:** Detect all movements in the defined area.
- **Foreign Object:** Alarm when any additional object appears in the defined area on the screen.
- **Missing Object:** Alarm when the selected object is removed from the defined area on the screen.
- **Focus Lost:** System will inform you when the camera(s) lose focus.
- **Camera Occlusion:** Alarm when the camera is blocked.

The intelligent search in the **Playback System** application is similar to that of Internet Explorer.

7.2.6 Recorded Video Enhancement

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check **Search the Recorded Video** for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display that you want to implement video enhancement.
6. Click the **Enhancement** button.
7. Check the General Setting.
 - **Apply active channel:** The settings will only be applied to the selected channel.
 - **Apply all channels:** The settings will be applied to those currently shown on the screen.
8. Set the Filter Setting.
 - **Visibility:** Check the option and adjust the gamma value of the image to enhance the image and make it cleaner.
 - **Sharpen:** Check the option to activate the function. Move the slider control to the right to sharpen the image, to the left to soften it.
 - **Brightness:** Check the option to activate the function. Move the slider control to the right to make the image brighter.
 - **Contrast:** Check the option to activate the function. Move the slider control to the right to increase contrast.
 - **Grey Scale:** Check the option to show the record in gray-scale mode so the image displays in black and white.
9. Click the **OK** button.
 - **Stop:** Stop the enhancement function and close the enhancement tool. (The system will automatically revert back to the default settings.)
 - **Default:** Back to the default settings, however, the enhancement tool still works.

- **OK**: Apply the modifications of the settings.

7.2.7 Save a Video

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date from which you want to search the record. Check **Search the Recorded Video** for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display that you want to save as a video clip.
6. Set up the cue in and cue out points; the cue in and cue out time will show on the information window.



7. Click the **Save Video** button.
8. Choose the folder where you want to save the file.
9. Insert the file name and click the **Save** button.
10. Choose the export format.
11. Choose the use profile.
12. Check the **Export Audio** option.
13. Click the **OK** button.

7.2.8 Save an Image

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date from which you want to search the record. Check **Search the Recorded Video** for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display from which you want to save pictures.
6. Click the **Save Image** button when the image you want is shown on the screen.

7. Choose the folder where you want to save the file at.
8. Choose the format of image (BMP or JPEG) you prefer.
9. Insert the file name.
10. Click the **Save** button.

Note



You may skip step 7 by presetting a folder where you want to save the images and a format which you want to save the images in.

7.2.9 Print an Image

Print the current image of the video you choose.

1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button.
3. The Record Display Window will show the information of the available video clips. Select the date you want to search the record from. Check **Search the Recorded Video** for more details.
4. Highlight the video records that you want to review.
5. Choose the camera display that you want to print pictures.
6. Click the **Print** button.
7. Set the print settings.
 - **Print Content:** Print the image from currently selected channel or all the channels shown on the screen.
 - **Page Setting**
 - **Print in original size:** Select to have the image print in original size.
 - **Fit the page:** Select to have the image fit the page.
 - **Align Image:** Top, center, or bottom

7.2.10 Backup the Recorded Video

Different from Save Video, the Backup function will save all the recorded videos which belong to the time slot you set, instead of the clips.


1. Startup > NUUO NVRmini > Playback System.
2. Click the **Open Record** button to select data.
3. Click the **Backup** button.
4. Set the Start Time and End Time you want to backup.
5. Select the cameras you want to backup.
6. Select the directory you want to save the backup data.
7. Click the **Backup** button.

8. Backup and Delete Records


8.1 The Backup System Application

In addition to the ways mentioned in the previous chapters, you can apply the application to backup your files.


1. Startup > NUUO NVRmini > Backup System.

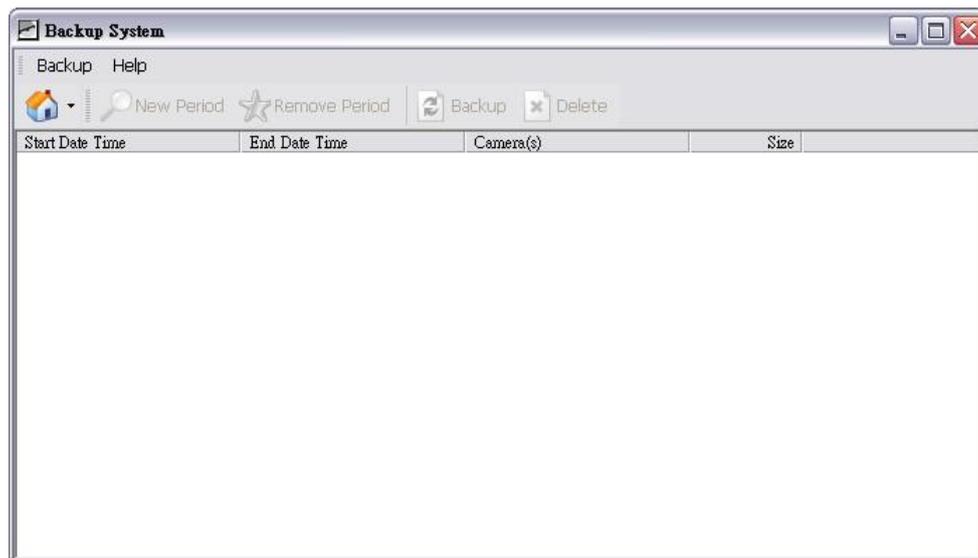


2. Click the **Remote Server Site**  button to set up remote server.

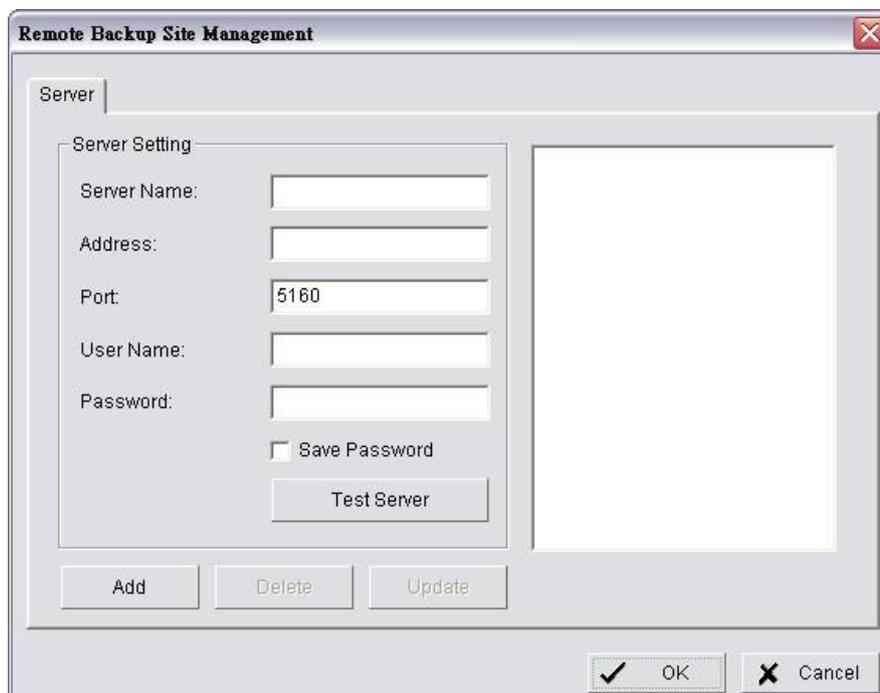


3. Insert the name of your unit.
4. Insert the IP address of that unit.
5. Modify the port if necessary.
6. Insert the user name.
7. Insert the password.
8. Check the **Save Password** option.
9. Click the **Test Server** button to test the connection between the local application and the remote unit.
10. Click the **Add** button to add this unit into the remote server list.
11. Click the **OK** button.
12. Click the ▼ button next to **Remote Server Site** button, and select one of servers you added.

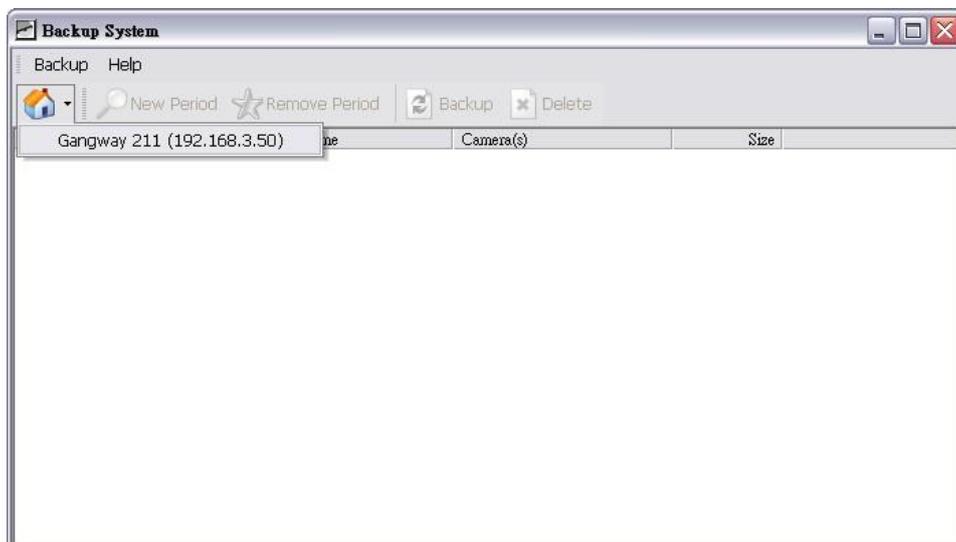


13. Click the **New Period** button to select the record date.

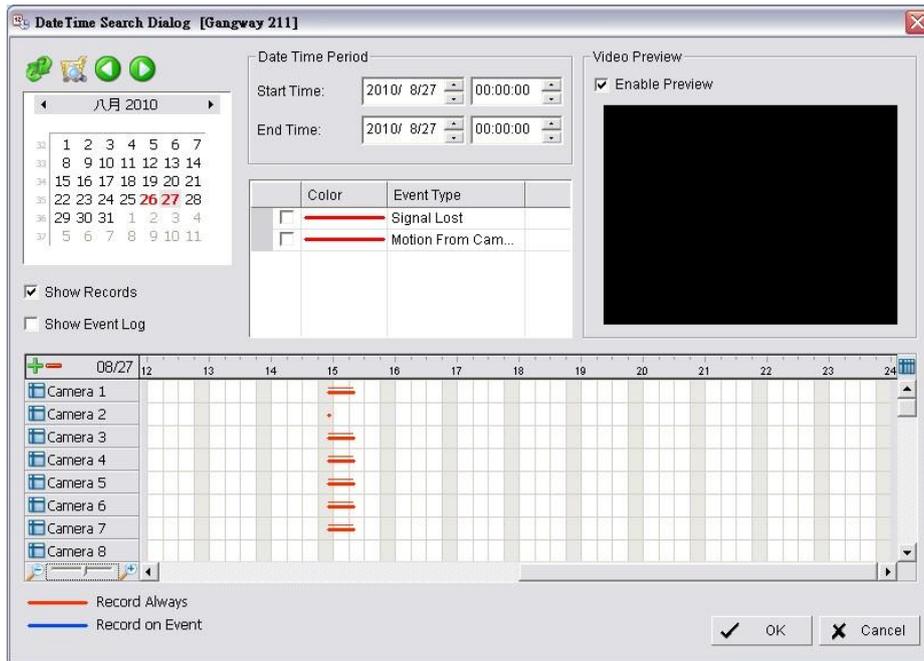

14. Set the Start Time and End Time you want to backup. (or highlight the video records which you want to backup)
15. Select the cameras you want to backup.
16. Click the **OK** button.
17. Select the time slot which you want to backup.

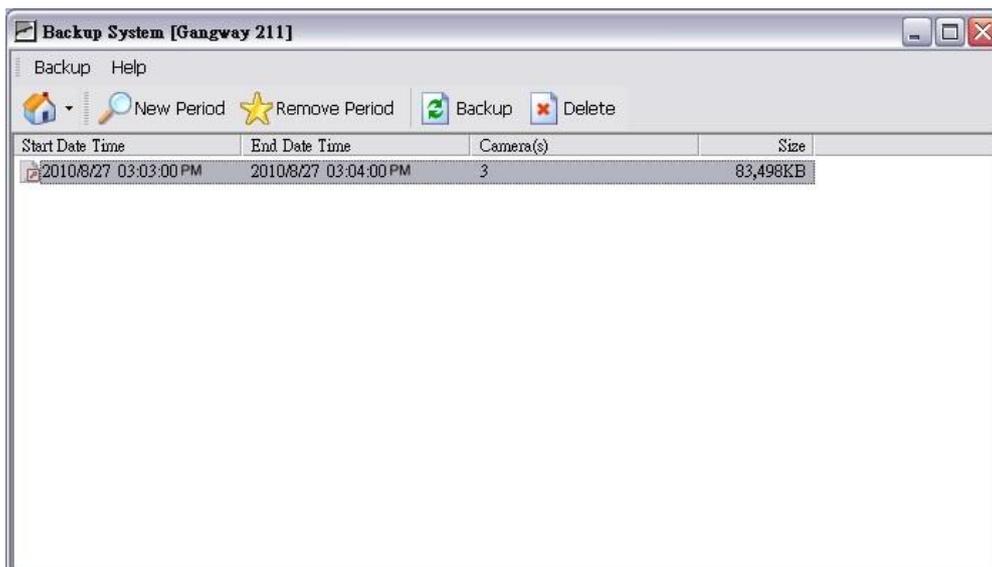

18. Click the **Backup** button.
19. Select the way and directory you want to save the backup data.
20. Check the **Include Playback application** option, which will add **Playback** application into the backup folder.

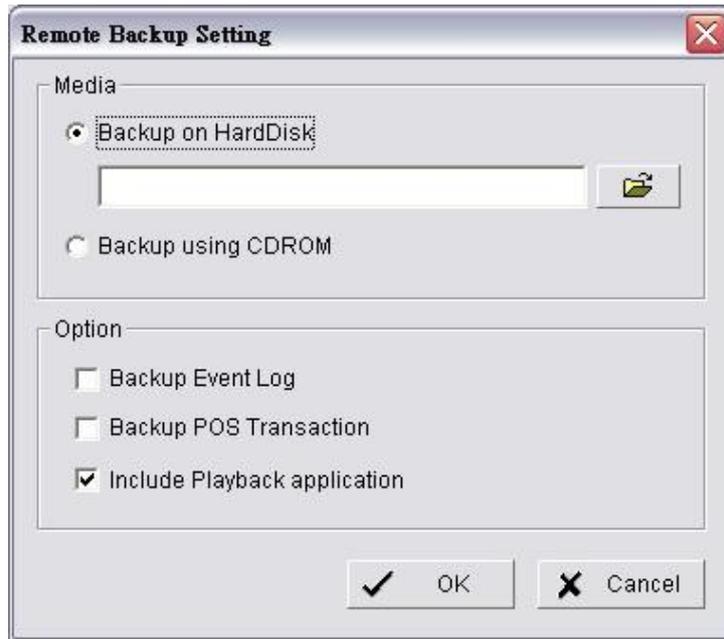

21. Click the **OK** button.

8.2 Backup the Recorded Video through Windows Explorer

1. Find your unit through Windows Explorer (insert “\\” plus the IP address of your unit)
2. Insert the name and password of the administrator or power user.
3. Open the “videodata” folder.
4. Copy the date folder which you want to backup to your desktop / laptop.

8.3 Backup the Recorded Video through FTP

1. Find your unit through Windows Explorer (insert “ftp://” plus the IP address of your unit)
2. Insert the name and password of the administrator or power user.
3. Open the “videodata” folder.
4. Copy the date folder which you want to backup to you desktop / laptop.

8.4 Playback the Backup Records

8.4.1 With Playback Application

1. Use the Backup System application to backup your records.
2. Check the **Include Playback application** option, which will add the **Playback** application into the backup folder.
3. Open that folder.
4. Double-click the Playback application icon.
5. Select the recorded data to play back.


8.4.2 Without Playback Application

1. Use the Playback function to backup your records.
2. Put your backup folder into the program folder of NVRmini. (Default directory is “C:\Program Files\NUUO\NVRmini”.)
3. Startup > NUUO NVRmini > Playback System.
4. Click the **Open Record** button.
5. Select the recorded data to play back.


8.5 Delete the Recorded Video

8.5.1 With Backup Application

1. Startup > NUUO NVRmini > Backup System.

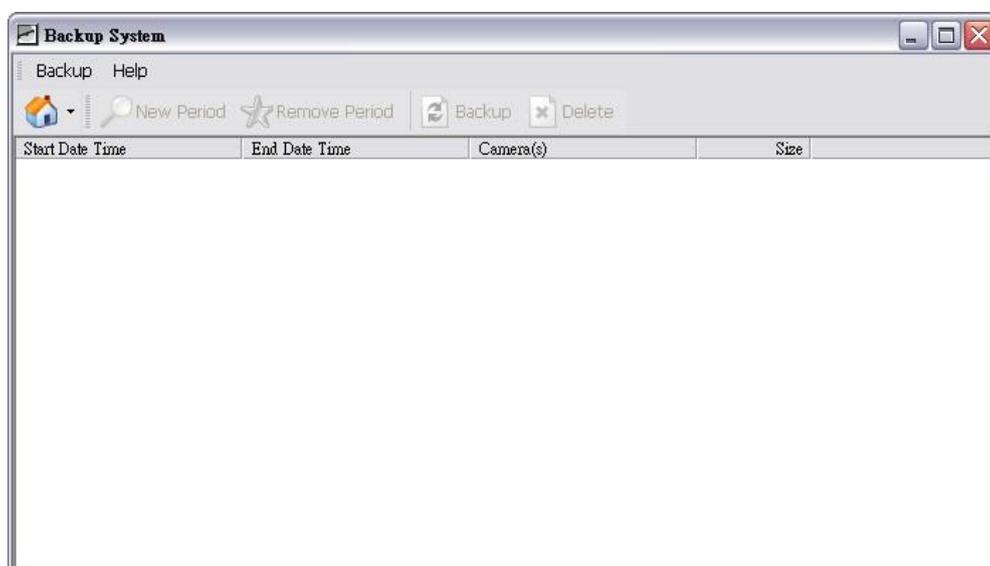

2. Click the **Remote Server Site**  button to set up remote server.

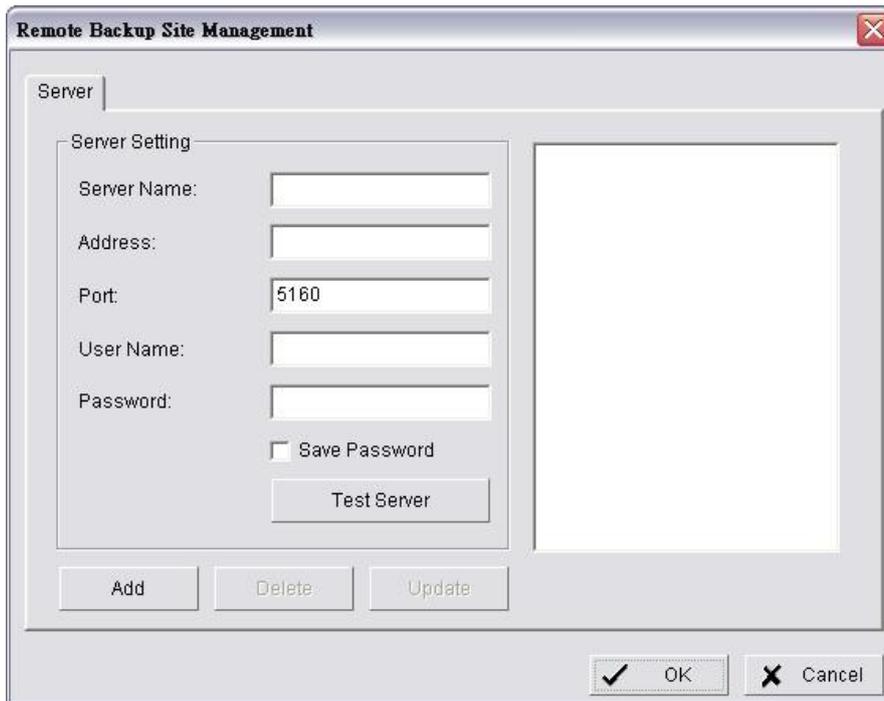

Remote Backup Site Management

Server

Server Setting

Server Name:

Address:

Port:

User Name:

Password:


Save Password

Test Server


Add Delete Update

OK Cancel

3. Insert the name of your unit.
4. Insert the IP address of that unit.
5. Modify the port if necessary.
6. Insert the user name.
7. Insert the password.
8. Check the **Save Password** option.
9. Click the **Test Server** button to test the connection between the local application and the remote unit.
10. Click the **Add** button to add this unit into the remote server list.
11. Click the **OK** button.
12. Click the ▼ button next to **Remote Server Site** button, and select one of servers you added.

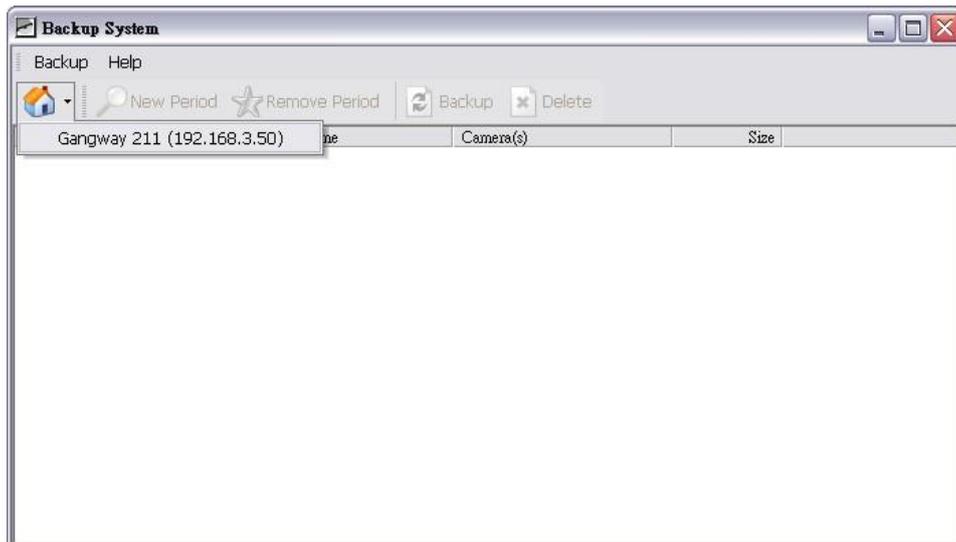

13. Click the **New Period** button to select the record date.

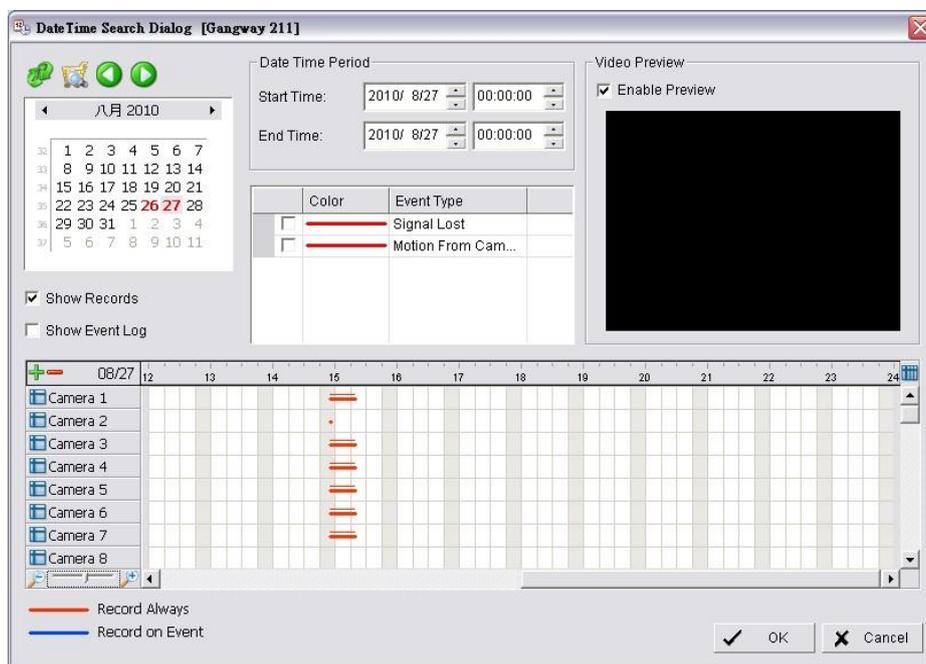


14. Set the Start Time and End Time. (or highlight the video records which you want to delete)

15. Select the cameras you want to delete the records.

16. Click the **OK** button.

17. Select the time slot which you want to delete.

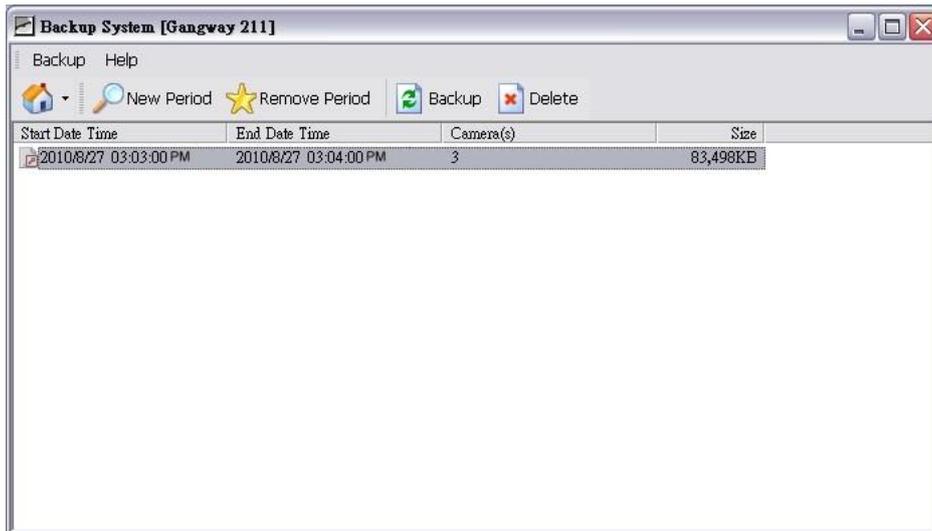

18. Click the **Delete** button.
19. Confirm the check dialog.

8.5.2 Without Backup Application

1. Find your unit through Windows Explorer (insert “\\” plus the IP address of your unit).
2. Use the administrator’s ID and password to log in.
3. Open the “videodata” folder.
4. Select the date folder which you want to delete.
5. Delete the folder.

Caution



In order to keep the system stable, do not delete recorded data from the day in which you do the delete process.

9. Verification Tool


The Verification Tool verifies whether the data created by the system has been tampered with. It's the process by which a digital watermark (a digital signature) is added to each recorded video frame to ensure its authenticity.

There are three types of data could be verified by Verification Tool:

1. File in (.dat) (.264) format will be displayed as .
2. File in (.avi) (.asf) format will be displayed as .
3. File in (.bmp) (.jpg) format will be displayed as .

9.1 Execute Verification Tool

1. Startup > NUUO NVRmini > Verification Tool.
2. Verification Tool Overview

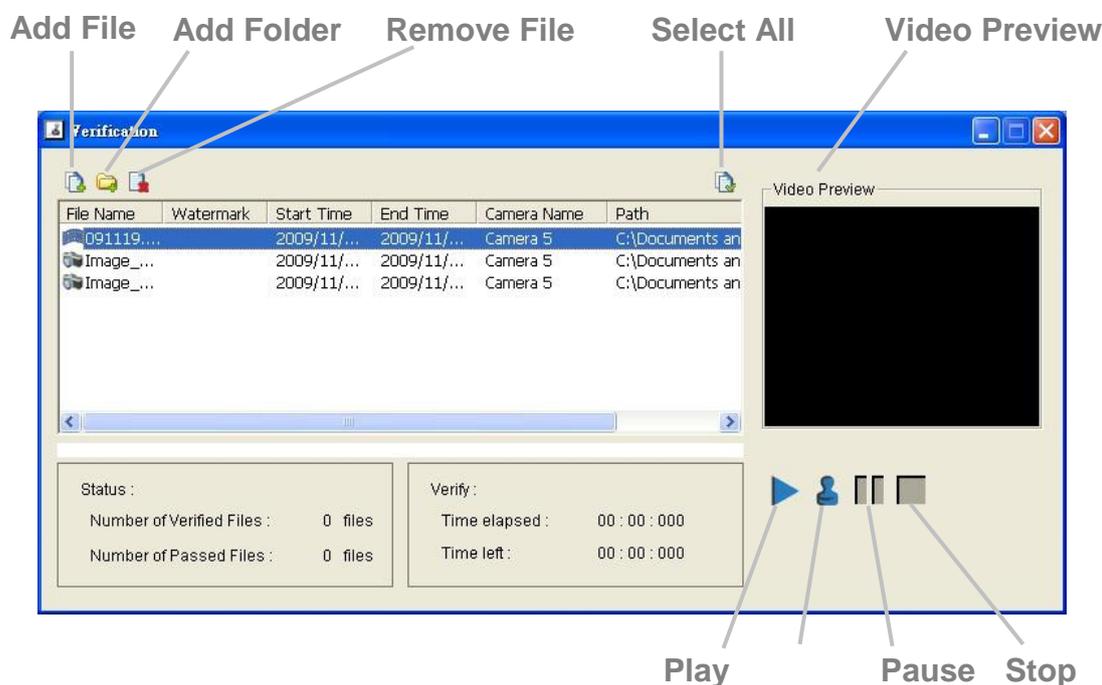

- **Add File:** Insert the single file to list for verification.
- **Add Folder:** Choose the folder with multiple files to list for verification.
- **Remove File:** Remove indicated file(s) from list.
- **Select All:** Select all files in list for verification.

Note




Choose the file type first before selecting files. Only (.dat) (.264) (.avi) (.asf) (.bmp) (.jpg) are available to open.

- **Video Preview:** Preview designate file in verification list. Select the buttons below to play ▶, pause ||, and stop ■ the video file.

9.2 Verify Image / Video

1. Select single or multiple files for verification.
2. Click the **Verify**  button to start verification.
3. The verification result will show on watermark column. If a file was tampered with, it will show ; if a file passed verification, it will show .

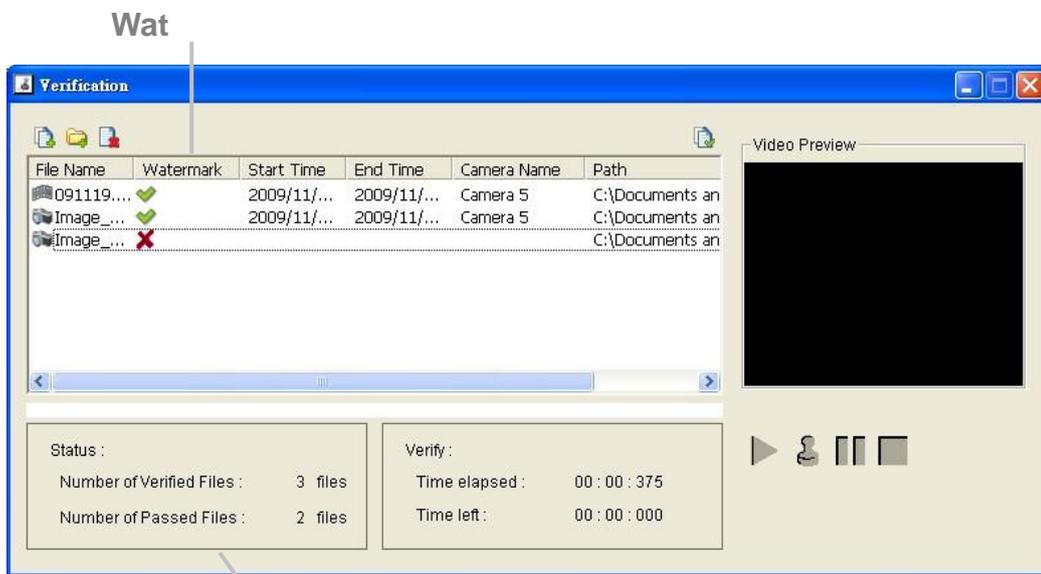

Verification report

4. The verification report will indicate the information related to the verification.

10. External Storage

Total recording space can be expanded up to 16TB by connecting DAS through eSATA port, which is a new feature for S series devices.

Important



For performance consideration, please lower the total bitrate to 40Mbps.

10.1 Create a Volume on DAS

The current compatible DAS is Promise DS4600. We don't guarantee the quality of other DAS models. Please refer to the manual of Promise DS4600 to create a single volume on DAS.

Note



We are unable to create a volume on external storage in NAS setting page, so do NOT skip this step before connecting to NAS device.

Important




External storage ONLY works when there is a volume in NAS, no matter the volume status is functional or critical. However, if the status of the only NAS volume becomes offline after using a while, the information of external storage will disappear from setting page temporarily while it's still functional.

10.2 Create an External Storage on NAS

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File System / RAID Management**.
3. Click the **RAID Status** tab, and you will find External SATA Disk display in Disk List.



4. Click **RAID & File System / File System Management**.
5. Click the ESATA icon to view the disk drive information.

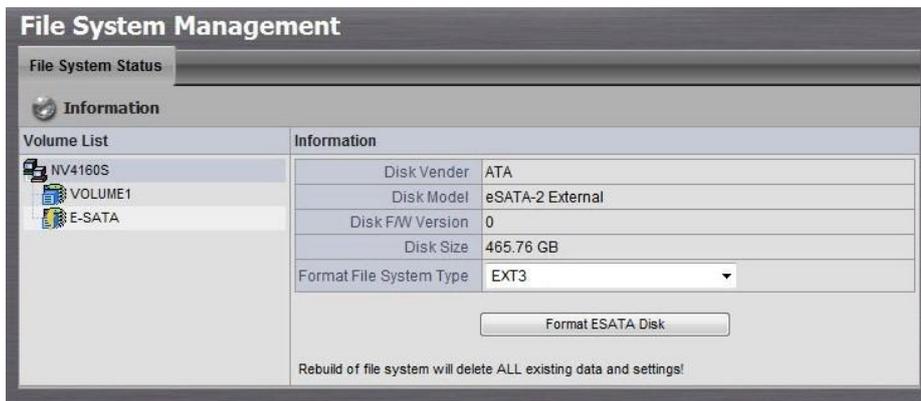

6. Click the **Format ESATA Disk** button.
7. A confirmation dialog pops up. Type "YES" into the field, and then click the **OK** button. System is starting formatting.
8. Volume is ready for recording after formatting.

Note



The recording sequence of volumes is NAS – DAS – other volume created in NAS after DAS disk mounted.

11. Log out

Click the **Logout** button on the top of the page to log out of the system. If there is no action in 10 minutes, the system will log out automatically to avoid unauthorized access.

12. Remote PC System Requirements

Remote PC Minimum Requirements		
Model	2 bay	4 bay
OS Supported	Windows XP/ 2003/ Vista/ Win7	
CPU	Intel Core 2 Duo, 2.6GHz	
RAM	1GB	
User Interface	<ol style="list-style-type: none">1. HTTP Web browser - Internet Explorer 7 or later2. Client Application Program3. Mobile Client	

13. Troubleshooting

13.1 Check the System Status LED

The system status LED reports the condition of the enclosure fan and power supply:

- **Green:** Normal
- **Amber:** There is a problem with the fan or power supply
- **Red:** The fan, power supply, or file system has failed

If your unit is configured to work with a UPS, it will continue to run for a while after a power supply failure.

13.2 Check Disk Status LEDs

The disk status LEDs report the condition of the disk drives:

- **Green:** Normal
- **Amber:** Rebuilding this disk drive
- **Red:** Failed disk drive
- **Dark:** No disk drive is installed

13.3 Replace a Failed Disk Drive

If a disk drive fails, the Disk Status LED becomes red. If the disk drive belongs to a RAID Volume, the Volume goes Critical or Offline. See **10.4 Check RAID Volume Status** for details.

Replace the failed disk drive with a new disk drive of the same or slightly greater capacity. You do not have to power down the unit.

1. Open the unit's front lid.
2. Pull out the drive carrier with the failed drive.
3. Remove the failed disk drive from the drive carrier.
4. Install a new disk drive into the carrier.
5. Place the carrier with the new disk drive back into the open slot in the

unit.

If the failed drive belonged to a RAID Volume, the RAID Volume will begin rebuilding as soon as the new drive is installed. During the rebuild, the Disk Status LED shows amber. When the rebuild is finished, the Disk Status LED turns green.

If the replacement drive is free, i.e., not assigned to a RAID Volume or as a spare, the Disk Status LED remains dark after you install the new drive.

13.4 Check RAID Volume Status

1. Click **RAID & File / RAID Management**.
2. Click the **RAID Status** tab.

13.5 Respond to a Critical RAID Volume

How the unit responds to a Critical RAID Volume depends on the RAID level of your Volume and whether you have a spare drive available:

- For a **RAID 1** Volume or a three-drive **RAID 5** Volume, if a spare drive is available, the RAID Volume begins rebuilding itself automatically.
- For **RAID 1, 5, and 10** Volumes, when no spare drive is available, you must replace the failed disk drive. The RAID Volume will begin rebuilding itself when you install the new disk drive. See **10.3 Replace a Failed Disk Drive** for details.
- **RAID 0** Volumes go offline after a disk drive failure. A **RAID 0** Volume cannot be rebuilt. All data on the Volume is lost.

13.6 Respond to an Invalid RAID Volume

The system considers a RAID Volume invalid when the RAID Volume was created by a different unit. However, the RAID Volume itself remains functional and the data on it is safe. It normally happens when a broken unit needs to be replaced, so as the recording work.

When the system does not recognize the RAID Volume, the unit displays

the RAID Volume as invalid.

Use the **Recover** function to validate the RAID Volume. The Recover tab is only active when an invalid RAID Volume is present and can be recovered.

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File / RAID Management**
3. Click the **Recover** tab.
4. On the **Recover** tab, click the option button beside the invalid RAID Volume.
5. Click the **OK** button.
6. The unit will reboot to update its configuration and recognize the RAID Volume.

Important



Running the Recover function might erase some or all of your settings. Besides backing up the recorded data before recovering, if that condition do happen, run the **Install Wizard** to set them again.

13.7 Check File System Status

Typically the first indication of a problem with the unit's file system is when your drive becomes unavailable.

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File / File System Management**.
3. Click the **File System Status** tab.
4. Look for the RAID Volume icon: . If the RAID Volume icon is Critical  (has a yellow "!"), the file system contains errors and you must rebuild the file system.

13.8 Rebuild the File System

1. Open Internet Explorer and log in to the unit.
2. Click **RAID & File / File System Management**.
3. Click the **File System Status** tab.

4. Click the **RAID Volume Critical** icon  to display the **Rebuild File System** button.
5. Click the **Rebuild File System** button.
6. In the confirmation box, type “YES” into the field provided, and then click the **OK** button.

13.9 Check Enclosure Status

1. Open Internet Explorer and log in to the unit.
2. Click **System / System Information**.
3. Click the **Enclosure Information** tab.
4. If CPU temperature is above specification:
 - Be sure there is adequate air flow around the device.
 - Be sure the ambient temperature is below 35°C (95°F).
5. Check the fan speed.
 - If the fan speed is below 1800 RPM as Smart Fan function disabled, contact Technical Support.
 - If any power status is out-of-specification, contact Technical Support.

13.10 Restore the Default Administrator's Password

If you forget the password, and want to reset the Administrator's password to the default password: **admin**, follow the following steps.

1. Verify that the system is fully booted.
2. Insert your reset tool into the reset button hole on the back of the device.
3. Press and hold the reset button for 8 seconds, until the System Status LED flashes in green.
4. The Administrator's password is now reset to **admin**.

Caution



Pressing and holding the reset button for 8 seconds will restore the default Administrator password.

13.11 Restore All Default Configuration

If you want to restore all configurations to default setting, follow the following steps.

1. Verify that the system is fully booted.
2. Insert your reset tool into the reset button hole on the back of the device.
3. Press and hold the reset button for 14 seconds, until the System Status LED keep the red light and then turn off.

Caution




All the configurations including disk volume configure will be reset. To prevent from disks being unavailable, remember backing up the recorded data before resetting.

13.12 Install ActiveX

If you cannot see the complete page of the system when using Internet Explorer, it may be because the ActiveX installation process is not completed.

1. Open Internet Explorer and log in to the unit.
2. Click the **Live view / Playback** button on the top right.
3. The browser will ask whether to install ActiveX.

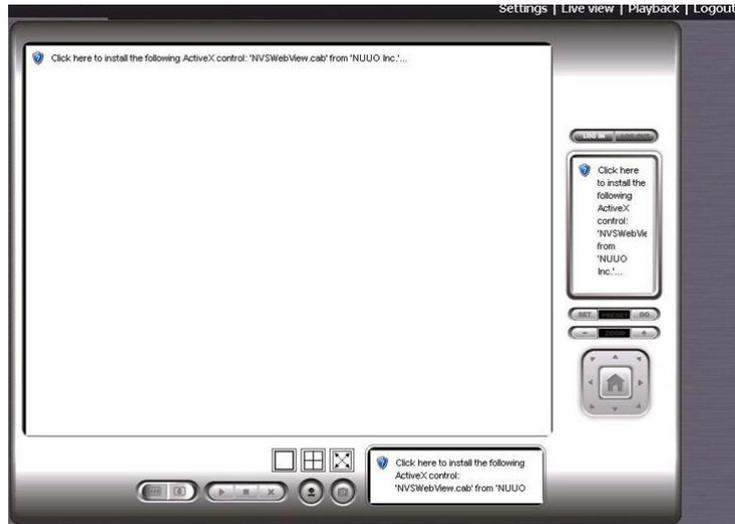


4. Click the upper bar to begin the installation process.
5. Click the **Install** button to complete the process.


13.13 Upgrade Process When Using Windows Vista

Windows Vista limits user authority, which will cause it to block any connection through Windows Explorer. In this case, you need to change Vista's settings to allow the connection.

1. Startup >Control Panel.
2. Select Administrative Tools.
3. Select Local Security Policy / Security Options.
4. Select "Network security: LAN Manager authentication level".
5. From the drop-down menu, choose "Send LM & HTLM – use NTLMv2 session security if negotiated".

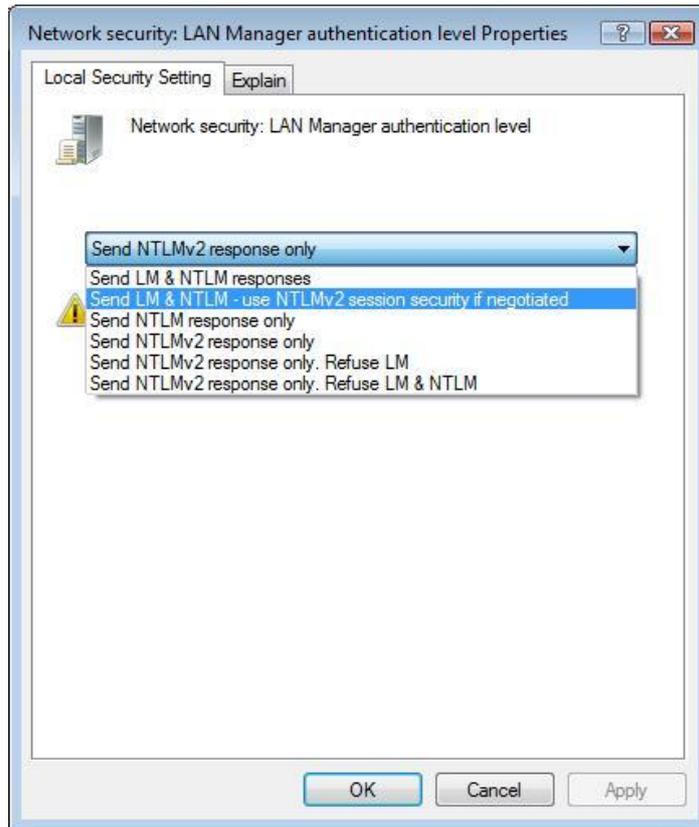

6. Find your unit through Windows Explorer (insert “\” plus the IP address of your unit).
7. Use the administrator’s ID and password to log in.
8. Put the update file into the folder “public” in your unit.
9. Open Internet Explorer and log in to the unit.
10. Click **System / System Upgrade**.
11. Click the **Firmware Upgrade** tab.

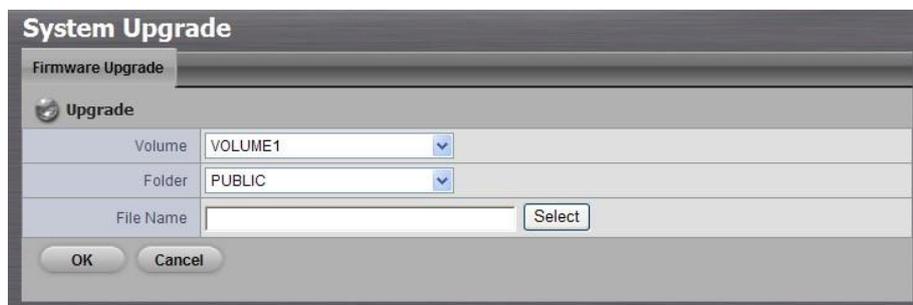

12. Choose the volume.
13. Choose the folder “public”.
14. Select upgrade file or insert the entire file name, including the

extension name.

15. Click the **OK** button.
16. The system will begin the upgrade process.
17. After upgrade, the system will reboot. You need to re-access the unit again.

13.14 Cannot Playback When Applying Windows 2000

1. Check whether you have installed Media Player or not.
2. If you have installed Media Player, check whether its version is version 9 or later.

13.15 Cannot Log in to the Unit with Internet Explorer


1. Check the settings of your antivirus software.
2. Change to appropriate settings or turn off this antivirus software.

13.16 UAC on Windows Vista


Vista has a feature called UAC (user access control) to improve the security of Microsoft Windows by limiting application software to standard user privileges until an administrator authorizes an increase in privilege level. Therefore, you will get error message when running the system while Vista UAC turned on. There are two ways to solve this problem.

13.16.1 Turn off UAC on Windows Vista


1. Go to **Control Panel** on Vista

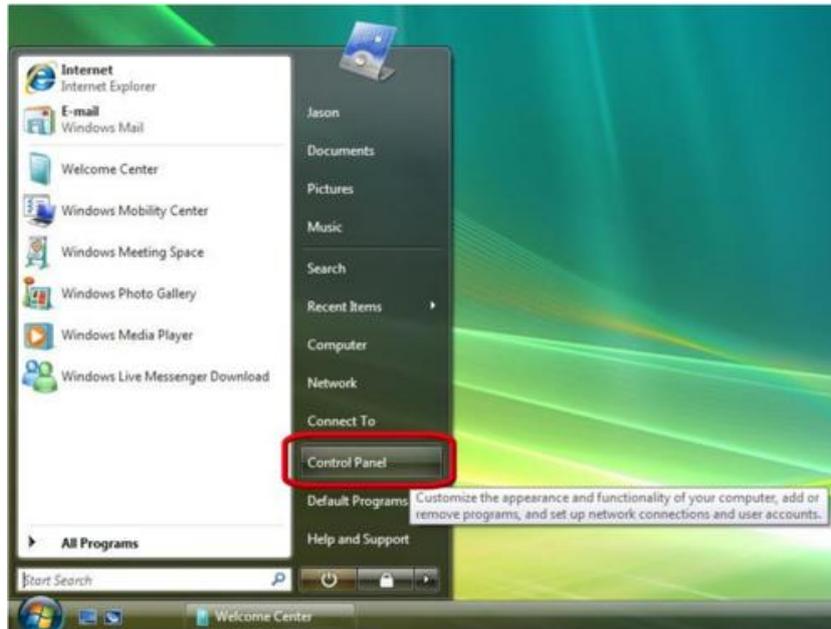


2. Click **User Accounts**

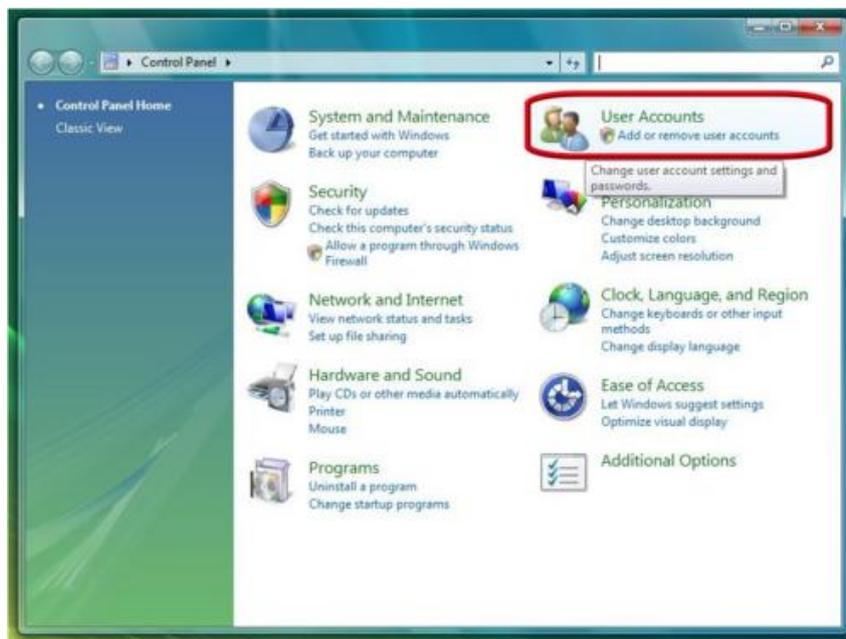


3. Click **User Accounts**

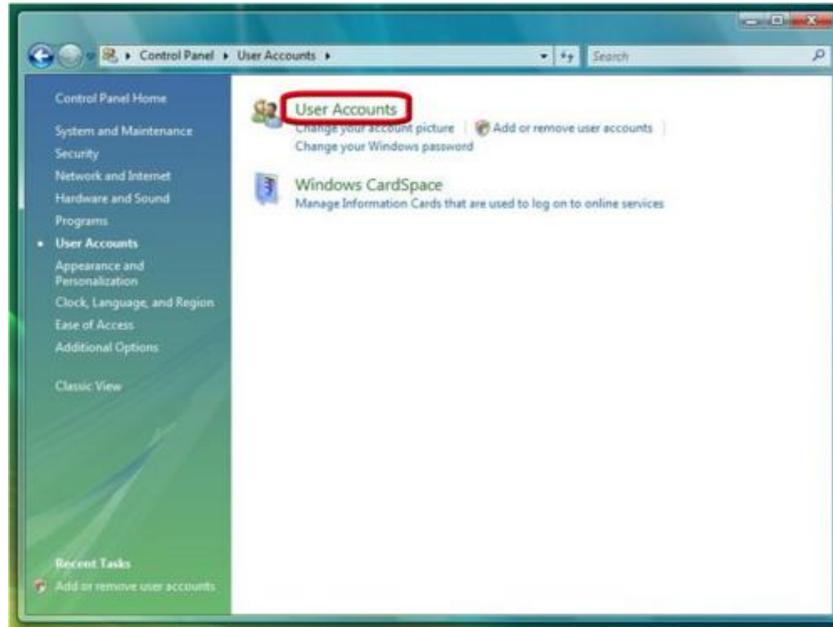

4. Click **Turn User Account Control on or off**

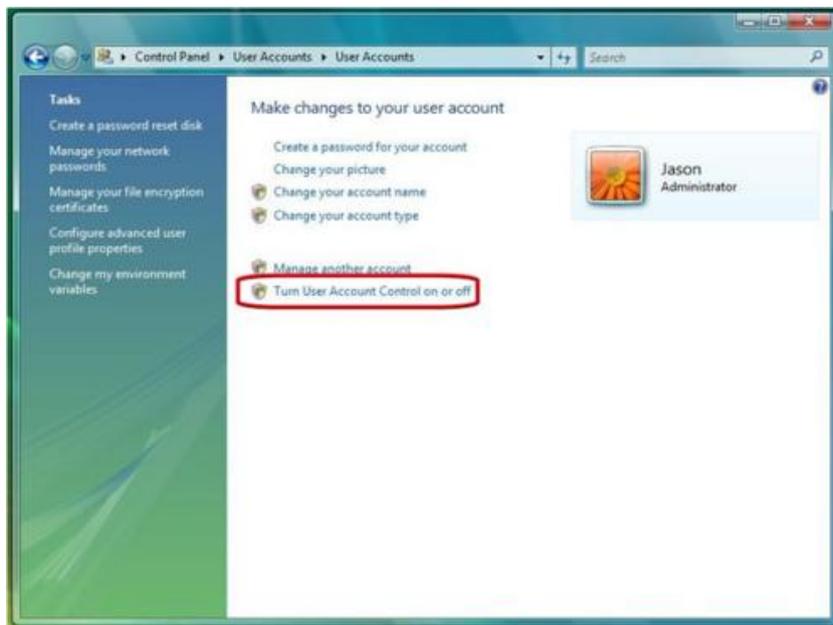


5. Click to deselect the **Turn User Account Control on or off** box to turn off UAC
6. Click **OK** and restart Windows to complete the new setting

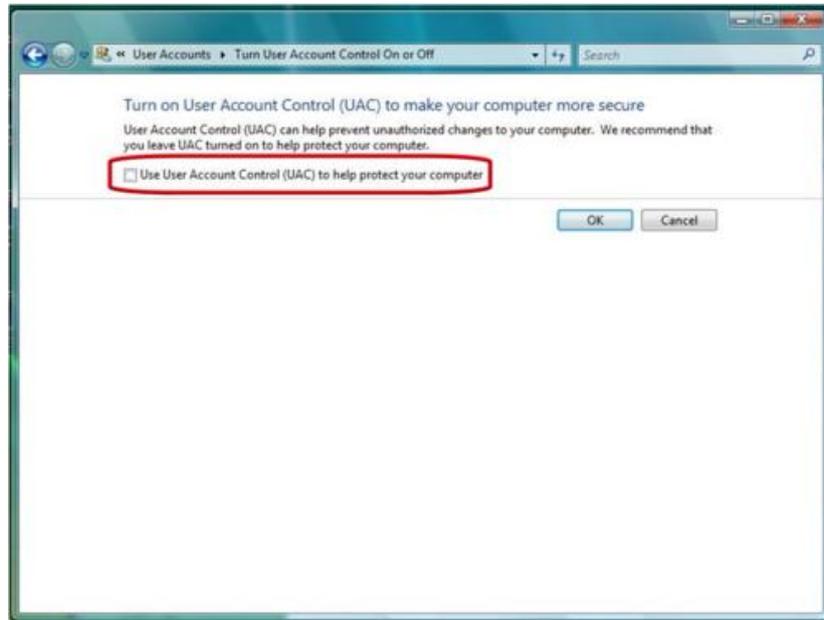

13.16.2 Enable Privilege Level of Internet Explorer

1. Go to C:\Program Files\Internet Explorer
2. Right click on iexplore.exe
3. Select "Run as administrator" and then the system will be prompted to run IE browser
4. You will be able to use the system after downloading ActiveX while Vista UAC turned on

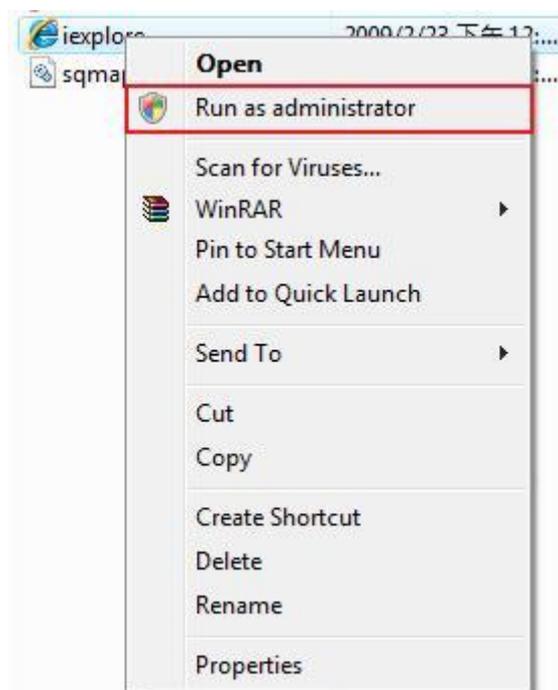

13.17 Install Wizard Issue on Windows Vista

Because of the hotfix change of Microsoft Windows Vista, users are likely unable to find any device by Install Wizard with Vista OS system. This sudden change of the dynamic ports made the impact to a lot of software providers, not only to our system. You can follow one of the solutions below.

13.17.1 FW Upgrade

For the existing customers, upgrading FW v2.0 is the permanent way to fix the issue. However, version 2.0 Install Wizard is able to search the system with FW v2.0; while version 1.3 Install Wizard is able to search the system with FW 1.3 or previous versions.

13.17.2 Workaround

If you are failed to search system with FW v1.3, please follow the steps below.

1. Conduct in command mode
netsh int ipv4 set dynamicport tcp start=10000 num=1000
and
netsh int ipv6 set dynamicport tcp start=10000 num=1000
2. Check if it's revised successfully
netsh int ipv4 show dynamicport tcp
and
netsh int ipv6 show dynamicport tcp

This workaround solution is issued by Microsoft, for eliminating the issues caused by them. <http://support.microsoft.com/kb/929851>

Note



Before conducting Install Wizard, remember to put your PC and the unit in the same LAN (the same network, no need to be through the same switch).

Please visit NUUO wiki for more information.

<http://support.nuuo.com/mediawiki/index.php/NVRmini>

Appendix – RAID System

Introduction to RAID

RAID (Redundant Array of Independent Disks) allows multiple disk drives to be combined together into a RAID Volume. You will create a RAID Volume on your unit when you perform the setup procedure.


The benefits of a RAID can include:

- Higher data transfer rates for increased server performance
- Increased overall storage capacity for a single Volume
- Data redundancy/fault tolerance for ensuring continuous system operation in the event of a disk drive failure

Different RAID levels use different organizational models and have varying benefits. The following outline breaks down the properties for each RAID level supported on this unit:

RAID 0 – Stripe

When a RAID Volume is striped, the read and write blocks of data are interleaved between the sectors of multiple disk drives. Performance is increased, since the workload is balanced between drives or “members” that form the RAID Volume. Identical drives are recommended for performance as well as data storage efficiency.

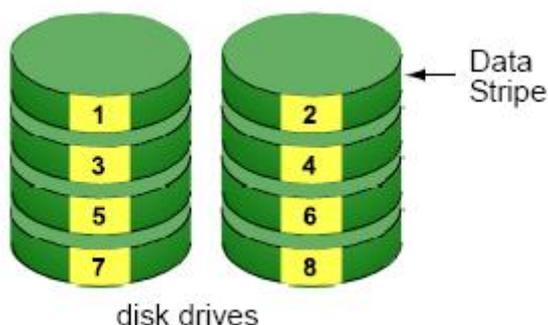

The RAID Volume’s data capacity equals the capacity of the smallest disk drive times the number of disk drives. For example, one 100 GB and three

120 GB drives will form a 400 GB (4 x 100 GB) RAID Volume instead of 460 GB.

If disk drives of different capacities are used, there will also be unused capacity on the larger drives.

Because RAID 0 does not offer Fault Tolerance, meaning that you cannot recover your data after a disk drive failure, we do not recommend a RAID 0 Volume for your unit.

RAID 0 Volumes on this unit consist of one or more disk drives.

RAID 1 – Mirror

When a RAID Volume is mirrored, identical data is written to a pair of disk drives, while reads are performed in parallel. The reads are performed using elevator seek and load balancing techniques where the workload is distributed in the most efficient manner. Whichever drive is not busy and is positioned closer to the data will be accessed first.

With RAID 1, if one disk drive fails or has errors, the other mirrored disk drive continues to function. This is called Fault Tolerance. Moreover, if a spare disk drive is present, the spare drive will be used as the replacement drive and data will begin to be mirrored to it from the remaining good drive.



The RAID Volume's data capacity equals the smaller disk drive. For example, a 100 GB disk drive and a 120 GB disk drive have a combined

capacity of 100 GB in a mirrored RAID Volume.


If disk drives of different capacities are used, there will also be unused capacity on the larger drive.

RAID 1 Volumes on this unit consist of two disk drives.

If you want a mirrored RAID Volume with more than two disk drives, see **RAID 10 – Mirror / Stripe** for details.

RAID 5 – Block Striping with Distributed Parity

RAID 5 organizes block data and parity data across the disk drives. Generally, RAID level 5 tends to exhibit lower random write performance due to the heavy workload of parity recalculation for each I/O. RAID 5 works well for file, database, application and web servers.

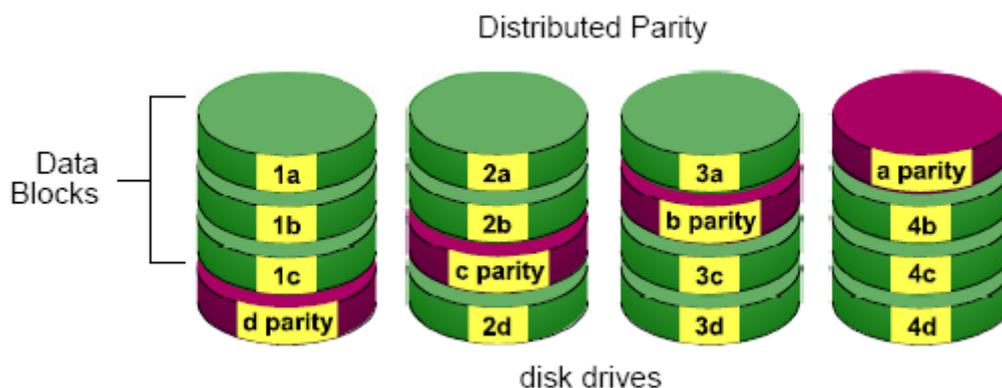


The capacity of a RAID 5 Volume equals the smallest disk drive times the number of disk drives, minus one. Hence, a RAID 5 Volume with four 100 GB disk drives will have a capacity of 300 GB. A RAID Volume with two 120 GB disk drives and one 100 GB disk drive will have a capacity of 200 GB.

RAID 5 is generally considered to be the most versatile RAID level.

RAID 5 requires a minimum of three disk drives.

RAID 10 – Mirror / Stripe

Mirror/Stripe combines both of the RAID 0 and RAID 1 types. RAID 10 can increase performance by reading and writing data in parallel while protecting data with duplication. At least four disk drives are needed for RAID 10 to be installed. With a four-disk-drive RAID Volume, one drive pair is mirrored together then striped over a second drive pair.

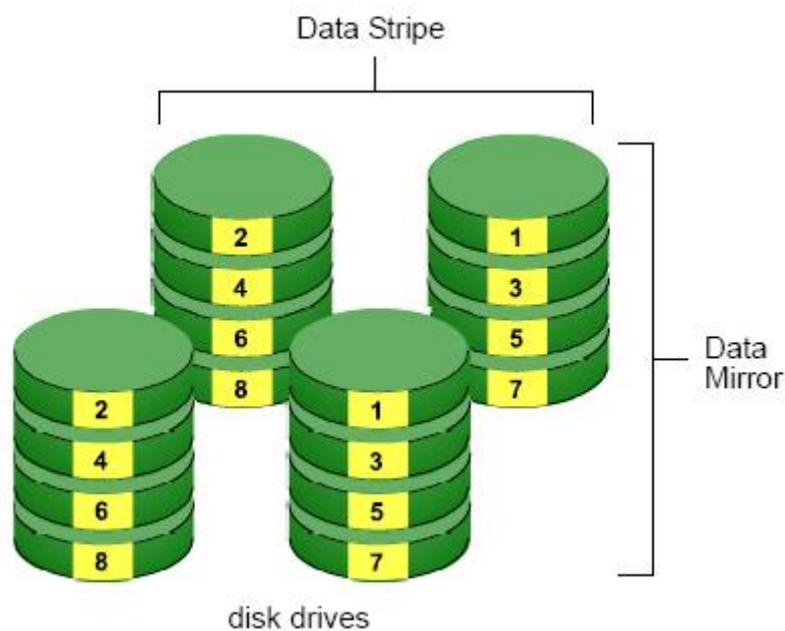

The data capacity RAID 10 Volume equals the capacity of the smallest disk drive times the number of disk drives, divided by two.

In some cases, RAID 10 offers double fault tolerance, depending on which disk drives fail.

RAID 10 Volumes on this unit consist of four disk drives.

Because all of the available disk drives are used for the RAID Volume, you cannot set up a spare drive with RAID 10.

Choosing a RAID Level

There are several issues to consider when choosing the RAID level. The

following summarizes some advantages, disadvantages and applications for each choice.

- **RAID 0**

Advantage	Disadvantage
<ul style="list-style-type: none"> ● Implements a striped disk RAID Volume, the data is broken down into blocks and each block is written to a separate disk drive ● I/O performance is greatly improved by spreading the I/O load across many channels and drives ● No parity calculation overhead is involved 	<ul style="list-style-type: none"> ● Not a true RAID because it is not fault tolerant ● The failure of just one drive will result in all data in a RAID Volume being lost ● Should not be used in mission critical environments

- **RAID 1**

Advantage	Disadvantage
<ul style="list-style-type: none"> ● Simplest RAID storage subsystem design ● Can increase read performance by processing data requests in parallel since the same data resides on two different drives 	<ul style="list-style-type: none"> ● Very high disk overhead - uses only 50% of total capacity

- **RAID 5**

Advantage	Disadvantage
<ul style="list-style-type: none"> ● High Read data transaction rate ● Medium Write data transaction rate ● Good aggregate transfer rate ● Most versatile RAID level 	<ul style="list-style-type: none"> ● Disk failure has a medium impact on throughput

- **RAID 10**

Advantage	Disadvantage
<ul style="list-style-type: none"> ● Implemented as a mirrored RAID ● Volume whose segments are RAID 0 RAID Volumes ● High I/O rates are achieved thanks to multiple stripe segments 	<ul style="list-style-type: none"> ● Very high disk overhead – uses only 50% of total capacity

Spare Drives

A spare is a disk drive that has been designated to replace a failed disk drive in a RAID Volume. In the event of the failure of a disk drive within a RAID 1 or three-drive RAID 5 Volume, the spare drive is activated as a member of the RAID Volume to replace a disk drive that has failed.

A spare drive cannot replace the failed drive in a RAID 0 Volume because of the way in which data is written to the disk drives under RAID 0.

A spare drive is not available for a RAID 10 Volume because RAID 10 requires all four disk drives in the unit enclosure. However, when you replace the failed disk drive, the unit will automatically rebuild the RAID Volume using the new disk drive.

You must designate a disk drive as a Spare. Use the system to designate the Free disk drive as a Spare.

Maintaining a spare drive is a good precaution to protect your RAID Volume integrity in the event of disk drive failure.

Automatic Rebuilding

When a disk drive in your RAID 1, 5, or 10 Volume fails, and a replacement disk drive becomes available, the RAID Volume will rebuild itself to the new disk drive automatically.

For RAID 1 and three-drive RAID 5 Volumes, you can designate a spare drive. If a spare drive is present when the RAID Volume experiences a disk drive failure, the rebuild will start automatically using the spare drive.

For RAID 1, RAID 5, and RAID 10 Volumes without a spare drive, the RAID Volume will begin to rebuild itself automatically when you remove the failed disk drive and install a new disk drive.

A RAID 0 Volume cannot be rebuilt because of the way in which data is written to the disk drives under RAID 0. Even if there is a designated spare

drive, rebuilding is not possible for RAID 0 Volumes.

RAID Volume Migration

Migration is the process of:

1. Changing the RAID level
2. Adding disk drives but keeping the same RAID level

In the migration process, the existing RAID Volume is called the Source. The proposed RAID Volume is called the Target. Each target RAID Volume has certain requirements and they are different for each RAID level. You must meet all of the requirements in order to successfully migrate a RAID Volume.

In most cases, you must add one or more disk drives during the migration process. You can never reduce the number of disk drives.

While the migration is running, you can still access the folders on your RAID Volume and the data they contain.

The following tables show the migration options for a source RAID Volume according to its RAID level. The available target RAID levels are shown with their requirements.

- **RAID 0**

A RAID 0 source Volume can migrate to the following target RAID levels:

Target	Requirement
RAID 0	Add disk drives.
RAID 1	2 disk drives minimum. A 1-drive RAID 0 can't migrate to RAID 1. To do this, add 1 disk drive.
RAID 5	3 disk drives minimum. At least 1 more disk drive than the RAID 0 RAID Volume.

- **RAID 1**

A RAID 1 source Volume can migrate to the following target RAID levels:

Target	Requirement
RAID 0	Can use same number of disk drives.
RAID 5	3 disk drives minimum. At least 1 more disk drive than the RAID 1 RAID Volume.

- **RAID 5**

A RAID 5 source Volume can migrate to the following target RAID levels:

Target	Requirement
RAID 0	Can use the same number of disk drives.
RAID 5	Add a disk drive.

- **RAID 10**

A RAID 10 source Volume cannot migrate or add more disk drives.

Appendix – Camera Integration

Camera Supporting List

Refer to NUUO website: <http://www.nuuo.com/download.php?node=554>

Camera Search Tool

ACTi

Arecont

Sony

Stream Profile

Stream profile is designed for mobile client and lower fps live stream display.

For performance consideration, we fix the resolution and framerate for each brand/series. The list will be updated every version.

Brand/Series	Cameras	Low Profile		Minimum Profile	
		Resolution	Framerate	Resolution	Framerate
ACTi		CIF	3~6	CIF	1~2
Arecont		half	3	half	1
Axis		CIF	5	QCIF	5
Brickcom		CIF	10	CIF	4
CNB	IGx10xx, ixP40xx ixP4000xx	CIF~SXGA	0.1~10	CIF~SXGA	0.1~10
CNB	INS2000/IBxxxx/Xpeed IP	QVGA~D1	0.1~10	QVGA~D1	0.1~10
CNB	IGx2050F, IDC4050xx, IXC8050IR, IVC5050xx,IVP5055xx, IDP5055xx,IXP3055VR	QVGA~D1	0.1~10	QVGA~D1	0.1~10
Dahua (Others)		CIF	5	CIF	2
Dahua	HF3211P	D1~1080p	0.1~10	D1~1080p	0.1~10
Dynacolor		QCIF~Full HD	0.1~10	QCIF~Full HD	0.1~10
Eneo	GLS-1701/IR	QCIF~Full D1	0.1~10	QCIF~Full D1	0.1~10
Eneo	GLS-2104	QCIF~Half D1	0.1~10	QCIF~Half D1	0.1~10
Eneo	GLS-2301H	CIF~Full D1	0.1~10	CIF~Full D1	0.1~10
Eneo	NLC-1401, NLD-1401, NLS-1401	CIF	5	CIF	2
Eneo	NXC-1301M, NXC-1302M, NXC-1401M, NXC-1402M,	CIF	15	CIF	5

	NXD-1301M, NXD-1302M, NXD-1401M, NXD-1402M				
Fine		CIF	1~3	CIF	0.1~1.5
Forenix		CIF	1~3	CIF	0.1~0.5
Grundig		QCIF~FullHD	0.1~10	QCIF~FullHD	0.1~10
Honeywell		640x368	15	640x368	5
Mobotix		CIF	3	QCIF	2
NetworkCamera		CIF	10	CIF	4
Panasonic BB/BL		CIF	4	QCIF	2
Panasonic i-pro 3 megapixel		VGA	1	VGA	0.5
Panasonic i-pro others		CIF	2	CIF	1
Pelco		CIF~D1	0.1~10	CIF~D1	0.1~10
Samsung	SNB-1000, SNB-5000, SND-1010, SND-5080/F, SNO-5080R, SNP-3120/V/VH, SNP-3430H, SNP-5200, SNP-5200H, SNV-5080, SNV-5080R, SPE-100	CIF	6	CIF	2
Samsung	SNP-3301, SNP-3370	CIF	0.1~10	CIF	0.1~10
Samsung	SNV-3120, SNB-7000, SND-7080, SNV-5010, SNZ-5200	QCIF~FullHD	0.1~10	QCIF~FullHD	0.1~10
Samsung	SNV-7080, SNV-7080R	CIF~SXGA	0.1~10	CIF~SXGA	0.1~10
SANTEC (D1)		VGA	1~3	VGA	0.3~0.8
SANTEC (1.3 Mega)		VGA~D1	1~3	VGA~D1	0.3~0.8
SANTEC (3 Mega)		VGA~3M	1~3	VGA~3M	0.3~0.8
SANTEC (video server)		VGA~D1	1~3	VGA~D1	0.3~0.8
Sanyo HD1, HD3, HD4	HD1: VCC-HD2500, VDC-HD3500 HD3: VCC-HD5400, VCC-HD5600 HD4: VCC-HD4600	CIF~VGA	3	CIF~VGA	1
Sanyo HD2	HD2: VCC-HD2100, VCC-HD2300, VDC-HD3100,	CIF~4 Mega	0.1~3	CIF~4 Mega	0.1~3

	VDC-HD3300				
Sony		QCIF~Full HD	0.1~10	QCIF~Full HD	0.1~10
StarDot		CIF	3	CIF	1
TRUEN		CIF~Full D1	0.1~10	CIF~Full D1	0.1~10
UDP		QVGA~VGA	0.1~10	QVAG~VGA	0.1~10
Vidosec	IBF-211, IDA-210, IP-206M, IS-240	QVGA	5	QQVGA	5
Vidosec	ICS-13, ICS-20F, ID-20	CIF~Full HD	0.1 ~ 10	CIF~Full HD	0.1 ~ 10
Vista Model C	VK2-1080VRD, VK2-2MPVRD	QVGA~4CIF	5~15	QVGA~4CIF	2~15
Vista Model A	VK2-540VRD, VK2-600PTZ, VK2-VGAVFD	CIF	5	CIF	2
Vivotek 7000v2/8000 (General)		CIF	5	CIF	2
Vivotek 7000v2/8000 (2 Mega)		CIF	3	QCIF	3
Vivotek 8000 (VS series)		QCIF~D1	0.1~10	QCIF~D1	0.1~10
Vivotek 8000	IP8330, IP8332, IP8352	CIF	3	CIF	1
Vivotek 8000	IP8362	CIF	5	CIF	3
Vivotek	FD8162, FD8362, FD8362E, IP8162, MD8562	CIF	8	QCIF	6
Vivotek	SD8362E	CIF	6	QCIF	6
Vivotek	IP8331, MD7530, MD7560X, PZ81x1, PZ81x1W, SD8313E, SD8312E, SD8311E	CIF	3	QCIF	3
Zavio		CIF	5	QCIF	3
Zavio (Mega)		CIF	7	CIF	2
Zavio (2 Mega)	F7210	640x480	4	640x480	1.3

Add: C Block, 18 Sihyuan St. Jhongjheng District, Taiwan (ROC)

TEL: +886-2-2362-2260

E-mail: service@nuuo.com