

How to replace SATA cards on CT-8000R/RP

1. Open the metallic case:


a) Perform a normal shutdown and make sure the power LED light if turned off.



b) Unplug power cord


For CT-8000R

Turn the power switch into the "O" position and unplug the power cord.

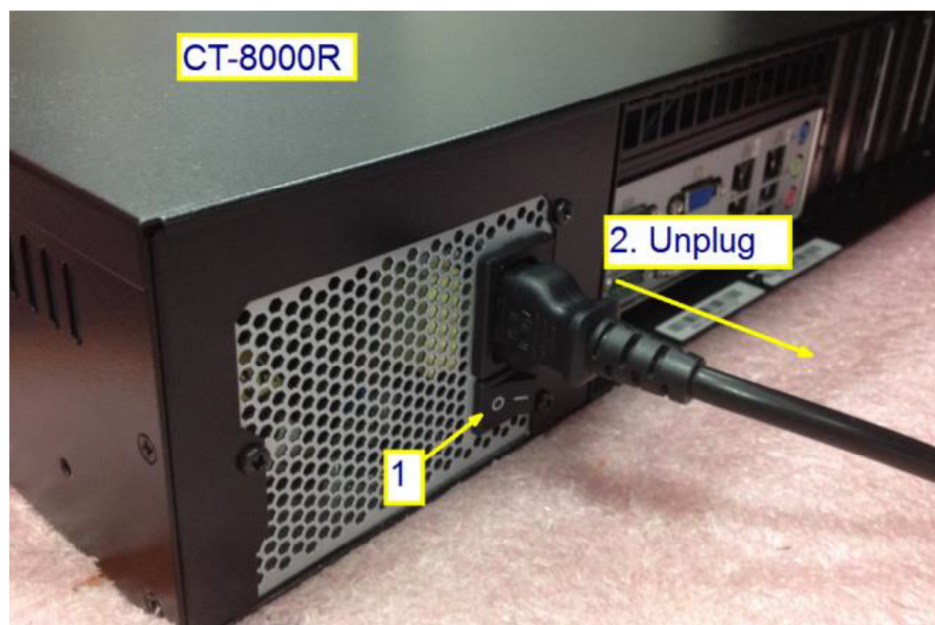

For CT-8000RP

Make sure the power supply LED is off, then unplug the power cord.

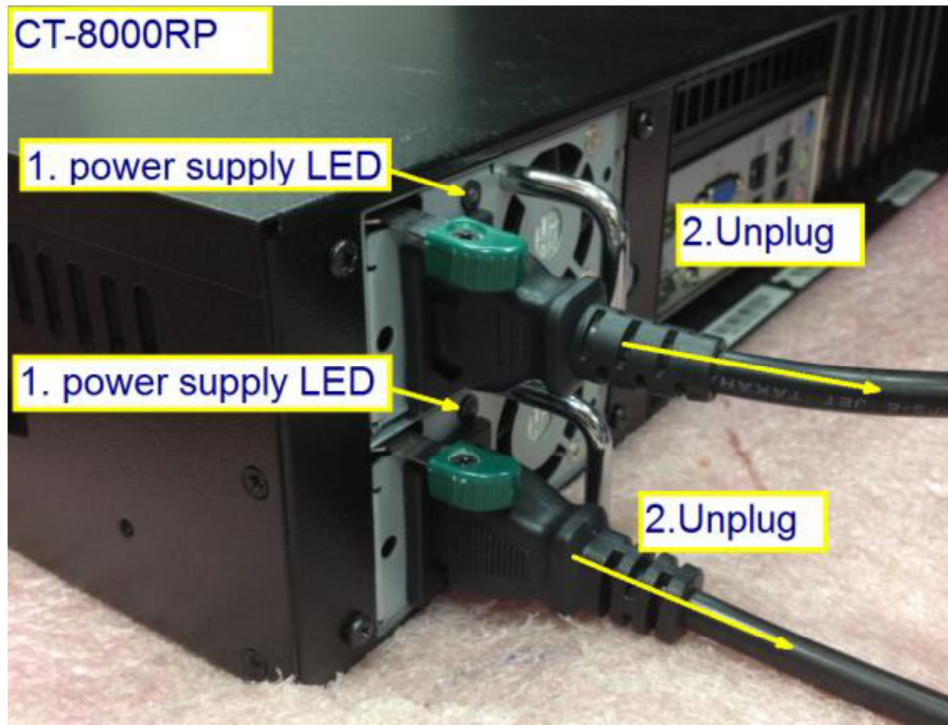

c) With the help of a screwdriver, remove the screws on the left and the right side:




d) Remove the top cover:

Press down firmly and pull backwards to open the case.



e) Remove the SATA cables and screws from the bracket.


The SATA cables must be unplugged **vertically** in order to avoid damage.
Then remove the screws from the bracket.

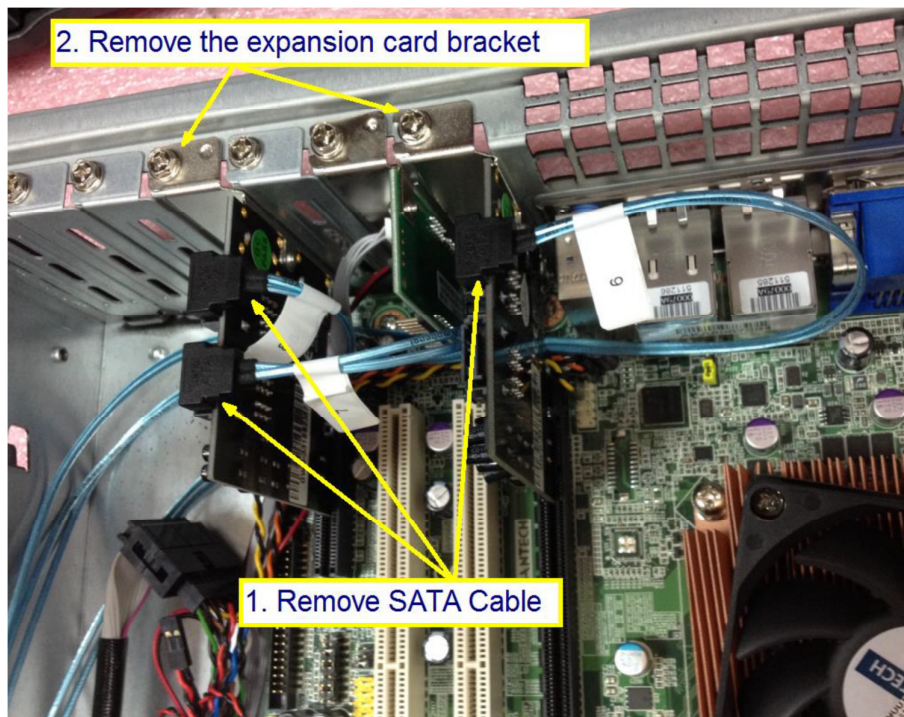

2. SATA Card Replacement

There are two versions of SATA cards.

- a) Old version (two cards, 1 SATA card and 1 e-SATA card)

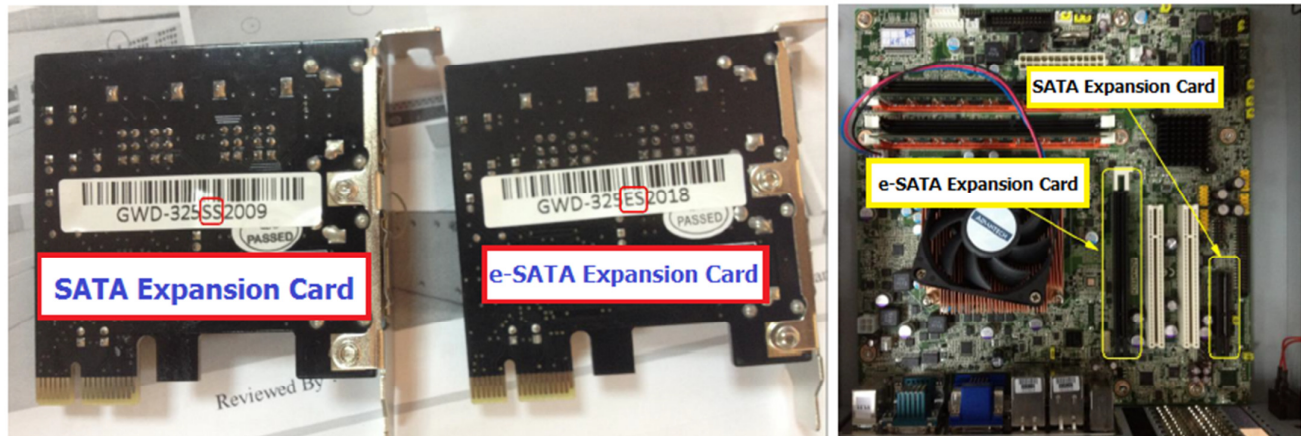


- b) New version (only one card)




2a) Installation of old version of SATA Cards

For installation of the old version of SATA cards, please follow these instructions:

Please make the connections of the cables, as it is shown in the following image:

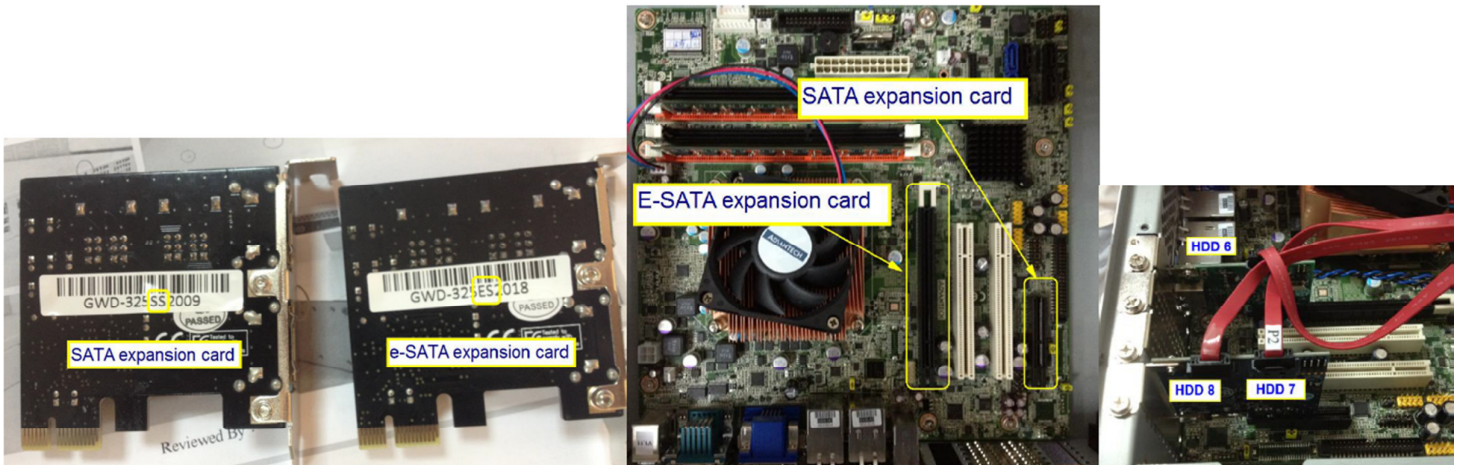

Please insert the new SATA card into the SATA expansion bracket and make all connections of the cables, as it is shown in the following image:

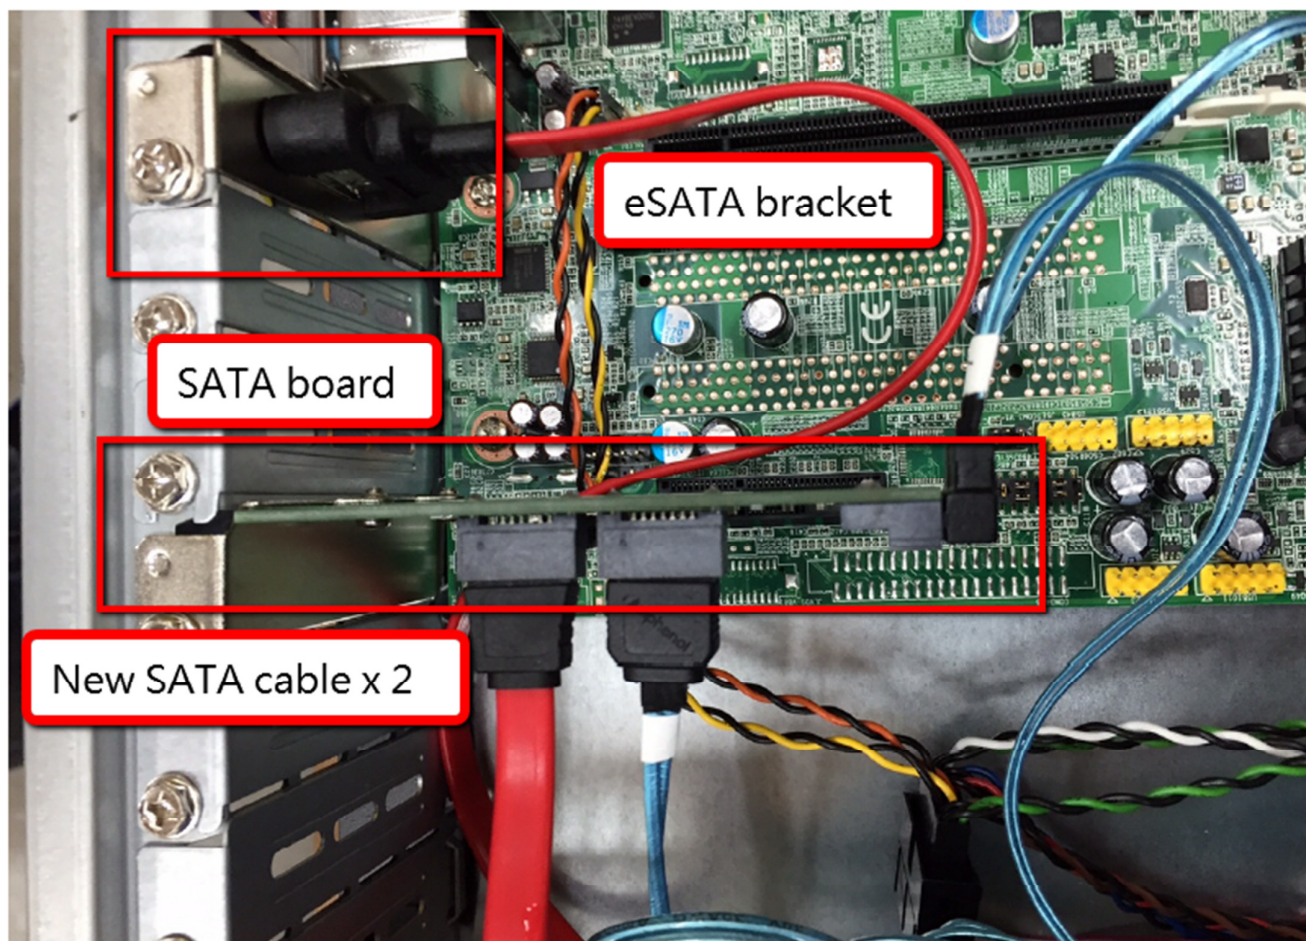

3. Close the metallic case:

Put the top cover back to its original place and lock the screws with the help of a screwdriver.



NUUO Inc. (Taiwan Headquarters)

B1, No.207-1, Sec. 3, Beixin Rd., Xindian Dist., New Taipei City
231, Taiwan
Tel : +886-2-7739-2260 Fax : +886-2-7703-3377

NUUO US Inc.

690 N. Berry Street, Suite B, Brea, California 92821, USA
Toll Free: +1-877-241-7035 Fax: +1-714-990-1689

NUUO South Africa Office

Fancourt Office Park, Building 7, 1st Floor Right., Cnr
Felstead & Northumberland, Northriding, South Africa
Tel: +27-11-704-6845